



## IMPORTANT SAFEGUARDS

**WARNING:** RISK OF ELECTRIC SHOCK- NEVER CONNECT TO, DISCONNECT FROM, OR SERVICE WHILE EQUIPMENT IS ENERGIZED.

**WARNING:** FAILURE TO FOLLOW THESE INSTRUCTIONS AND WARNINGS MAY RESULT IN DEATH, SERIOUS INJURY OR SIGNIFICANT PROPERTY DAMAGE.

For your protection, read and follow these warnings and instructions carefully before installing or maintaining this equipment. These instructions do not attempt to cover all installation and maintenance situations.

### READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. Do not use outdoors.
2. Do not let power supply cords touch hot surfaces.
3. Do not mount near gas or electrical heaters.
4. Equipment should be mounted in locations at heights where it will not readily be subjected to tampering by unauthorized personnel.
5. Use caution when servicing batteries - when applicable. Battery acid can cause burns to skin and eyes. If acid is spilled on skin or eyes, flush acid with fresh water and contact a physician immediately.
6. The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition. Any modification or use of non-original components will void the warranty and product liability.
7. Do not use this equipment for other than intended use.
8. Servicing of this equipment should be performed by qualified service personnel only.
9. Disconnect AC power supply before servicing.
10. Unpack and check for concealed transit damage.
11. Report any transit damage to delivering carrier and file a claim.

**WARNING:** MAKE SURE THAT POWER IS OFF BEFORE MAKING ANY ELECTRICAL CONNECTIONS!


### INSTALLATION

#### WIRING DIAGRAMS:


- WHITE: Return for 120VAC - 347VAC wiring
- ORANGE: Hot lead for 120VAC - 347VAC wiring
- GREEN: Equipment ground

1. Make sure that all wires are carefully tucked away
2. Plug the mating connector of the battery to the PC board-when applicable
3. Unused wires must be capped using enclosed wire nuts.

#### BATTERY BACKUP/SDT:


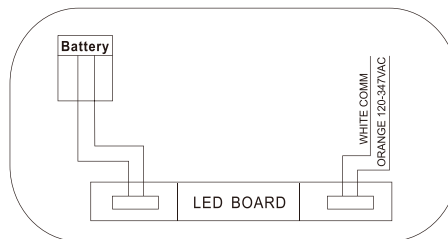


#### AC+DC

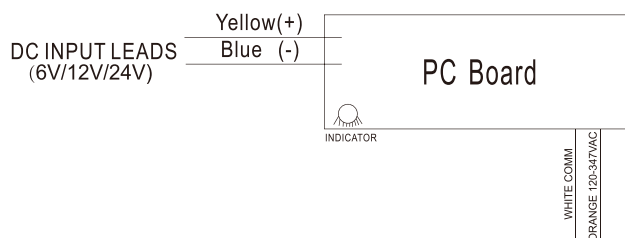

## CANOPY MOUNTING (Top or Side-end mount):

1. Unscrew the face panel cover from the side of the unit and slide the panel out.
2. Knock out the circular and rectangular hole covers on the top or the side of the sign. Align with the circular hole, one of the nuts from threaded stem rod provided, just inside of the unit.
3. Feed the AC supply and ground wire through the nut & hole and out of the sign housing.
4. Secure the canopy J-Box cover to the mount area of the exit sign by inserting it in the rectangular hole and shifting it over to align with the circular hole
5. Feed AC supply wires through threaded stem and screw stem into nut inside unit. Screw the other nut to the threaded stem on the outer side of the unit and tighten securely to complete the mounting of the canopy to the exit sign.
6. Determine the position the exit needs to be mounted (the way the face needs to be pointed). Use the included round J-Box as described in the wiring diagrams section of this instruction.
7. Make connection with the AC supply wires in the J-Box as described in the wiring diagrams section of this instruction.
8. Now mount the sign to the J-Box plate with the screws provided and tighten securely.
9. Attach the battery jumper wire (for battery backup unit) to PC board and replace face panel back on unit (use the appropriate face panel).
10. Screw the face panel cover to the housing to complete installation.

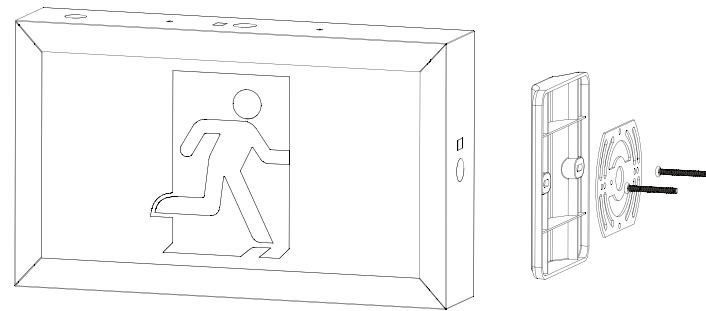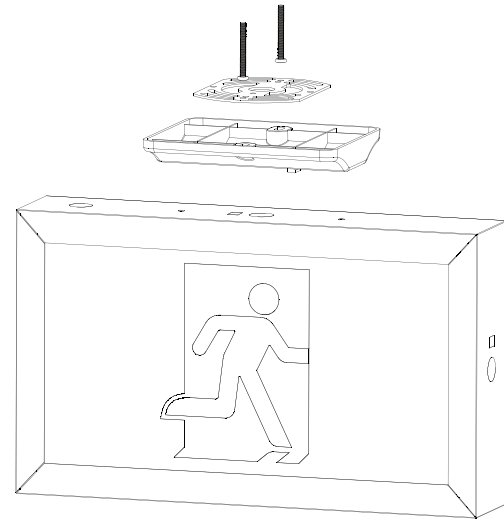

## FLUSH MOUNTING

11. Unscrew the face panel cover from the side of the unit and slide the panel out.
12. Remove the center KO and also required KOs on the back plate that will match the J-Box.
13. Route the wires through the center knock-out. Make electrical connections inside the junction box as described in the wiring diagrams section of this instruction sheet. Push wires back against the back of the sign to minimize any of the wires interfering with the illumination of the letters.
14. Now mount the sign to the J-Box using screws provided.
15. Attach battery jumper wire (for battery backup unit) to PC board and replace face panel back on the unit (use the appropriate face panel).
16. Screw the face panel cover to the housing to complete installation

**NOTE:** To convert a single face sign into a double face, unscrew the face panel cover and slide back plate out. Replace with the appropriate face panel and screw the cover back to the housing to complete installation.

## INSTRUCTION FOR SELF-DIAGNOSTIC TEST:

### 1. Introduction

Once the unit is properly installed according to the installation instructions and AC power is supplied, the EXIT will come ON. The dual-color LED indicator will also come ON, automatically initiating the self-diagnostic test function. The LED indicator points out the current unit status. A STEADY GREEN on the LED indicator indicates a normal service; BLINKING GREEN indicates that the unit is in testing mode, GREEN/RED FLASHING indicates the battery is charging; RED (STEADY and BLINKING) would indicate a fault or a service alert. Refer to section 3 - Fault Indication for more details. The LED indicator would be OFF when the unit is in Emergency mode.

### 2. Self - Diagnostic Service

The self-diagnostic function is factory preset without any field adjustment. The automatic self-diagnostic feature serves the following tests -

### 3. Fault identification

- a. On-line real time monitoring of battery and LED(s): Identifies battery charging, disconnection and failure along with LED failures.
- b. Self-testing and a 30-second discharge once every 30 days (conforming to NFPA code requirements), after AC power has been supplied for a minimum of 24 hours.
- c. Self-testing and a 30-minute discharge once every 180 days, after AC power has been supplied for a minimum of 24 hours.
- d. Self-testing and a 90-minute discharge once every 365 days (conforming to NFPA code requirements), after AC power has been supplied for a minimum of 24 hours.

FAULT DESCRIPTION	LED INDICATION
Battery disconnection	STEADY Red
Battery recharge failure	FLASHING Red
Battery failure	Red BLINKNG '2' times
LED failure	Red BLINKING '3' times

\*A battery recharge failure is more likely seen after a monthly or annual auto-discharge

\*\* A battery failure is more likely seen when the unit goes into a monthly/annual discharge test and/or fails to run the LED strip for the designated amount of time in Test/Emergency mode

### 4. Manual Testing

This unit also provides for manual testing by pushing the test switch in a specific pattern. The different patterns and the resulting tests are listed in the table below.

ACTION	REACTION AND LED INDICATION
Push test button Once (within 2 seconds)	30-second test: FLASHING Green
Push test button Twice (within 2 seconds)	30-minute test; Green BLINKING '2' times
Push test button Thrice (within 2 seconds)	90-minute test; Green BLINKING '3' times
Push and Hold test button (for 3-5 seconds)	Interruption
Push and Hold test button (for more than 6 seconds)	System reset

### 5. Operation

During an electrical power failure, the LED strip will transfer into Emergency mode and stay LIT for a minimum of 120 minutes. To test this unit, the battery needs to be charged initially for 24 hours before depressing the test switch (to do manual test). On pressing the test switch, the LED strip will transfer to a SIMULATED Emergency mode with the LED indicator FLASHING/BLINKING Green. The LEDs will turn OFF after 30 seconds/30minutes/90 minutes respectively.



**RECYCLING INFORMATION**

All steel, aluminum and thermoplastic parts  
are recyclable.  
All cartons contain recycled materials.

603806

# Current

**Current Lighting Solutions, LLC**

701 Millennium Blvd.  
Greenville, SC 29607

**[currentlighting.com/compass](http://currentlighting.com/compass)**

© 2022 HLI Solutions, Inc. All rights reserved. Information and specifications subject to change without notice. All values are design or typical values when measured under laboratory conditions.

Rev 06/08/22

603806\_com\_rme\_inst\_16\_R01

---