


# PicoEmitter™ Installation Instructions AE17/AE21, BE17/BE21

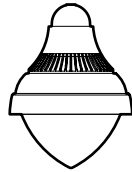

AE17/AE21



BE17/BE21



**WARNING:** Fixtures must be grounded in accordance with local codes or the National Electrical Code. Failure to do so may result in serious personal injury.



Make certain electricity is **off** before beginning maintenance procedures

1. For opening and closing of the fixture, refer to instructions and diagrams on other side of sheet.
2. A regularly scheduled maintenance program should be established to retain optimum light output and reduce heat retention. Dusting with a soft, clean, dry cloth is normally sufficient for the optics.

**Do not use alkaline or acid cleaners on reflector surfaces.**


**NOTE:** All wiring must be done by a qualified electrician.

**KEEP THIS SHEET FOR FUTURE REFERENCE.**

**Tools Required:**  Flat Blade Screwdriver  Torque Wrench

**For: AE17, BE17** –  9/16" 6 or 12 Point Deep (2" min) Socket  12" (min) Long Socket Extension

**For: AE21, BE21** –  3/4" 6 or 12 Point Deep (2" min) Socket  20" (min) Long Socket Extension

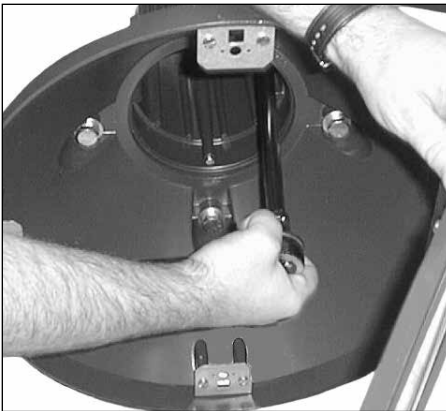

1. Install fixture to arm with lock washers & nuts Tighten to 20 ft-lbs. Make sure fixture aligns with arm. with "hinge" side of fixture towards pole.



2. Connect incoming quick-disconnect to electronic driver and install driver tray through key-holes onto screws, tighten securely.



3. Hang EmitterDeck® in desired orientation.


## WARRANTY

- 5 year warranty
- See [HLI Standard Warranty](#) for additional information


# PicoEmitter™ Installation Instructions AE17/AE21, BE17/BE21



4. Orient ¼ turn faster by moving it to the position opposite the hinge.

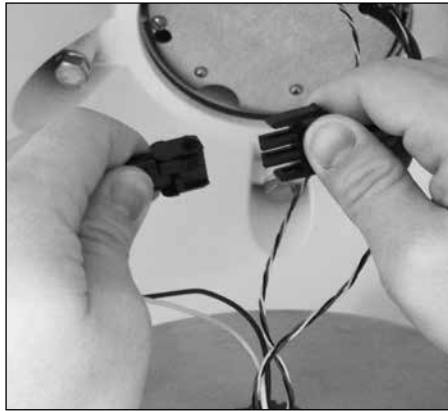

5. Connect quick-disconnect from driver assembly to EmitterDeck.

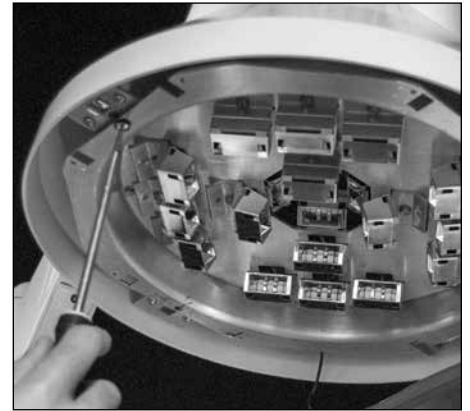


6. Secure EmitterDeck with ¼ turn fastener.

## 0-10V Dimming



7. Push up on lens frame while tightening screw to secure lens frame.

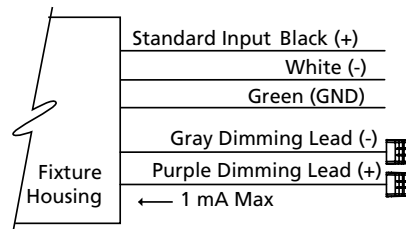

Driver has 0-10V dimming with 10-100% range.