


17760 ROWLAND ST. Tel(626)968-5666 CITY OF INDUSTRY Fax(626)968-5716 CALIFORNIA 91748 www.currentlighting.com/aal


72 LED Upgrade Kit Installation Guide Fixture: PRM2 - Promenade 72LED

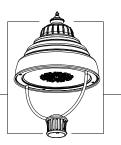


WARNING: Fixtures must be grounded in accordance with local codes or the National Electrical Code. Failure to do so may result in serious personal injury.

MAINTENANCE: A regularly scheduled maintenance program should be established to retain optimum light output and reduce heat retention. Dusting with a soft, clean, dry cloth is normally sufficient for the optics.

CAUTION: All wiring must be done by a qualified electrician. KEEP THIS SHEET FOR FUTURE REFERENCE.

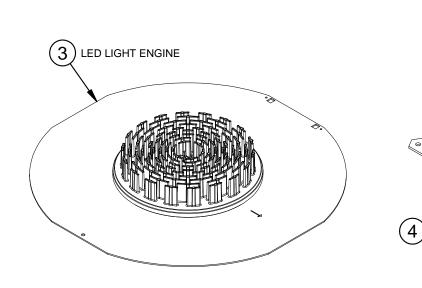

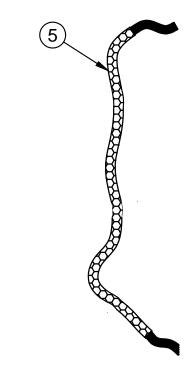

DRIVER SUB-ASSEMBLY

8° 8°

PARTS BAG

ITEM #	PART NO	QTY	DESCRIPTION	NOTE
1	A84134	4	1/4-20 X .38" SCREW	
2	93100776	1	INSTALLATION INSTRUCTIONS	
3	XXXXX	1	LIGHT ENGINE ASSY	
4	XXXXX	1	DRIVER ASSY	
5	93007211-24	1	CBL-5 CNDCTR - 24in LONG	

Current




17760 ROWLAND ST. Tel(626)968-5666 CITY OF INDUSTRY Fax(626)968-5716 CALIFORNIA 91748 www.currentlighting.com/aal

72 LED Upgrade Kit Installation Guide Fixture: PRM2 - Promenade 72LED

SAFTY PRECAUTIONS AND FIXTURE ACCESS

1. Turn off all power to the unit and take all proper safety precations.

2. Open door Lens frame of the fixture assembly by undoing (4) screws located under (FIG 1.1A) and carefully swing down door lens frame open (FIG. 1-2)

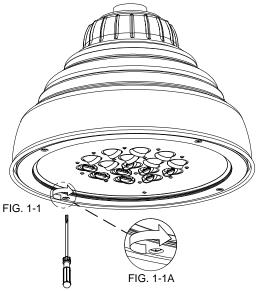


2. MICROCORE ASSEMBLY AND HARDWARE REMOVAL

- (APPLICATIONS VARY, GENERIC EXAMPLE SHOWN)
- 1. Remove entire microcore assembly.


2. Loosen Quarter turn fastener (FIG. 2-1) and remove existing microcore assembly. Disconnect the ballast assembly . Remove & Discard microcore and ballast assembly (FIG. 3-1)

3. Disconnect microcore assembly wires.

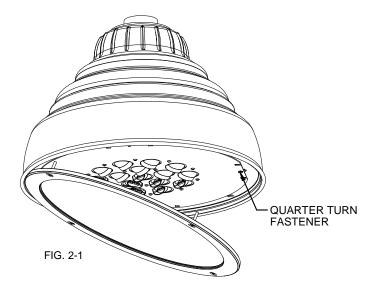

3_ CUT EXISTING INCOMING POWER WIRES

1. Cut feed wires.

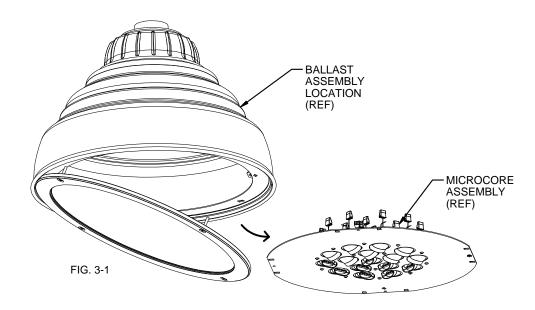




currentlighting.com/aal

© 2022 HLI Solutions, Inc. All rights reserved. Information and specifications subject to change without notice. All values are design or typical values when measured under laboratory conditions



17760 ROWLAND ST. Tel(626)968-5666 CITY OF INDUSTRY CALIFORNIA 91748 Fax(626)968-5716 www.currentlighting.com/aal


72 LED Upgrade Kit Installation Guide Fixture: PRM2 - Promenade 72LED

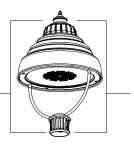

4 BALLAST ASSEMBLY AND HARDWARE REMOVAL

(MOST MODELS)


- 1. Loosen mounting ring screws. Remove entire ballast assembly with wire harness and discard
- 2. Detach all connections to outside power but leave ground screw/wire in place.
- 3. Remove all ballast components from ballast assembly. (FIG. 4-1)

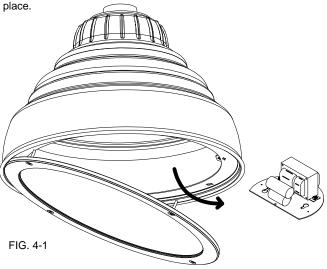

5. INSTALL DRIVER ASSEMBLY

(MOST MODELS)


- 1. Tighten mounting ring screws. Fix entire driver assembly with wire harness and install
- 2. Attach all connections to outside power.
- 3. Install all driver components from driver assembly. (FIG. 5-1)

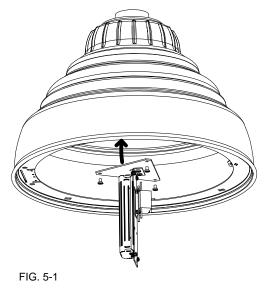



17760 ROWLAND ST. Tel(626)968-5666 CITY OF INDUSTRY Fax(626)968-5716 CALIFORNIA 91748 www.currentlighting.com/aal


72 LED Upgrade Kit Installation Guide Fixture: PRM2 - Promenade 72LED

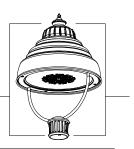

CONNECT BROWN WIRE

6. INSTALLATION OF LED LIGHT ENGINE


- 1. Note direction of light pattern with arrow on deck. (FIG. 6-1A)
- 2. Install LED Light Engine directly to the lens frame .

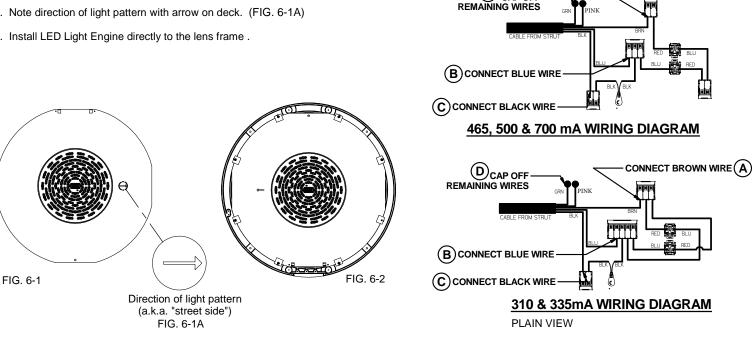

(D) _{CAP OFF}

7. REWIRING FIXTURE

- 1. Slide slot to reflector hinge and secure light engine to the fixture head with quarter turn fastner . (FIG. 7-1)
- 2. Attach wires to incoming power in the lower section of the fixture.
- 3. Tight Quarter turn fastener. (FIG. 7-2)

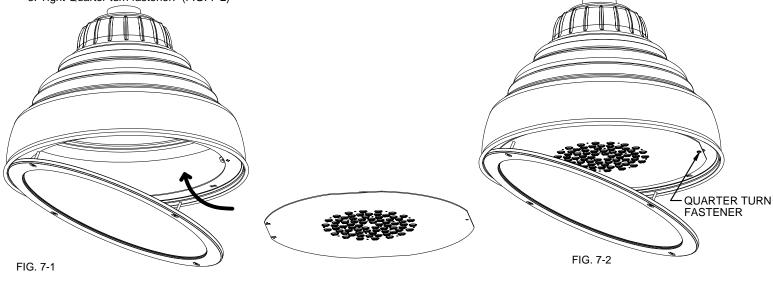

Current ⁽ⁱ⁾

currentlighting.com/aal

© 2022 HLI Solutions, Inc. All rights reserved. Information and specifications subject to change without notice. All values are design or typical values when measured under laboratory conditions




17760 ROWLAND ST. CITY OF INDUSTRY CALIFORNIA 91748 Tel(626)968-5666 Fax(626)968-5716 www.currentlighting.com/aal


72 LED Upgrade Kit Installation Guide Fixture: PRM2 - Promenade 72LED

8. COMPLETING INSTALLATION.

1. Close door Lens frame of the fixture assembly by undoing (4) screws located under and carefully swing down door lens frame open (FIG. 8-1)

- 2. Turn power on to make sure light fixture is running properly.
- 3. Installation complete.

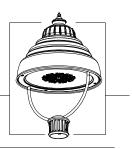

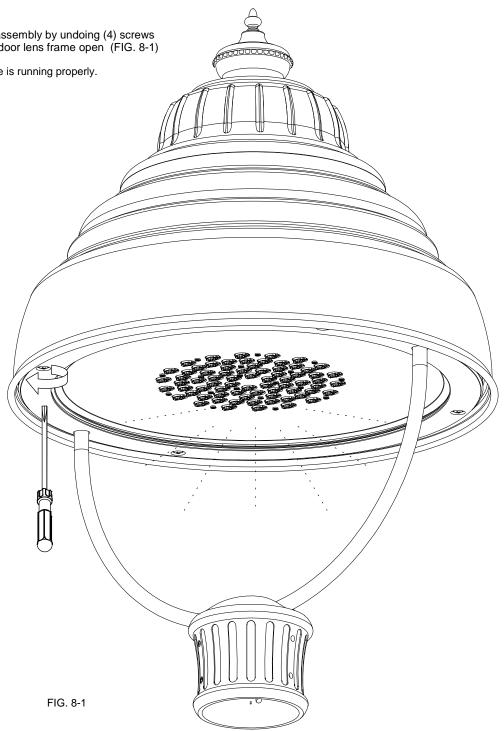

currentlighting.com/aal

© 2022 HLI Solutions, Inc. All rights reserved. Information and specifications subject to change without notice. All values are design or typical values when measured under laboratory conditions