



WARNING: Fixtures must be grounded in accordance with local codes or the National Electrical Code. Failure to do so may result in serious personal injury.

MAINTENANCE: A regularly scheduled maintenance program should be established to retain optimum light output and reduce heat retention. Dusting with a soft, clean, dry cloth is normally sufficient for the optics.

CAUTION: All wiring must be done by a qualified electrician. KEEP THIS SHEET FOR FUTURE REFERENCE.

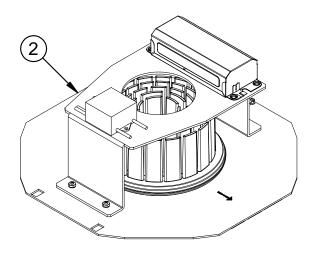


LED LIGHT ENGINE

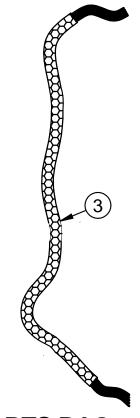

PARTS BAG


ITEM#	PART NO	QTY	DESCRIPTION	NOTE
1	93100777	1	INSTALLATION INSTRUCTIONS	
2	XXXXX	1	LIGHT ENGINE ASSY	
3	93007211-24	1	CBL-5 CNDCTR - 24in LONG	



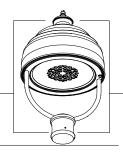

1. SAFTY PRECAUTIONS AND FIXTURE ACCESS


- 1. Turn off all power to the unit and take all proper safety precations.
- 2. Open fixture head undoing captive thumb screw located on underside of fixture (FIG. 1-1)/(FIG. 1-1A) and carefully lift fixture head open to service position. (FIG. 1-2)
- 3. Loosen quarter turn fastener (FIG.1-2) (FIG.1-2A) and remove existing microcore led assembly. Disconnect the ballast assembly remove & discard microcore led assembly.

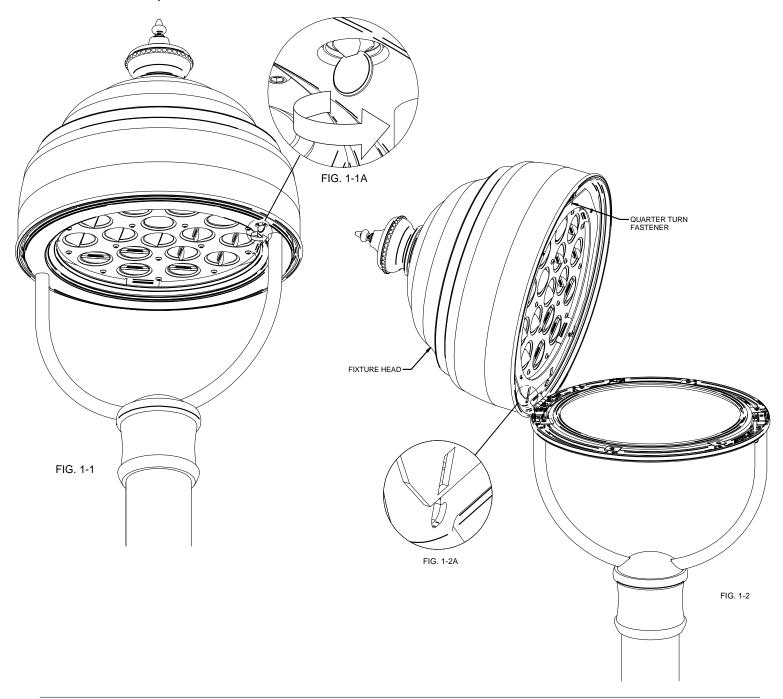



2. MICROCORE LIGHT ENGINE AND BALLAST ASM REMOVAL

- 1. Cut feed wires.
- 2. Loosen mounting ring screws. Remove entire ballast assembly with wire harness and discard.
- 3. Remove all ballast components from ballast assembly. (FIG. 2-2)

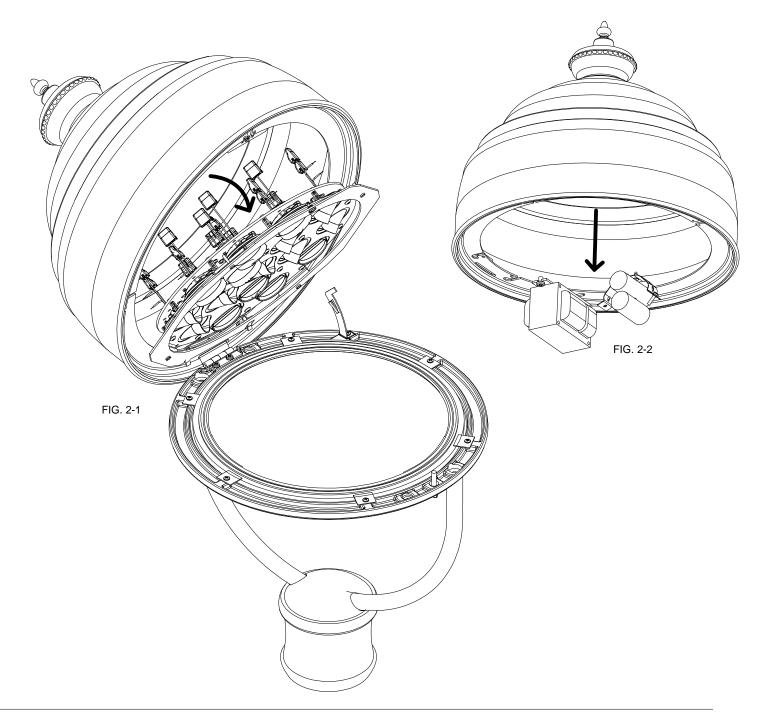




17760 ROWLAND ST. CITY OF INDUSTRY CALIFORNIA 91748 www.currentlighting.com/aal

36 LED Upgrade Kit Installation Guide Fixture: PRM3 - Promenade 36LED

3. INSTALL DRIVER ASSEMBLY

(MOST MODELS)

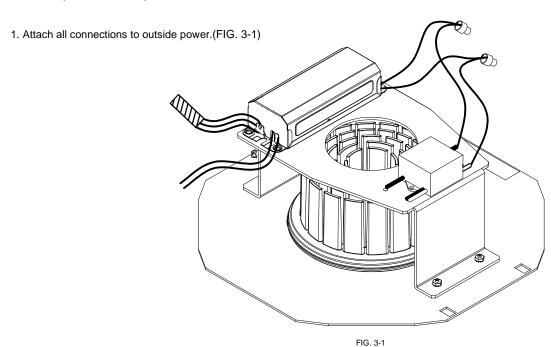

4. INSTALLATION OF LED LIGHT ENGINE

- 1. Note direction of light pattern with arrow on deck. (FIG. 4-1A)
- 2. Install LED Light Engine directly to the lens frame .



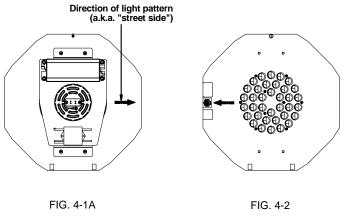


FIG. 4-1

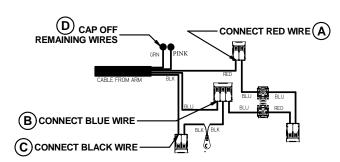

450 mA, 470 mA & 615 mA WIRING DIAGRAM

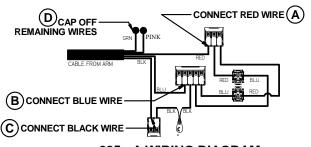


285mA WIRING DIAGRAM

PLAIN VIEW

5. REWIRING FIXTURE

- 1. Slide slot to reflector hinge and secure light engine to the fixture head with quarter turn fastner. (FIG. 5-1)
- 2. Attach wires to incoming power in the lower section of the fixture.
- 3. Tight Quarter turn fastener. (FIG. 5-2)

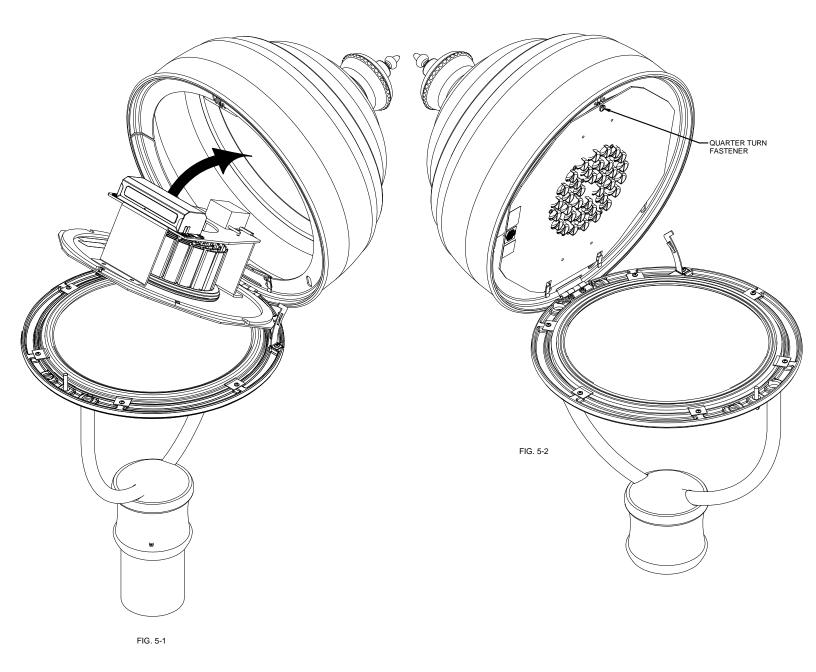



6. COMPLETING INSTALLATION

- 1. Close fixture head undoing captive thumb screw located on underside of fixture (FIG. 6-1)/(FIG. 6-1A).
- 2. Turn power on to make sure light fixture is running properly.
- 3. Installation complete.

