


FIXTURE SERIES: NELO+™ 75L WALL

**MOUNTING TYPE: WALL BRACKET** 

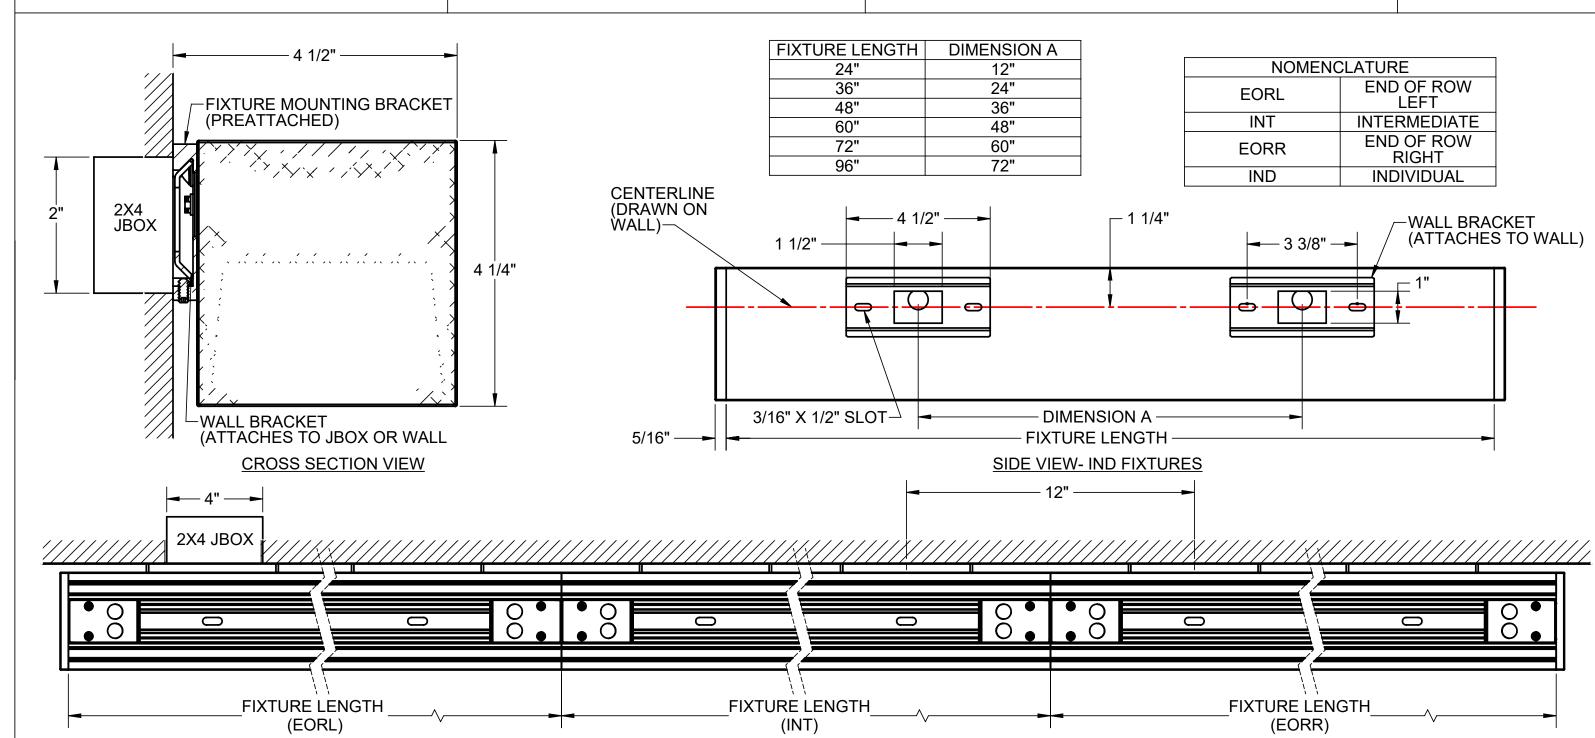

GENERAL NOTES: (READ SHEETS COMPLETELY BEFORE STARTING)

- 1. FIXTURES ARE PROVIDED WITH FACTORY-INSTALLED FIXTURE CIRCUIT WIRING. REFER TO SUPPLEMENTAL INSTRUCTION SHEET, 510401, WHEN MAKING CONNECTIONS.
- 2. ALL WALL FIXTURES REQUIRE TWO MOUNTING BRACKETS.
- 3. APPROXIMATE WEIGHT OF FIXTURE IS 5 LBS PER FOOT OF LENGTH.
- 4. ONE 2X4 JBOX IS REQUIRED ON THE LEFT SIDE OF THE FIXTURE OR ROW. OPTIONAL JBOXES HAVE TO BE MOUNTED BEHIND A FIXTURE MOUNTING POINT

TOOLS REQUIRED	SUPPLIED BY INSTALLER
- 5/64" HEX KEY - 1/8" HEX KEY - 1/4" HEX DRIVER/DRILL	- 2x4 JUNCTION BOX -HARDWARE FOR MOUNTING WALL BRACKETS (WALL MATERIAL DEPENDENT)



DO NOT MODIFY OR ALTER THIS PRODUCT IN ANY WAY, OR INSTALL IN ANY FASHION WHICH IS CONTRARY TO THE INSTRUCTIONS CONTAINED HEREIN. IF YOU HAVE ANY QUESTIONS REGARDING THIS PRODUCT OR THE INSTALLATION OF IT, PLEASE CALL LITECONTROL ENGINEERING AT 781-294-0100

DRAWING: 93158112 REV / DATE: 6 / 7/12/2022

**PAGE: 1 OF 3** 

## **INSTALLATION INSTRUCTIONS**


FIXTURE SERIES: NELO+™ 75L WALL

**MOUNTING TYPE: WALL BRACKET** 


1 WALL REF. STRAIGHT LINE

INSTALL 2X4 JBOX PER DIMENSIONS SHOWN ON SHEET 1.
MOUNT WALL BRACKETS ALONG A STRAIGHT LINE. THE LEFT
BRACKET WILL MOUNT TO JBOX. IF INSTALLING ROW, REFER TO
TOP VIEW ON PAGE 1. IF REQUIRED, USE SHIMS (NOT
SUPPLIED) BETWEEN WALL SURFACE AND BACK OF BRACKETS.
DRILL WIREWAY HOLE WITHIN SQUARE CUTOUT ON EACH
BRACKET.

2

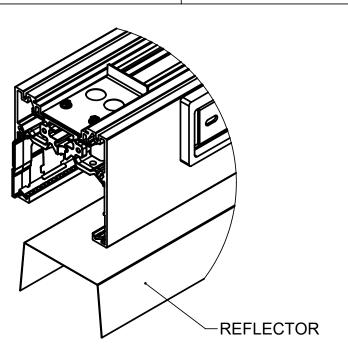


REMOVE REFLECTOR FROM ALL FIXTURES BEING MOUNTED. DO NOT REMOVE REFLECTORS FORM PROTECTIVE SLEEVE UNTIL YOU ARE READY TO REINSTALL.

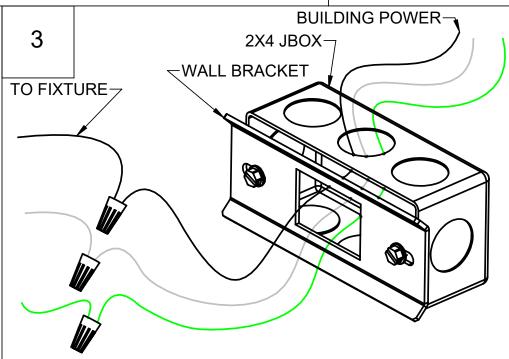


FEED WIRES FROM BUILDING POWER INTO 2X4 JBOX AND CONNECT TO FIXTURE WIRING. BRING ALL CONNECTIONS INTO FIXTURE.


NOTE: REFERENCE WALL IS HIDDEN. WIRING QUANTITY AND COLOR MAY VARY.

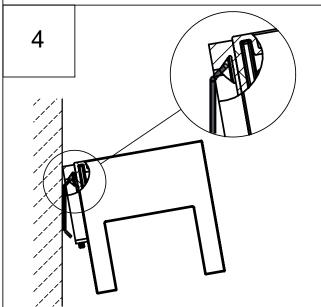


MOUNT FIXTURE ONTO BRACKETS AT AN ANGLE. ALLOW FIXTURE TO BECOME FLUSH WITH WALL SURFACE.

NOTE: FIXTURE WILL NOT BE FULLY SECURED UNTIL ALL SET SCREWS ARE TIGHTENED AFTER ROW JOINING.

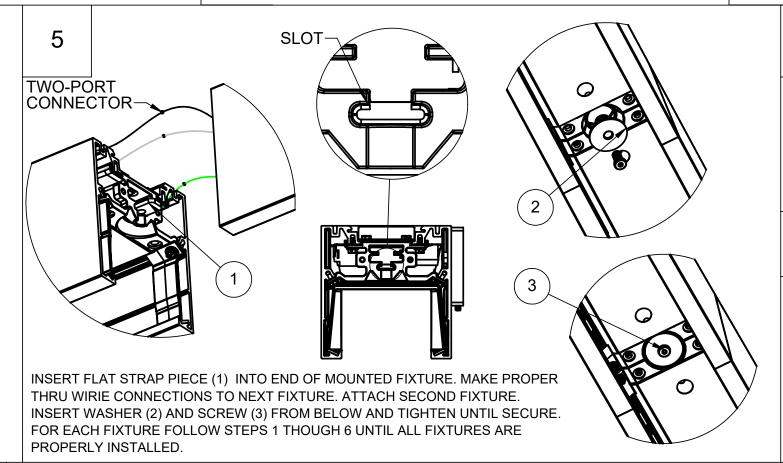

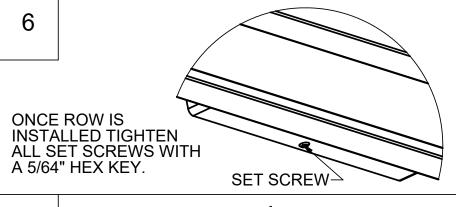

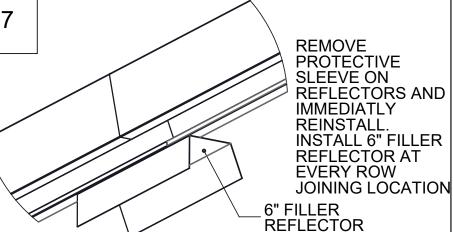





DO NOT MODIFY OR ALTER THIS PRODUCT IN ANY WAY, OR INSTALL IN ANY FASHION WHICH IS CONTRARY TO THE INSTRUCTIONS CONTAINED HEREIN. IF YOU HAVE ANY QUESTIONS REGARDING THIS PRODUCT OR THE INSTALLATION OF IT, PLEASE CALL LITECONTROL ENGINEERING AT 781-294-0100

DRAWING: 93158112 REV / DATE: 6 / 7/12/2022

**PAGE: 2 OF 3** 

**END CAP INSTALL** 

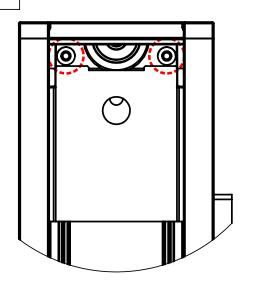

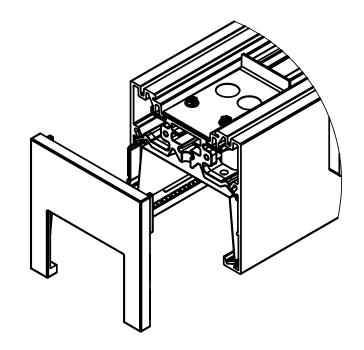

WITH RELECTOR REMOVED, REMOVE THE TWO END CAP SCREWS FROM INSIDE THE FIXTURE.PULL END CAP AWAY FROM FIXTURE. TO REINSTALL, HOLD ENDCAP TIGHT TO FIXTURE AND SCREW BACK IN.

DO NOT MODIFY OR ALTER THIS PRODUCT IN ANY WAY, OR INSTALL IN ANY FASHION WHICH IS CONTRARY TO THE INSTRUCTIONS CONTAINED HEREIN. IF YOU HAVE ANY QUESTIONS REGARDING THIS PRODUCT OR THE INSTALLATION OF IT, PLEASE CALL LITECONTROL ENGINEERING AT 781-294-0100

**DRAWING: 93158112** REV / DATE: 6 / 7/12/2022