


ALL SIZES- DOOR REMOVAL

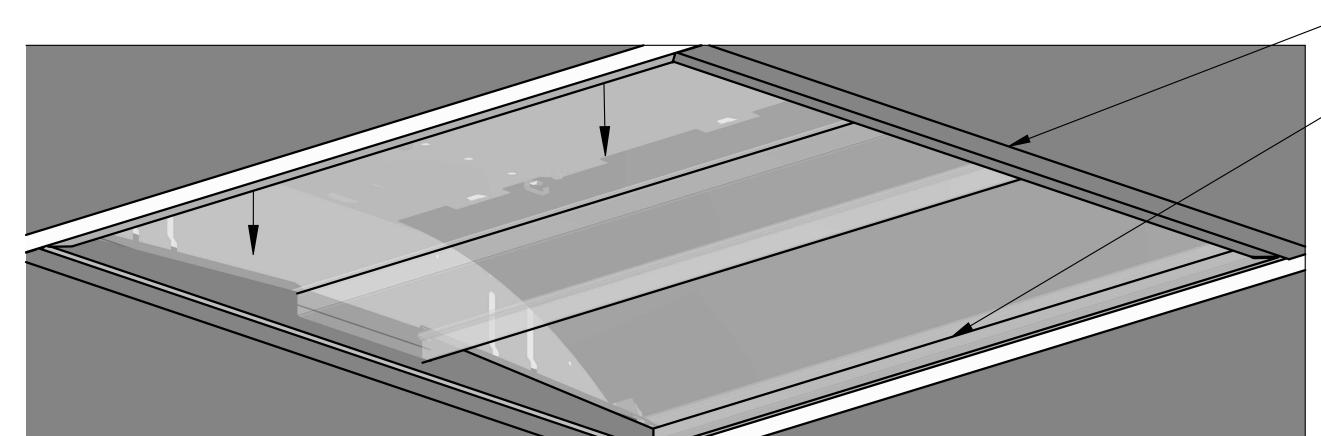

CLOSED POSITION

VIEW FROM BELOW

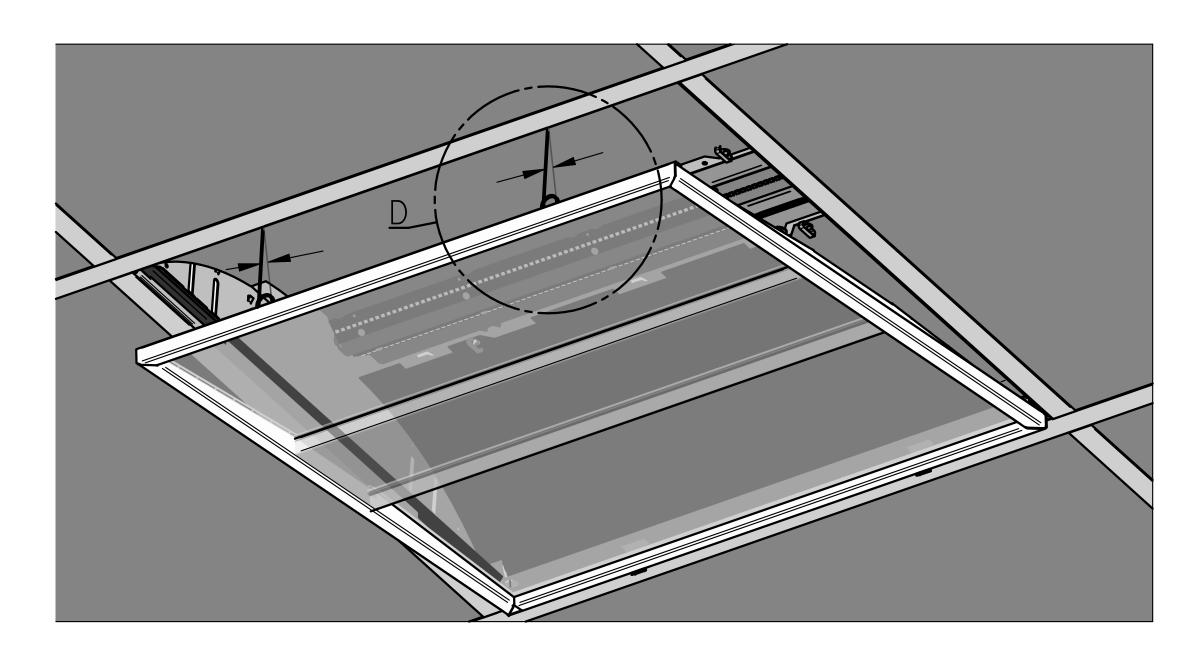

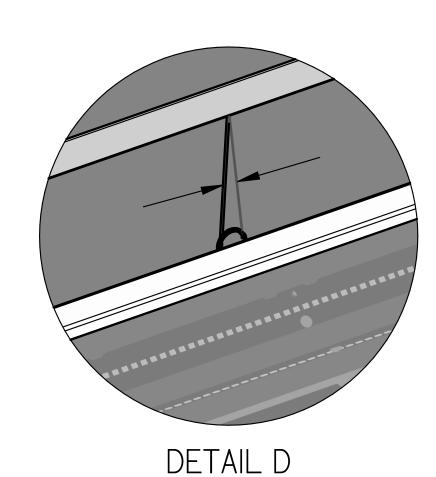

GENTLY BUT FIRMLY PULL DOWN ON ONE OF THE SIDES PARALLEL TO THE CENTER CHANNEL UNTIL THE DOOR STARTS TO SEPERATE FROM THE HOUSING. IF THE DOOR ISNT OPENING, THE HINGE SIDE IS BEING PULLED ON, SWITCH TO THE OTHER SIDE OF THE DOOR. ALLOW DOOR TO OPEN UNTIL STOPPED BY THE END OF THE TORSION SPRINGS. SQUEEZE IN ON BOTH SIDES OF THE TORSION SPRINGS TO RELEASE DOOR FROM HOUSING. REATTACH HINGES ON NEW DOOR AND FOLLOW STEPS IN REVERSE TO CLOSE. ONCE NEW DOOR IS FULLY INSTALLED, REMOVE DOOR STRAPPING BY CUTTING ON END AND PULLING ON THE BUCKLED END UNTIL REMOVED.





DO NOT MODIFY OR ALTER THIS PRODUCT IN ANY WAY, OR INSTALL IN ANY FASHION WHICH IS CONTRARY TO THE INSTRUCTIONS CONTAINED HEREIN. IF YOU HAVE ANY QUESTIONS REGARDING THIS PRODUCT OR THE INSTALLATION OF IT, PLEASE CALL LITECONTROL ENGINEERING AT 781-294-0100.


DRAWING: 93166200

REV/DATE: A / 10/13/2022


2X2 AND 2X4 FIXTURES - REFLECTOR REPLACEMENT

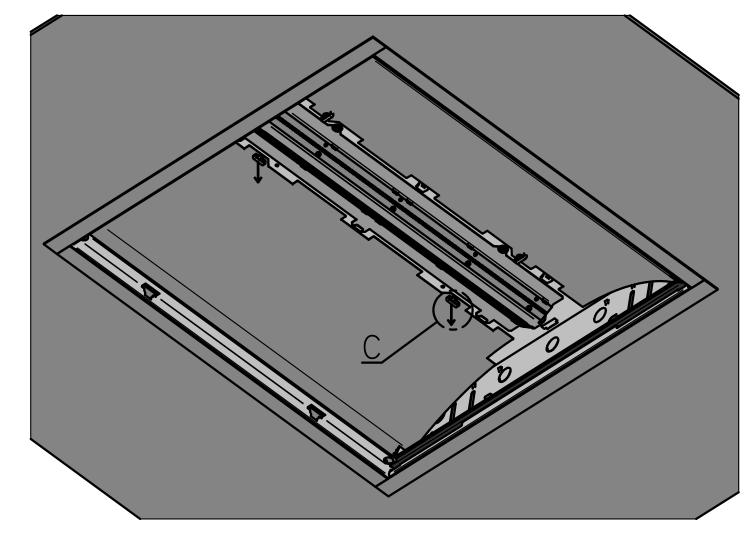


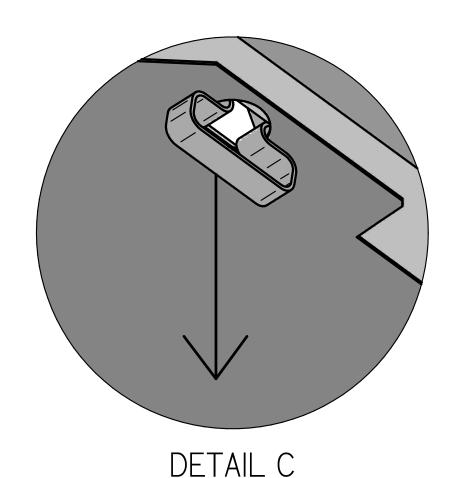

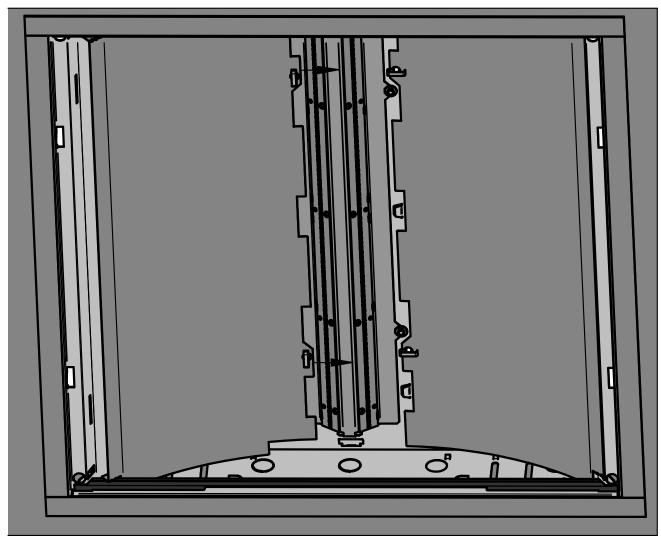

TO REMOVE THE REFLECTORS, ROTATE THE SPRING CLIPS 90 DEGREES LEFT OR RIGHT. GENTLY PULL DOWNWARDS ON THE SPRING CLIPS.
WHEN CLIPS CLEAR THEIR MOUNTING SLOT, PULL REFLECTOR TOWARDS THE CENTER OF THE FIXTURE AS SHOWN TO REMOVE. REPEAT ON SECOND REFLECTOR AS NEEDED.

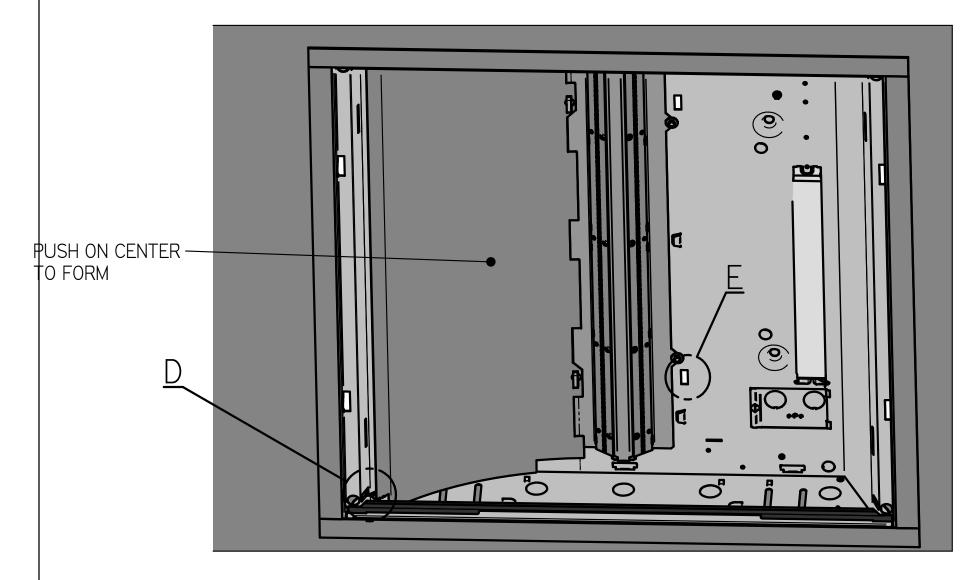


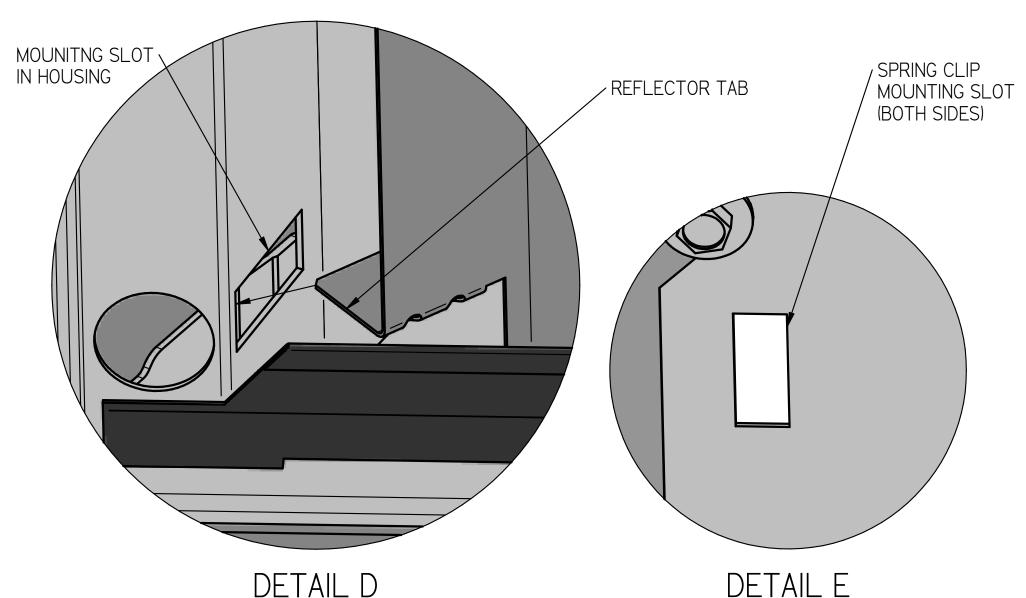



TO REINSTALL, INSERT FLAT REFLECTOR BACK INTO FIXTURE AND INSERT BOTH TABS ON EACH END INTO THE MOUNTING SLOTS IN THE HOUSING. WHILE HOLDING THE REFLECTOR IN PLACE, AND WITH THE SPRING CLIPS PARALLEL TO THE LED BOARDS, GENTLY APPLY PRESURE ON THE CENTER OF THE REFLECTOR UNTIL THE CLIPS SIT IN THERE RESPECTED SLOTS. ONCE EACH CLIP IS IN PLACE ROTATE 90 DEGREES IN EITHER DIRECTION TO SECURE THE REFLECTOR. REPLACE DOOR.




REIN. IF DRAWIN

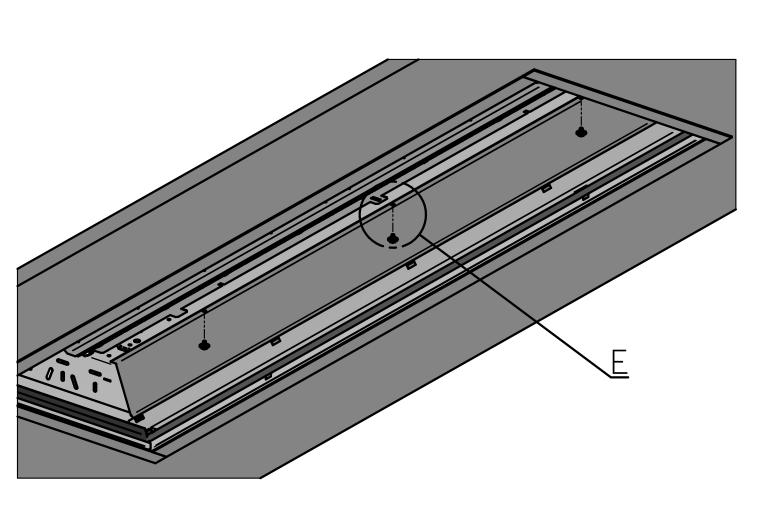

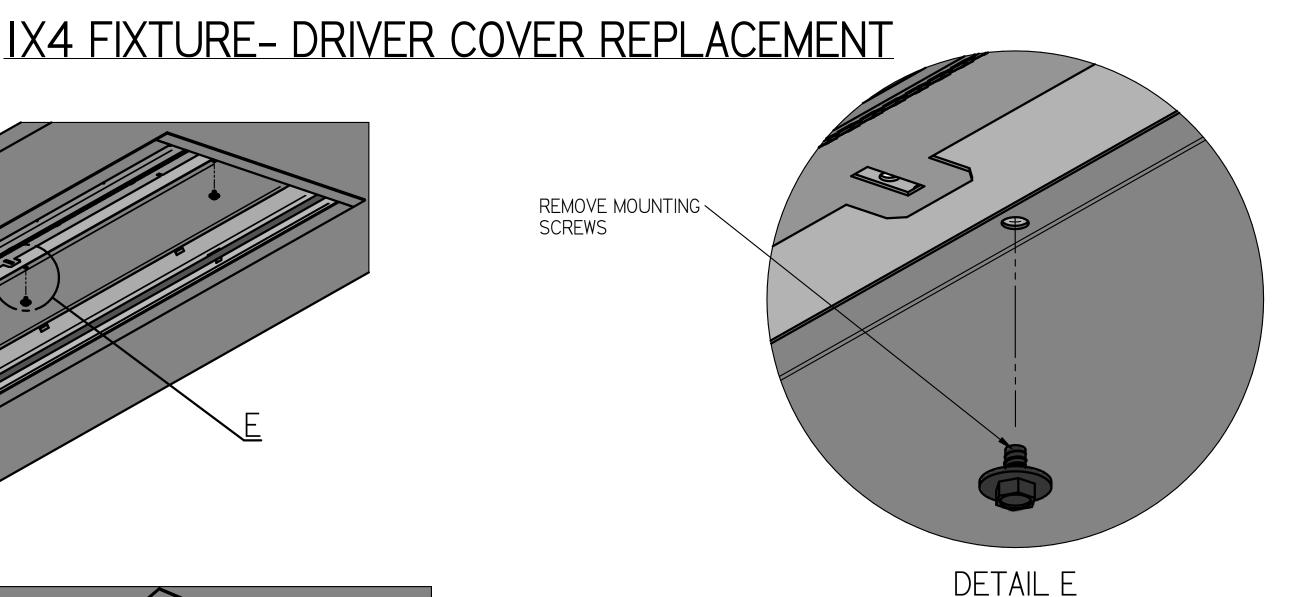

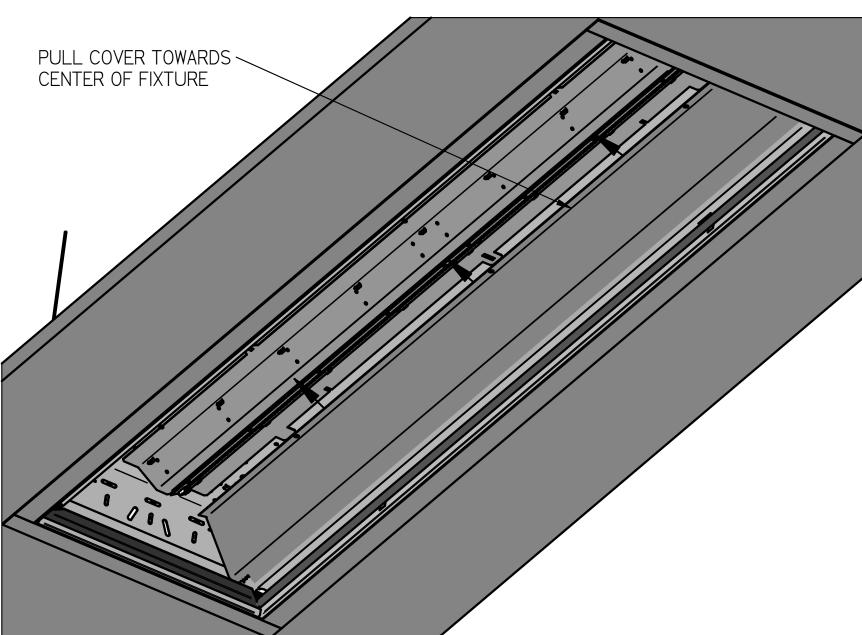

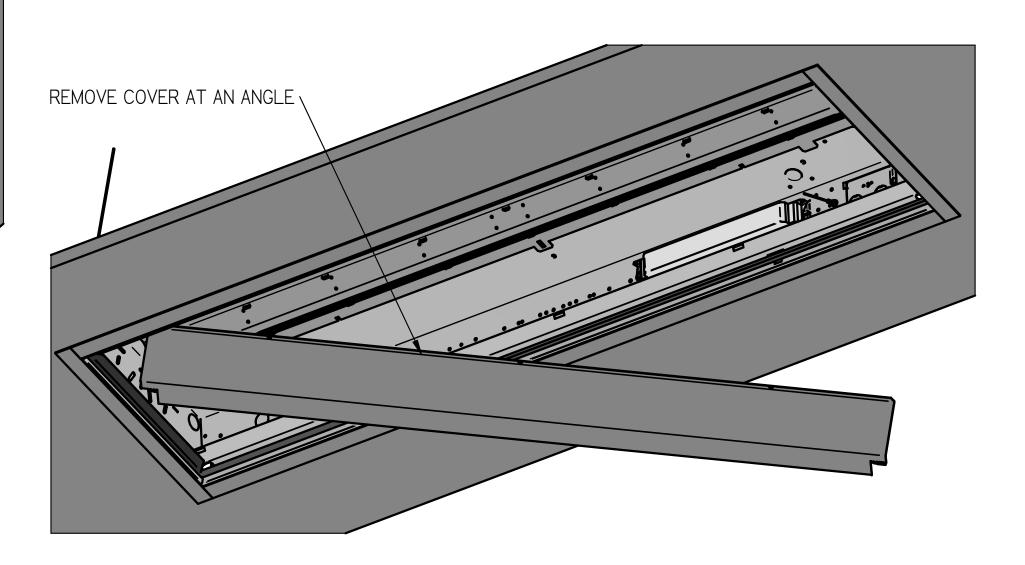

TO REMOVE THE DRIVER COVER, FIRST REMOVE THE THREE SCREWS SECURING THE COVER TO THE FIXTURE. PULL COVER IN THE DIRECTION SHOWN UNTIL MOUNTING TABS CLEAR THE SLOTS IN THE HOUSING. REMOVE COVER AT AN ANGLE AS SHOWN. TO REPLACE, BEND MOUNTING TABS TO ROGUHLY 90 DEGREES AND INSERT COVER INTO FIXTURE. ENSURE BOTH MOUNTING TABS ARE INSERTED INTO THE HOUSING. APPLY PRESSURE ON THE COVER TO ALLIGN SCREW HOLES AND SECURE WITH THREE SCREWS.




DO NOT MODIFY OR ALTER THIS PRODUCT IN ANY WAY, OR INSTALL IN ANY FASHION WHICH IS CONTRARY TO THE INSTRUCTIONS CONTAINED HEREIN. IF YOU HAVE ANY QUESTIONS REGARDING THIS PRODUCT OR THE INSTALLATION OF IT, PLEASE CALL LITECONTROL ENGINEERING AT 781-294-0100.

93166200 **DRAWING:**

REV/DATE: A / 10/13/2022

ALL FIXTURE SIZES - LED BOARD REPLACEMENT

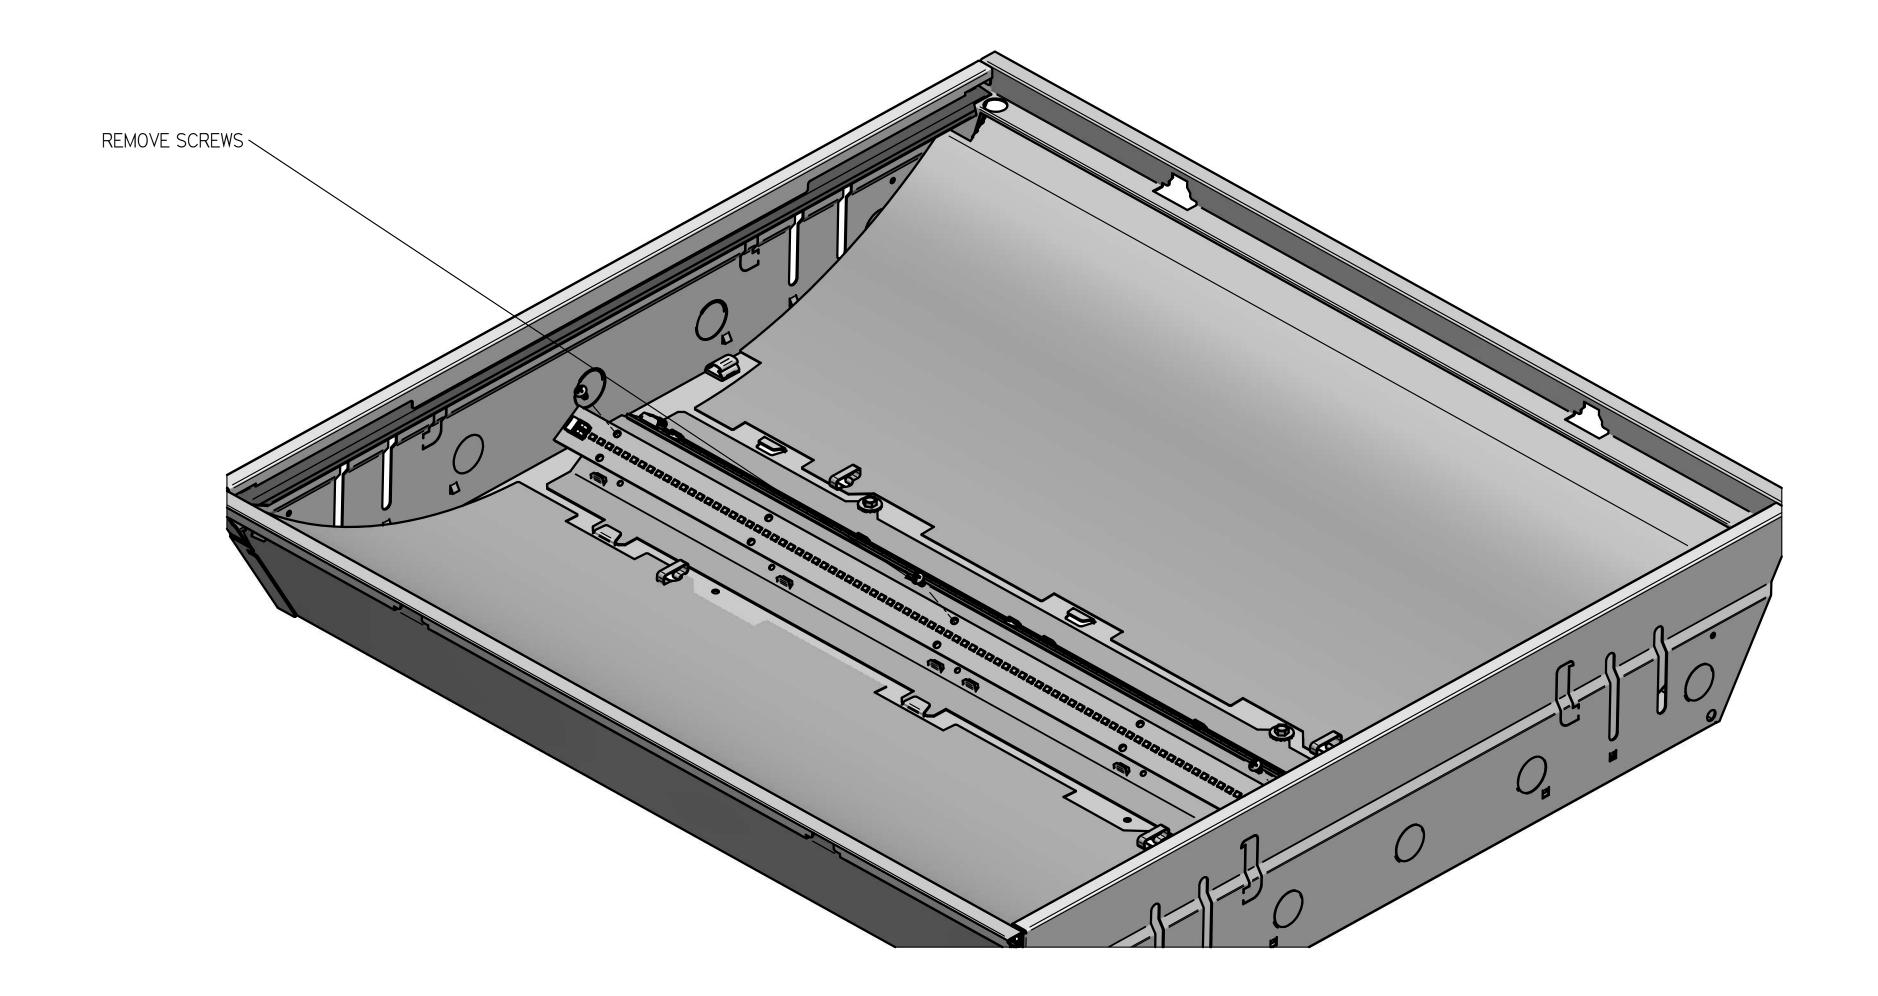


TAKE NOTE OF, AND DISCONNECT WIRING FROM THE LED BOARD BY PUSHING ON THE RELEASE BUTTON ON THE LED BOARD CONNECTOR.
UNSCREW EACH SCREW SECURING THE BOARD. INSTALL NEW LED BOARD, ENSURE SCREWS ARENT OVER TIGHTENED AND THER BOARD ISNT WARPED.



DRAWING: 93166200

ALL FIXTURE SIZES - LED MODULE REPLACEMENT

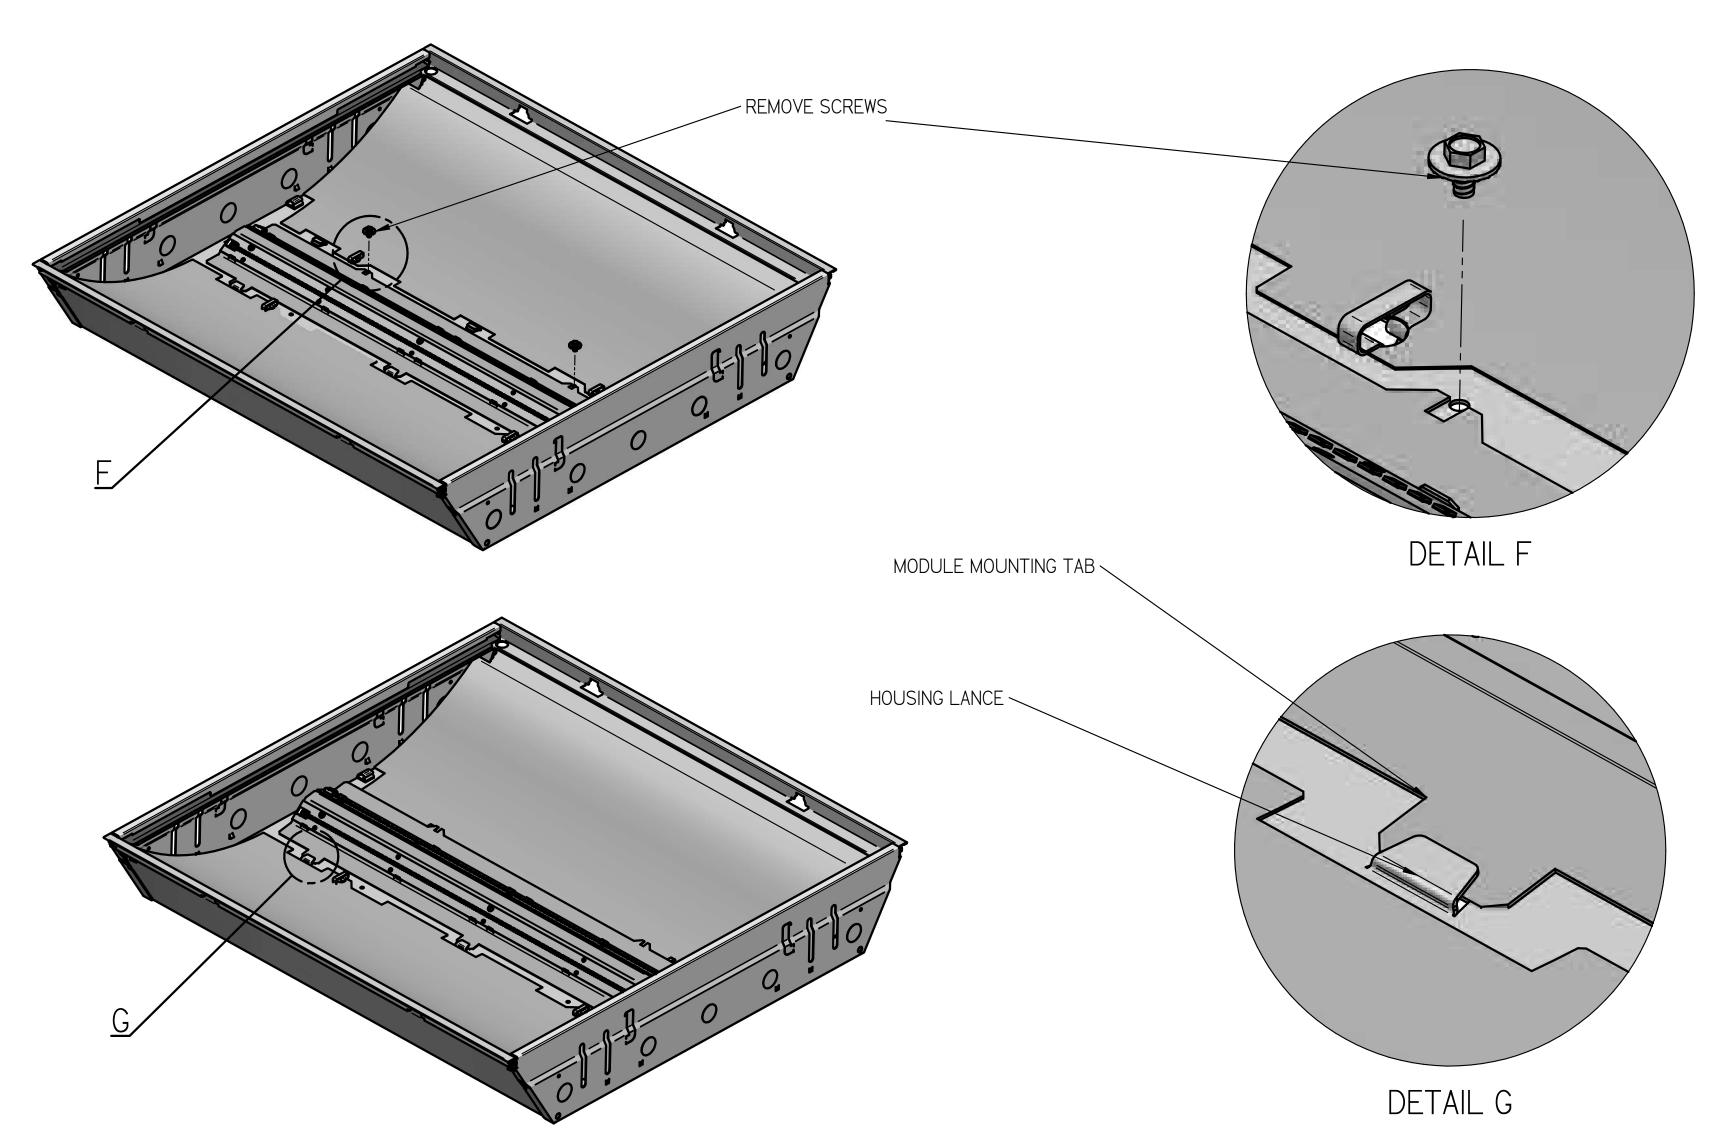


TAKE NOTE OF, AND DISCONNECT WIRING FROM THE LED BOARDS BY PUSHING ON THE RELEASE BUTTON ON THE LED BOARD CONNECTOR.

UNSCREW EACH SCREW SECURING THE MODULE TO THE HOUSING. INSTALL NEW MODULE IN THE SAME ORIENTATION AS THE OLD MODULE. BY PLACING MOUNTING TABS UNDER HOUSING LANCES AND SECURING OTHER END WITH SCREWS. REWIRE LED BOARDS.



DRAWING: 93166200

ALL FIXTURE SIZES - DRIVER REPLACEMENT

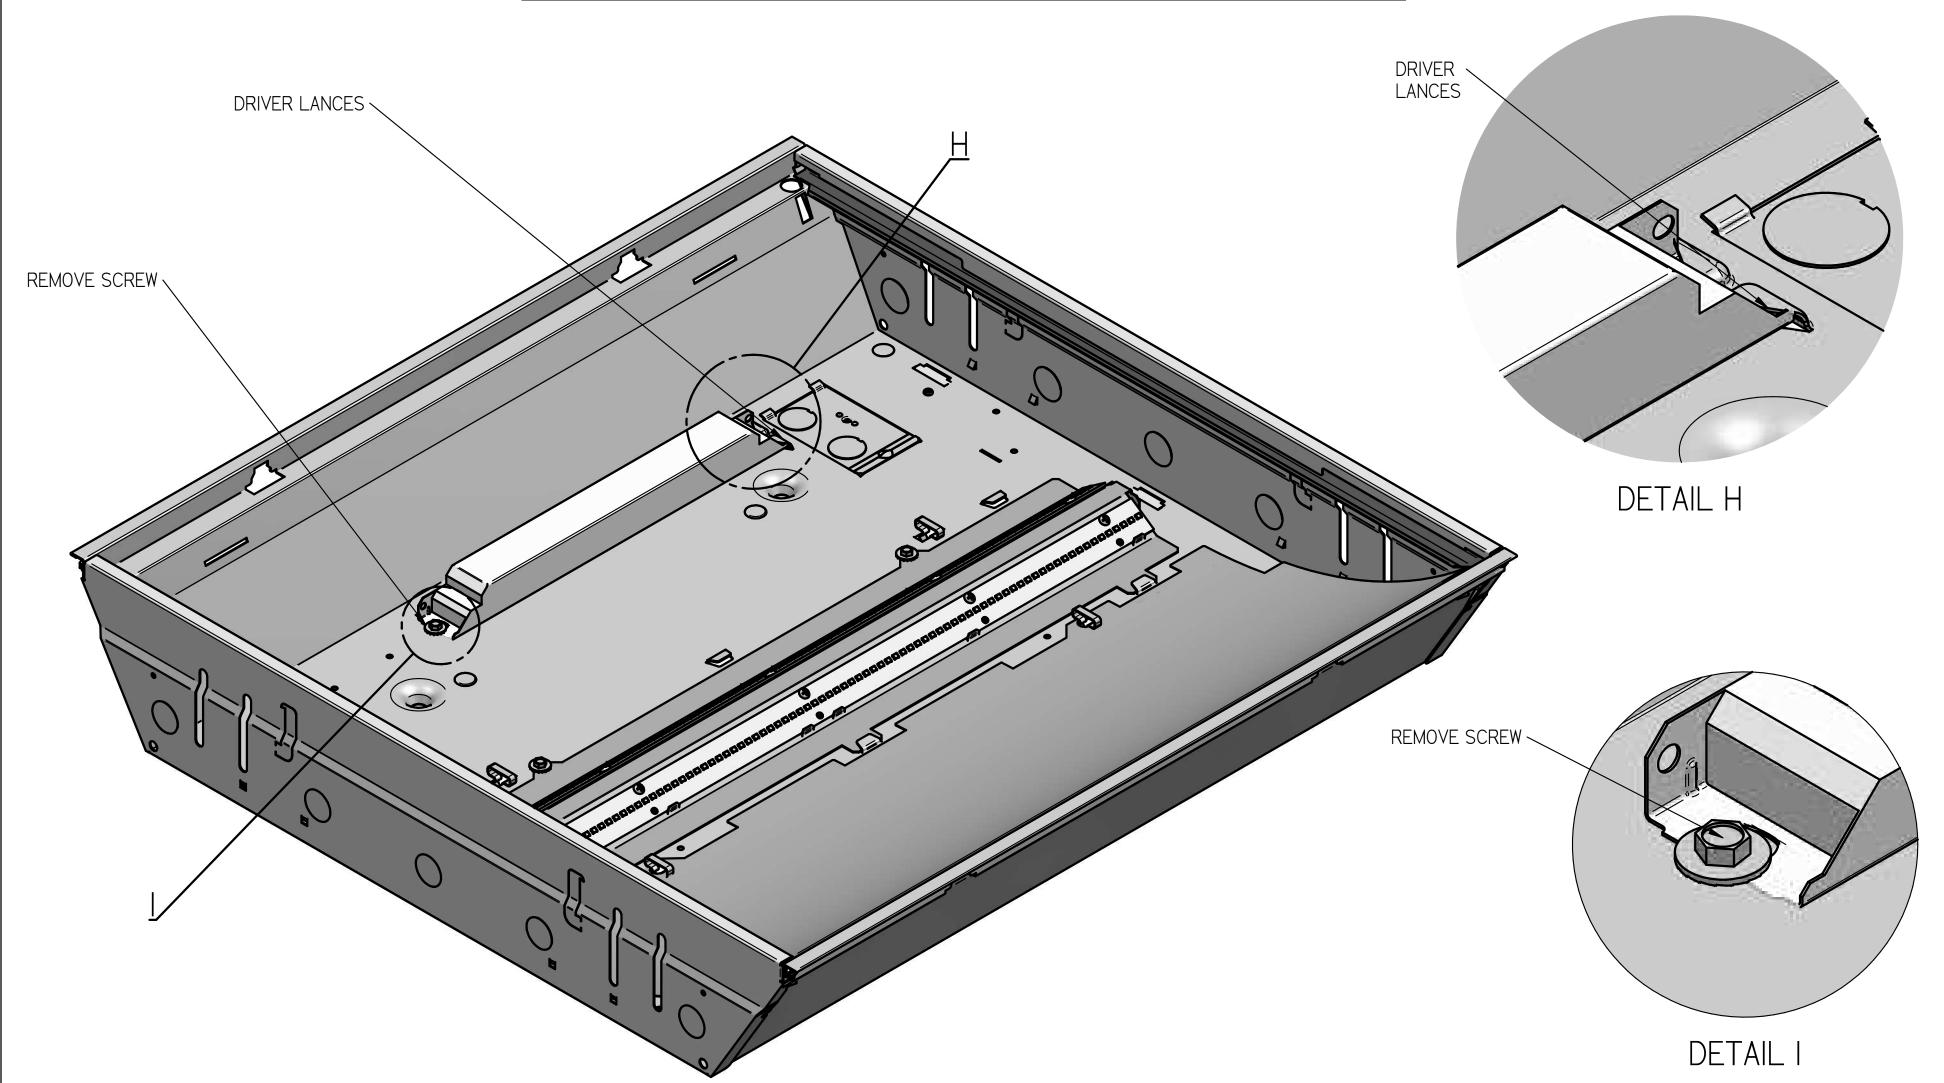

AFTER REMOVING REFLECTOR, OR DRIVER COVER, TAKE NOTE OF AND DISCONNECT WIRING FROM DRIVER. REMOVE DRIVER SCREW HOLDING THE DRIVER IN PLACE. SLIDE THE DRIVER OUT FROM UNDER THE DRIVER LANCES. FOLLOW STEPS IN REVERSE TO INSTALL DRIVER REPLACEMENT.

ENSURE POWER SIDE OF DRIVER IS CLOSEST TO THE ACCESS COVER.



DRAWING: 93166200