Bounce® Tenon Mount Installation Instructions




WARNING: Fixtures must be grounded in accordance with local codes or the National Electrical Code. Failure to do so may result in serious personal injury.

NOTE: All wiring must be done by a qualified electrician. KEEP THIS SHEET FOR FUTURE REFERENCE.

Tool Required (Mount Only) : ³/₁₆" Hex Wrench

C - Tenon Mount Instructions: 🖄 Make certain the electrical supply is OFF before starting installation.

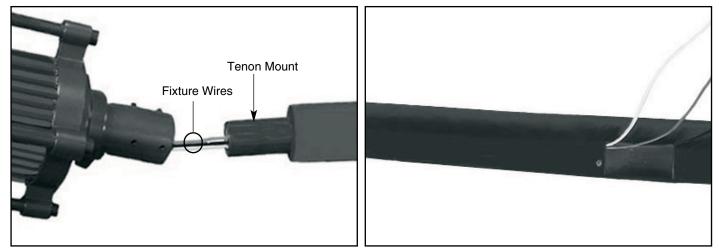

1. Lay pole on padded support to protect finish. Feed supplied pole wiring through tenon opening, down the pole and out hand hole.



2. Orient fixture relative to mount to provide desired lighting distribution.

For warranty see: currentlighting.com/kimlighting

ECN 100715008 Status 4





3. Tighten (4) set screws securely using a ³/₁₆" hex wrench. Remove one screw, drill recess in tenon or pole for screw point, and replace set screw.

Part No. 95649

currentlighting.com/kimlighting