

IMPORTANT

The battery in this unit may not be fully charged. After electricity is connected to the unit, let battery charge up to 24 hours. Then the normal operation of this unit should take effect. To check press the “TEST” button and the lights on the unit should turn ON

IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed including the following.

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. Do not use outdoors.
2. Equipment should be mounted in locations at heights (Max: 9ft) where it will not be subject to tampering by unauthorized personnel.
3. Do not mount near gas or electric heaters
4. The use of accessories are not recommended by the manufacturer and may cause an unsafe condition.
5. Do not use this equipment for other than its intended use.
6. Servicing of this equipment should be performed by qualified personnel.
7. Disconnect AC power before servicing.

INSTALLER:

- SEE UNIT LABEL FOR ADDITIONAL MODEL SPECIFICATIONS
- SAVE THESE INSTRUCTIONS FOR USE BY OWNER/OCCUPANT



RECYCLING INFORMATION

All steel, aluminum and thermoplastic parts are recyclable. All cartons contain recycled materials.
Please recycle responsibly.

COM604073

WARNING – This product contains chemicals known to the State of California to cause cancer, birth defects and/or other reproductive harm. Thoroughly wash hands after installing, handling, cleaning, or otherwise touching this product.

INSTALLATION

Warning:
Unused wires must be capped
using enclosed wire nuts.

J-Box Mounting

1. Feed fixture leads through back plate and connect AC power supply (Fig. A).
2. Connect wires through J-Box. Secure back plate on to J-Box with screws.
3. Connect battery before AC power can be provided to the unit (Fig. B).
4. Align snaps and push housing directly onto back plate (Fig. C). Supply AC power and press "TEST" button to check light.

Conduit Mounting

5. Secure back plate to wall surface. Route wires through hole in conduit flange and make conduit connection.
6. Connect battery before AC power can be provided to the unit (Fig. B).
7. Align snaps and push housing directly onto back plate (Fig. C). Supply AC power and press "TEST" button to check light.

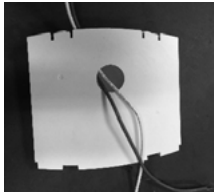


Fig. A

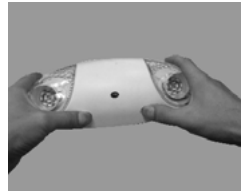
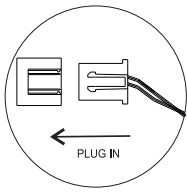


Fig. B

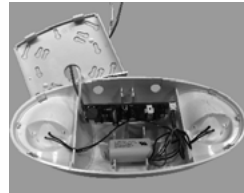


Fig. C

OPERATION

1. During an electrical power failure, the lamps will automatically illuminate for a minimum of 90 minutes.
2. To test, push the "TEST" switch. The emergency lamps will illuminate. When the switch is released, the lamps will go off.
3. LED light is on when AC power & battery connected.
4. LED light will be OFF when AC power is disconnected.
5. LED light will be OFF when battery is disconnected or damaged

WIRING DIAGRAM

