

HEATER PAD CONNECTION INSTRUCTION

If unit has heater pad option for cold weather, please reference below instruction.



1, If 120VAC normal power supply

Heater pad is no need change connection, heater pad has connected previously for 120VAC input at factory.

2, If 277VAC normal power supply

heater pad need change connection by installer, please reference 277V heater pad wiring as below. connect red wire to and blue wire from heater pad by wire nut, cap black wire by wire nut.

Normal supply 120V AC
(heater pad connected by factory)

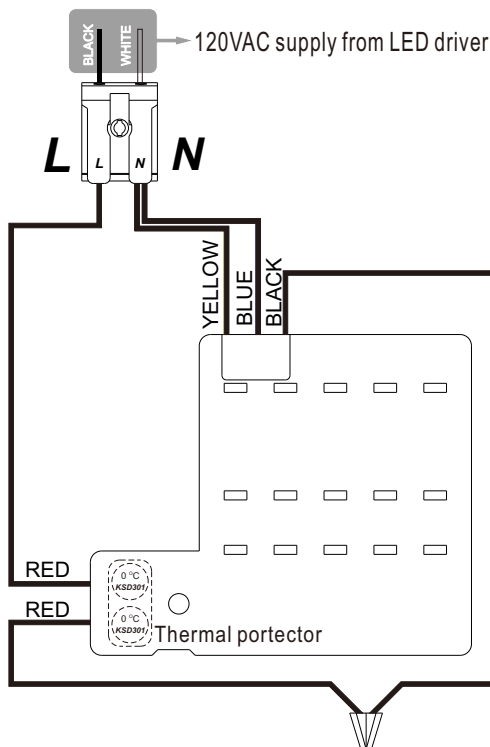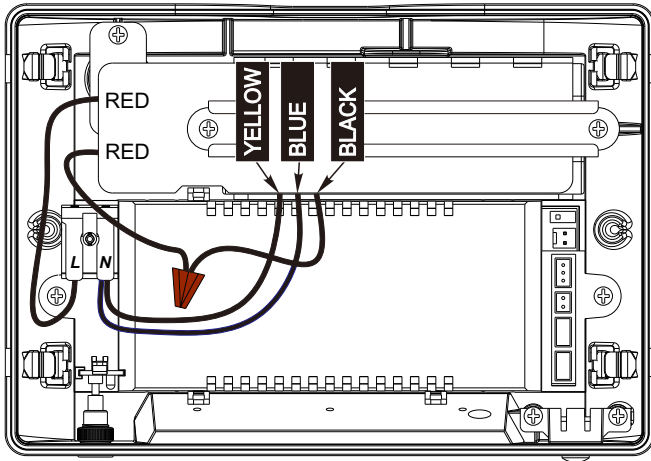

Normal supply 277V AC
(heater pad need change connection by installer)

