 


1 Meet your new WHR1

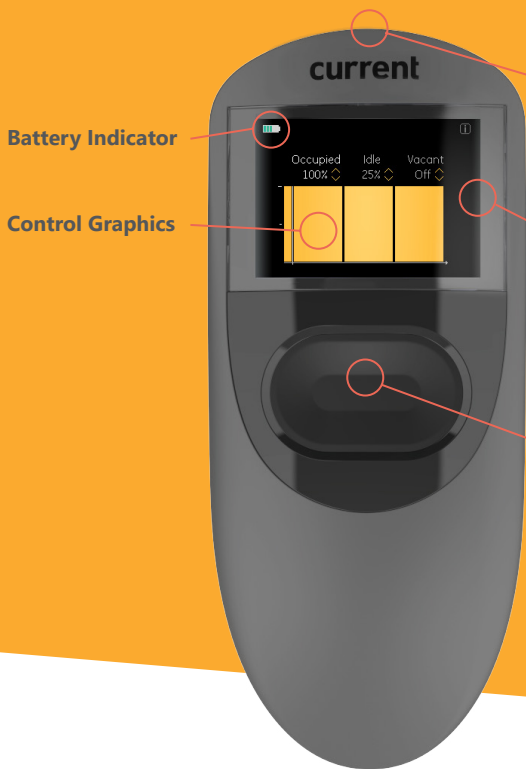

Battery Indicator

Control Graphics

IR Transmitter / Receiver.

The IR Transmitter / Receiver is located at the top of the remote. Aim the transmitter at the desired device while commissioning.


LCD Backlit Screen

The full-color LCD backlit display enhances the intuitive interface, making images and text easy to read.

Control Pad.

The simple layout of the control pad makes navigation easy, while its design and material finish provide comfort during use.

2 Turning your WHR1 on (and off!)

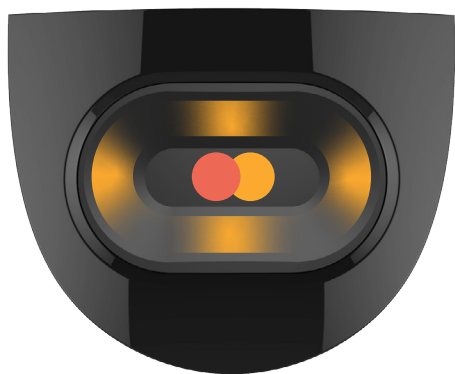

Powering On

To power on your WHR1, simply press any region of the control pad for at least 1 second.


Powering Off

To power off your device, press and hold the CENTER button for at least 2 seconds. Alternatively, the device will automatically power off after 4 minutes of inactivity.


More info on reverse



3 Navigating controls

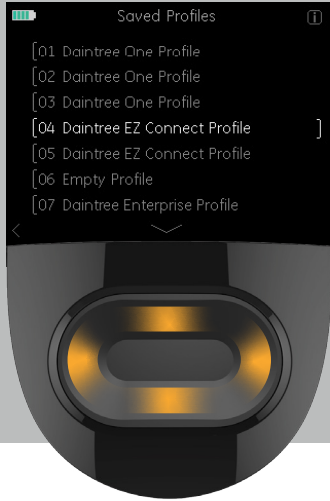


 Use the UP, DOWN, LEFT, and RIGHT directions to navigate menus.

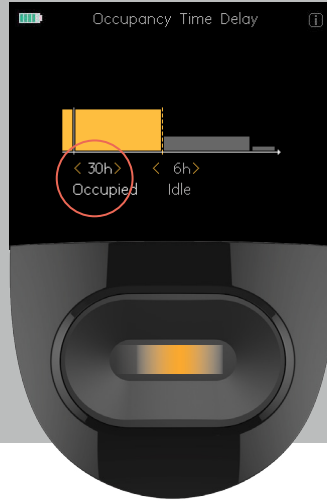

Use the CENTER button to enter editable features such as dimming levels.

4 Common Actions

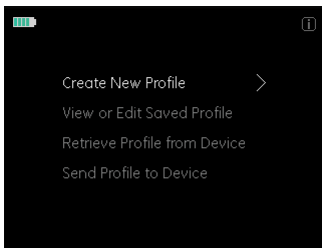


Menu

The WHR1 is navigated through text menus using the LEFT, RIGHT, UP and DOWN buttons




Detailed Edit

Use the CENTER button to "highlight" a sub-setting. Then use UP, DOWN, LEFT, and RIGHT to modify it.

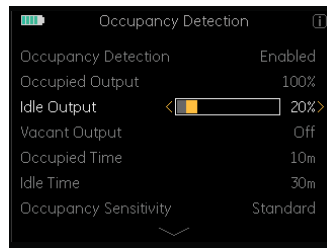

Quick Edit

Use the CENTER button to "highlight" a setting. Then use LEFT and RIGHT to modify it.

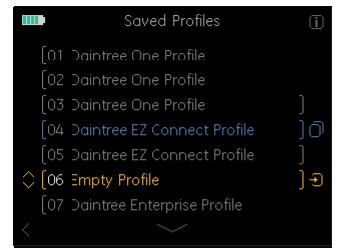

Saved Profiles

Custom profiles can be saved, edited, deleted and utilized through the Saved Profile List.

5 Replacing Batteries



The WHR1 is powered by 2x AA batteries (included beneath the packaging insert).

When replacing batteries, use a quality Alkaline or Lithium battery.

Customer Support

T +1 888 694 3533, option 2

E lightingproinfo@currentlighting.com