

## SAVE THESE INSTRUCTIONS

**WARNING!** Fixtures must be grounded and installed in accordance with the National Electrical Code and all local codes. Failure to do so may increase the **RISK OF PERSONAL INJURY, PROPERTY DAMAGE, FIRE AND DEATH**. Install and use so fixture failures do not cause a hazard and use only in environments for which the product is specifically marked.

**WARNING!** This product contains chemicals known to the State of California to cause cancer, birth defects, and/or other reproductive harm. Thoroughly wash hands after installing, handling, cleaning, or otherwise touching this product.

**CAUTION!** Follow ALL luminaire recommendations, product markings, instructions, restrictions and warnings regarding luminaire operation and burning position. Luminaire label shows electrical and environmental requirements and restrictions.

All electrical work must be done by a qualified electrician.

Turn off electric power to all affected circuits and allow to cool before servicing.

A regularly scheduled maintenance program should be established to retain optimum light output and reduce heat retention. Dusting with a soft, clean, dry cloth is normally sufficient for the optical system. Any accumulation of dust or dirt should be removed regularly.

Carefully read these instructions before installing product. If you do not understand these instructions, before starting any work, contact your Lighting distributor or [lightingtechsupport@currentlighting.com](mailto:lightingtechsupport@currentlighting.com) or (864) 678-1000


Give instructions to facility owner/manager for future reference.

**Tools required: (not included) any tools needed for appropriate wall fasteners, philips head screw driver, pliers**  
**Parts required: (not included) silicone caulk, wall anchors and fasteners appropriate for wall construction type**


### I. FIXTURE MOUNTING WITH JUNCTION BOX

Please select the power and CCT refer to the controller diagram on the last page.


1. Use a screwdriver to remove the screws on both sides of the fixture.

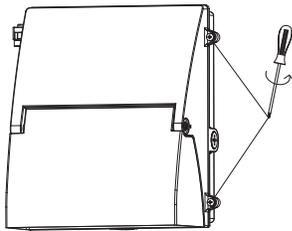


2. Open the fixture and press the top of the CCT switch. Disconnect the photocell wires (black, white). (For emergency models: Also disconnect the emergency switch wires—black, white, red.) Remove the upper cover.

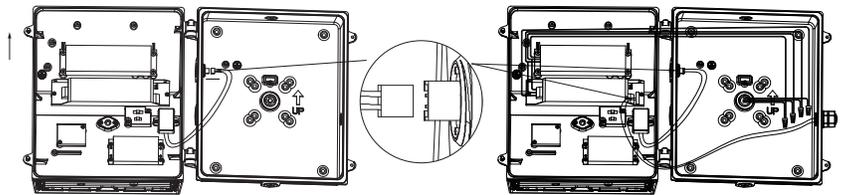


3. Use a screwdriver to remove the plug.

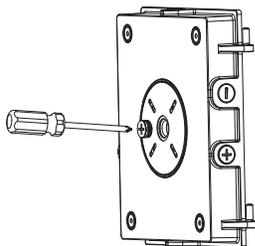


4. Drill through the mounting hole with an electrical drill.

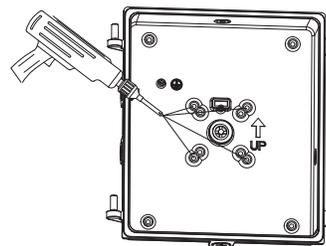

5. Attach EVA cotton pad to bottom shell.

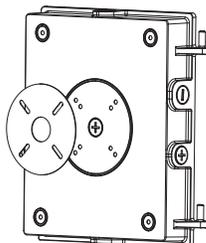



6. Thread the wire through the bottom hole. Lock the bottom shell on the mounting surface with screws.

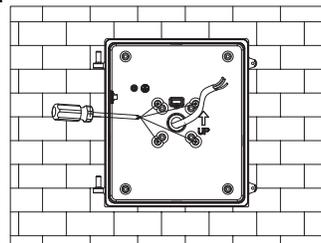

# INSTALLATION INSTRUCTIONS - WAII PACK

7. Connect the photocell line, neutral, and ground wires to the LED driver. (For emergency models: Also connect the emergency switch wires—black, white, red.)

8. Install the cover of the fixture and connect the terminals.

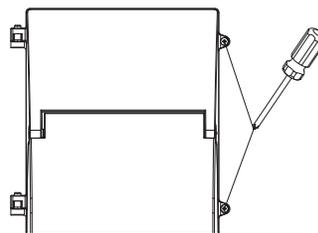
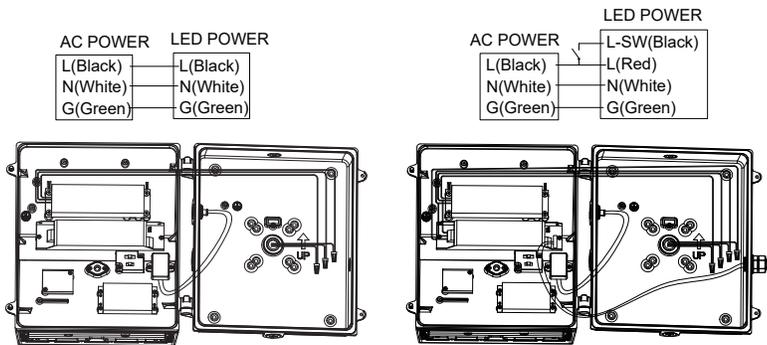


## II. FIXTURE MOUNTING WITH CONDUIT

Please select the power and CCT refer to the controller diagram on the last page.



1. Use a screwdriver to remove the screws on both sides of the fixture.

2. Open the fixture, press the top of cct switch, disconnect the photocell wires (Black, Gray), and remove the upper cover of the fixture.

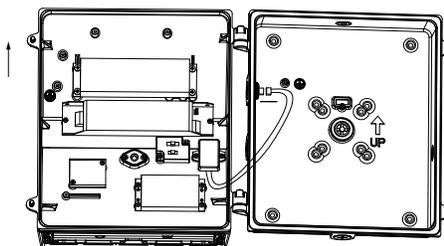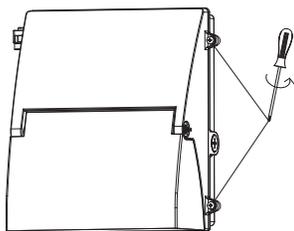



3. Drill through the mounting hole with an electric drill.

4. Drill hole in the wall with an electrical drill.

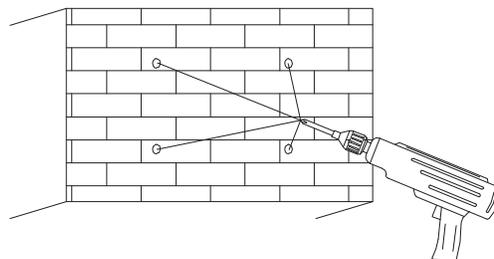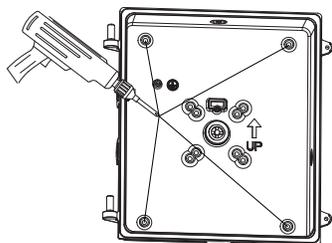


5. Push the expansion rubber plug into the mounting hole on the wall.

6. Use a screwdriver to remove the side plug and attach the EVA cotton pad to the mounting hole.

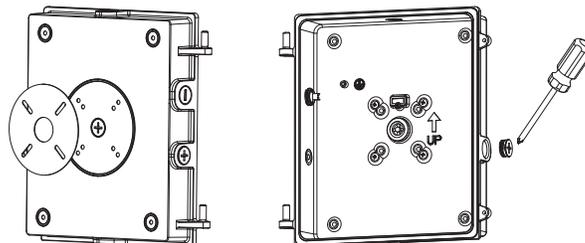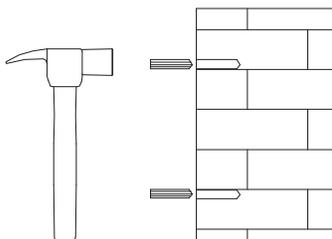


# INSTALLATION INSTRUCTIONS - WAII PACK


7. Attach fixture to the mounting surface using screws.

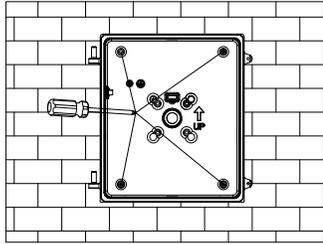


8.1. Connect the photocell line, neutral, and ground wires to the LED driver.

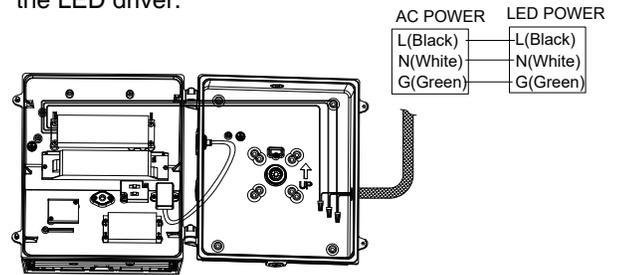

8.2. For emergency models: Connect the photocell line, neutral, and ground wires to the LED driver. Cut the emergency switch wires (black, white, red).

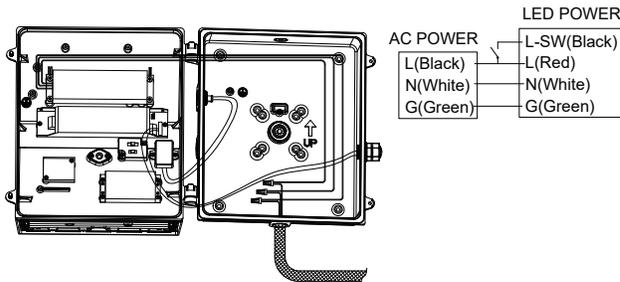


9. Switch power and CCT as part III, close the fixture and tighten down housing screws.

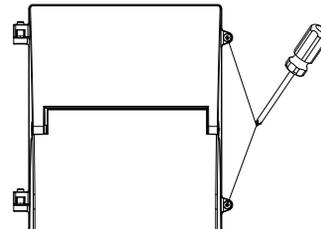


## III. LED ANGLE ADJUSTABLE

1. Angle Adjustment: Use a 4mm hex wrench to loosen the M5 angle-adjustment screw. Adjust the fixture to the desired angle, then retighten the screw.

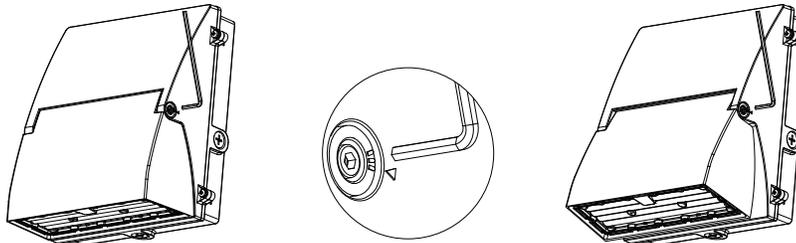


## III. POWER AND CCT SELECTION


SIZE 1 - Medium size

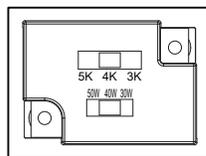

SIZE 2 - Medium size

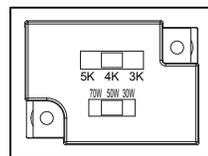

SIZE 3 - Large size

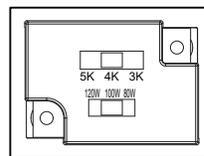

**MOUNTING NOTE: IF JUNCTION BOX IS NOT USED, IT IS RECOMMENDED THAT THE MOUNTING PLATE IS ATTACHED TO A NON-COMBUSTABLE MOUNTING SURFACE. AVOID DRILLING CLOSE TO LIVE WIRES AND MAKE SURE THAT THERE IS AT LEAST 1/2" CLEARANCE. THIS FIXTURE IS INTENDED FOR MOUNTING ON WEATHERPROOF JUNCTION BOX WITH PROVIDED GASKET. AFTER INSTALLATION, USE SILICONE SEALANT TO CREATE A WEATHERPROOF SEAL BETWEEN THE MOUNTING SURFACE AND THE BASE OF THE FIXTURE.**

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.