



## LED Emergency Exit (LUXA Series)



### BEFORE YOU BEGIN

Read these instructions completely and carefully.

When using electrical equipment, basic safety precautions should always be followed including the following.



#### WARNING/AVERTISSEMENT

- Do not use outdoors.
- Do not mount near gas or electric heaters.
- Equipment should be mounted in locations and at heights (MAX: 8ft) where it will not readily be subject to tampering by unauthorized personnel.
- The use of accessory equipment not authorized by the manufacturer may cause an unsafe condition.
- Do not use this equipment for other than its intended purpose.
- Before wiring to power supply, turn off electricity at fuse or circuit breaker.
- Consult local building code for approved wiring and installation.
- Installation and servicing of this equipment should be performed by qualified service personnel.

#### INSTALLER:

- See unit label for additional model specifications


#### WARNING:

- This product contains chemicals known to the State of California to cause cancer, birth defects and/or other reproductive harm. Thoroughly wash hands after installing, handling, cleaning, or otherwise touching this product.

## Save These Instructions

Use only in the manner intended by the manufacturer. If you have any questions, contact the manufacturer.


Ceiling & End Mounting

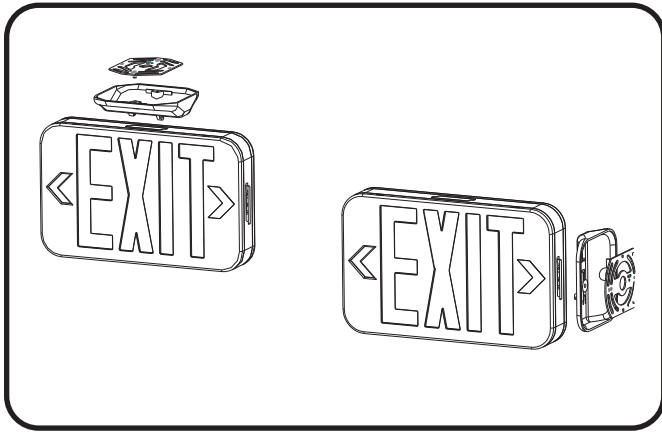

- 1 Connect input as shown in wiring diagram below and fasten canopy to J-box bracket.
- 2 Snap housing to canopy.
- 3 Secure faceplate to housing and remove the proper arrow as required.

NOTICE:  
MUST WEAR GLOVE FOR ALL INSTALLATION PROCESSES

Wiring Diagram

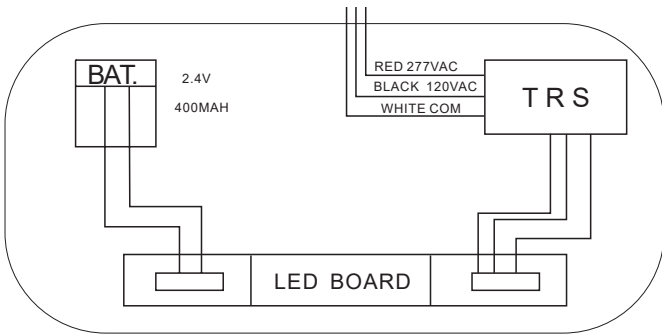

WARNING: UNUSED WIRES MUST BE CAPPED USING ENCLOSED WIRE NUTS.



**RECYCLING INFORMATION**

All steel, aluminum, and thermoplastics parts are recyclable.  
All cartons contain recycled materials.  
Please recycle responsibly.

Specifications subject to change without notice.