

CX Panel to NX Panel (NXP2 Series) Product Conversion Guide

| CX Panel to NX Panel (NXP2 Series) Product Conversion Guide | | | | | | |
|-------------------------------------------------------------|----------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| | CX System | | | NXP2 System | | |
| Part Number | Description | | Part Nu | mber | Description / Notes | |
| CX082S00SPM | CX 8 Relay Panel, 120/277V, 0 Relays, Master | | NXP2-PNL-8-0-U-S | | NX 8-Relay Panel, 0 Relays, 120/277V, Surface Mount | |
| CX082S00SPS | CX 8 Relay Panel, 120/277V, 0 Relays, Secondary | | NXP2-PNL-8-0-U-S | | NX 8-Relay Panel, 0 Relays, 120/277V, Surface Mount | |
| CX082S082NM | CX 8 Relay Panel, 120/277V, 8-20A/1P Relays, Master | | NXP2-PNL-8-8-U-S | | NX 8-Relay Panel, 8-20A/1P Relays, 120/277V, Surface Mount | |
| CX082S082NS | CX 8 Relay Panel, 120/277V, 8-20A/1P Relays, Secondary | | NXP2-PNL-8-8-U-S | | NX 8-Relay Panel, 8-20A/1P Relays, 120/277V, Surface Mount | |
| CX082S083LM | CX 8 Relay Panel, 120/277V, 8-30A/1P Relays, Master | | NXP2-PNL-8-8-U-S | | NX 8-Relay Panel, 8-20A/1P Relays, 120/277V, Surface Mount (30A Relays Not Available) | |
| CX082S083LS | CX 8 Relay Panel, 120/277V, 8-30A/1P Relays, Secondary | | NXP2-PNL-8-8-U-S | | NX 8-Relay Panel, 8-20A/1P Relays, 120/277V, Surface Mount (30A Relays Not Available) NX 16-Relay Panel, 8-20A/2P Relays, 120/277V, Surface Mount (NOTE: | |
| CX082S08TNM | CX 8 Relay Panel, 120/277V, 8-20A/2P Relays, Master | | NXP2-EIT-16-8DP-UNV-S | | Double Pole Relays Takes Up Two Relay Slots; 8-20A/2P Relays Requires 16-Relay Panel) | |
| CX083S00SPM | CX 8 Relay Panel, 120/347V, 0 Relays, Master | | NXP2-EIT-8-347-S | | NX 8-Relay Panel, 0 Relays, 347V, Surface Mount | |
| CX083S00SPS | CX 8 Relay Panel, 120/347V, 0 Relays, Secondary | | NXP2-EIT-8-347-S | | NX 8-Relay Panel, 0 Relays, 347V, Surface Mount | |
| CX083S083LM | CX 8 Relay Panel, 120/347V, 8-30A/1P Relays, Master | | NXP2-EIT-8-8SP-347-S | | NX 8-Relay Panel, 8-20A/1P Relays, 347V, Surface Mount | |
| CX083S083LS | CX 8 Relay Panel, 120/347V, 8-30A/1P Relays, Secondary | | NXP2-EIT-8-8SP-347-S | | NX 8-Relay Panel, 8-20A/1P Relays, 347V, Surface Mount | |
| CX162S00SPM | CX 16 Relay Panel, 120/277V, 0 Relays, Master | | NXP2-PNL-16-0-U-S | | NX 16-Relay Panel, 0 Relays, 120/277V, Surface Mount | |
| CX162S00SPS | CX 16 Relay Panel, 120/277V, 0 Relays, Secondary | | NXP2-PNL-16-0-U-S | | NX 16-Relay Panel, 0 Relays, 120/277V, Surface Mount | |
| CX162S162NM | CX 16 Relay Panel, 120/277V, 16-20A/1P Relays, Master | | NXP2-PNL-16-16-U-S | | NX 16-Relay Panel, 16-20A/1P Relays, 120/277V, Surface Mount | |
| CX162S162NS | CX 16 Relay Panel, 120/277V, 16-20A/1P Relays, Secondary | | NXP2-PNL-16-16-U-S | | NX 16-Relay Panel, 16-20A/1P Relays, 120/277V, Surface Mount | |
| CX162S163LM | CX 16 Relay Panel, 120/277V, 16-30A/1P Relays, Master | | NXP2-PNL-16-16-U-S | | NX 16-Relay Panel, 16-20A/1P Relays, 120/277V, Surface Mount (30A Relays Not Available) | |
| CX162S163LS | CX 16 Relay Panel, 120/277V, 16-30A/1P Relays, Secondary | | NXP2-PNL-16-16-U-S | | NX 16-Relay Panel, 16-20A/1P Relays, 120/277V, Surface Mount (30A Relays Not Available) NX 32-Relay Panel, 16-20A/2P Relays, 120/277V, Surface Mount (NOTE: | |
| CX162S16TNM | CX 16 Relay Panel, 120/277V, 16-20A/2P Relays, Master | | NXP2-EIT-32-16DP-UNV-S | | Double Pole Relays Takes Up Two Relay Slots; 16-20A/2P Relays Requires 32-Relay Panel) | |
| CX163S00SPM | CX 16 Relay Panel, 120/347V, 0 Relays, Master | | NXP2-EIT-16-347-S | | NX 16-Relay Panel, 0 Relays, 347V, Surface Mount | |
| CX163S00SPS | CX 16 Relay Panel, 120/347V, 0 Relays, Secondary | | NXP2-EIT-16-347-S | | NX 16-Relay Panel, 0 Relays, 347V, Surface Mount | |
| CX163S163LM | CX 16 Relay Panel, 120/347V, 16-30A/1P Relays, Master | | NXP2-EIT-16-16SP-347-S | | NX 16-Relay Panel, 16-20A/1P Relays, 347V, Surface Mount | |
| CX242S00SPM | CX 24 Relay Panel, 120/277V, 0 Relays, Master | | NXP2-PNL-24-0-U-S | | NX 24-Relay Panel, 0 Relays, 120/277V, Surface Mount | |
| CX242S00SPS | CX 24 Relay Panel, 120/277V, 0 Relays, Secondary | | NXP2-PNL-24-0-U-S | | NX 24-Relay Panel, 0 Relays, 120/277V, Surface Mount | |
| CX242S242NM | CX 24 Relay Panel, 120/277V, 24-20A/1P Relays, Master | | NXP2-PNL-24-24-U-S | | NX 24-Relay Panel, 24-20A/1P Relays, 120/277V, Surface Mount | |
| CX242S242NS | CX 24 Relay Panel, 120/277V, 24-20A/1P Relays, Secondary | | NXP2-PNL-24-24-U-S | | NX 24-Relay Panel, 24-20A/1P Relays, 120/277V, Surface Mount | |
| CX242S243LM | CX 24 Relay Panel, 120/277V, 24-30A/1P Relays, Master | | NXP2-PNL-16-16-U-S | | NX 16-Relay Panel, 16-20A/1P Relays, 120/277V, Surface Mount (30A Relays Not Available) | |
| CX242S243LS | CX 24 Relay Panel, 120/277V, 24-30A/1P Relays, Secondary | | NXP2-PNL-16-16-U-S | | NX 16-Relay Panel, 16-20A/1P Relays, 120/277V, Surface Mount (30A Relays Not Available) | |
| CX242S24TNM | CX 24 Relay Panel, 120/277V, 24-20A/2P Relays, Master | | NXP2-EIT-48-24DP-U-S | | NX 48-Relay Panel, 24-20A/2P Relays, 120/277V, Surface Mount (NOTE: Double Pole Relays Takes Up Two Relay Slots; 24-20A/2P Relays Requires 48-Relay Panel) | |
| CX243S00SPM | CX 24 Relay Panel, 120/347V, 0 Relays, Master | | NXP2-EIT-24-347-S | | NX 24-Relay Panel, 0 Relays, 347V, Surface Mount | |
| CX243S00SPS | CX 24 Relay Panel, 120/347V, 0 Relays, Secondary | | NXP2-EIT-24-347-S | | NX 24-Relay Panel, 0 Relays, 347V, Surface Mount | |
| CX243S243LM | CX 24 Relay Panel, 120/347V, 24-30A/1P Relays, Master | | NXP2-EIT-24-24SP-347-S | | NX 24-Relay Panel, 24-20A/1P Relays, 347V, Surface Mount | |
| CXDIMCONTRBD | CX Panel 8-Channel Dimming Board | | | N/A | Not Applicable - NX Panel 2.0 Has Integrated Dimming Channels | |
| CXMSTRCONTR2 | CX Panel Master Controller Replacement | Intelligence of the second sec | NX (SCHE) | N/A | NXBTC + NX Lighting Controls mobile app | |
| CXR2N | CX Relay, 20A/1P | | | NXP2-RL-SP | NX Single Pole Relay | |
| CXR3L | CX Relay, 30A/1P | | | NXP2-RL-SP | NX Single Pole Relay | |
| CXR3LEM | CX Emergency Relay, 30A/1P | | | NXP2-UL924KIT | Use NXP2 UL924 Kit To Provide Emergency Lighting Control For Panel | |
| CXRTC | CX Relay, 20A/2P, N/C | | | NXP2-RL-DP | NX Double Pole Relay | |
| CXRTN | CX Relay, 20A/2P, N/O | | | NXP2-RL-DP | NX Double Pole Relay | |
| CXSW-1 | CX Switch Station, 1-Button | | | NXSWR-1 | NX Switch Station, 1-Button | |
| CXSW-2 | CX Switch Station, 2-Button | | | NXSWR-2 | NX Switch Station, 2-Button | |
| CXSW-3 | CX Switch Station, 3-Button | | | NXSWR-3 | NX Switch Station, 3-Button | |
| CXSW-4 | CX Switch Station, 4-Button | | | NXSWR-4 | NX Switch Station, 4-Button | |
| CXSW-6 | CX Switch Station, 6-Button | | | NXSWR-6 | NX Switch Station, 6-Button | |
| CXPBAR | CX Panel Relay Barrier | | | NXP2-PBAR | NX Panel Relay Barrier | |