



NOTES:

1. DO NOT attempt to power more than 4 devices (sensors or slave packs) from a single power pack.
2. For the UVPP to turn on the load, the Occupancy sensor must detect an occupant and the coil of the RR1SPDTC must be energized by the Line Voltage Switch not provided by HBA.
3. If the Line Voltage switch is in the OFF position the load cannot turn ON per Occupancy alone.



HUBBELL
Building Automation

(888) 698-3242
(512) 450-1100

9601 Dessau Rd. - Bldg 1
Austin, Tx 78745

1 Circuit with 2 Occupancy Sensors
with a Line Voltage Switch Overriding the
Control wire through a RR1SPDTC Relay

THIS DOCUMENT AND SPECIFICATIONS DESCRIBED WITHIN ARE THE EXCLUSIVE PROPERTY OF HUBBELL BUILDING AUTOMATION ISSUED IN THE STRICTEST CONFIDENCE, AND SHALL NOT BE REPRODUCED, COPIED OR USED WITHOUT PRIOR WRITTEN PERMISSION.