

## NOTE:

Disconnect power prior to installation.

## NXRM-H AFTER THE NXSM OCCUPANCY SENSOR USING THE NXFM-O, 2-DIMMING DRIVERS



701 Millennium Blvd. Main Switchboard: (864) 678-1000 Greenville, SC 29607 Technical Service: (800) 888-8006 www.Hubbell-Automation.com

THIS DOCUMENT AND SPECIFICATIONS
DESCRIBED WITHIN ARE THE
EXCLUSIVE PROPERTY OF
HUBBELL CONTROL SOLUTIONS ISSUED
IN THE STRICTEST CONFIDENCE, AND
SHALL NOT BE REPRODUCED,
COPIED OR USED WITHOUT PRIOR
WRITTEN PERMISSION.

DRAWN BY: DATE: 09/13/2017
PRODUCT FAMILY:

