

NOTE:

Disconnect power prior to installation.

NXRM-H BEFORE THE NXSM OCCUPANCY SENSOR USING THE NXFM-O, 2-DIMMING DRIVERS



Greenville, SC 29607

Main Switchboard: (864) 678-1000 Technical Service: (800) 888-8006 www.Hubbell-Automation.com

THIS DOCUMENT AND SPECIFICATIONS DESCRIBED WITHIN ARE THE EXCLUSIVE PROPERTY OF JBBELL CONTROL SOLUTIONS ISSUED IN THE STRICTEST CONFIDENCE, AND SHALL NOT BE REPRODUCED, COPIED OR USED WITHOUT PRIOR WRITTEN PERMISSION.

DATE: 09/13/2017

NX