



**Notes:**

1. Connect one end CAT5 cable to the Smart Pack or Zone 5 Controller.
2. Connect other end of CAT5 cable to the RJ45 Adapter.
3. Connect Occupancy Sensor or Daylight Sensor to the RJ45 per color coded wires.



**HUBBELL**  
Building Automation

Daylight and Occupancy Sensor  
with the RJ45 Adapter

THIS DOCUMENT AND SPECIFICATIONS DESCRIBED WITHIN ARE THE EXCLUSIVE PROPERTY OF HUBBELL BUILDING AUTOMATION ISSUED IN THE STRICTEST CONFIDENCE, AND SHALL NOT BE REPRODUCED, COPIED OR USED WITHOUT PRIOR WRITTEN PERMISSION.