


RA-RARBC-ACC BACKLIGHT CONTROL

ACCESSORY

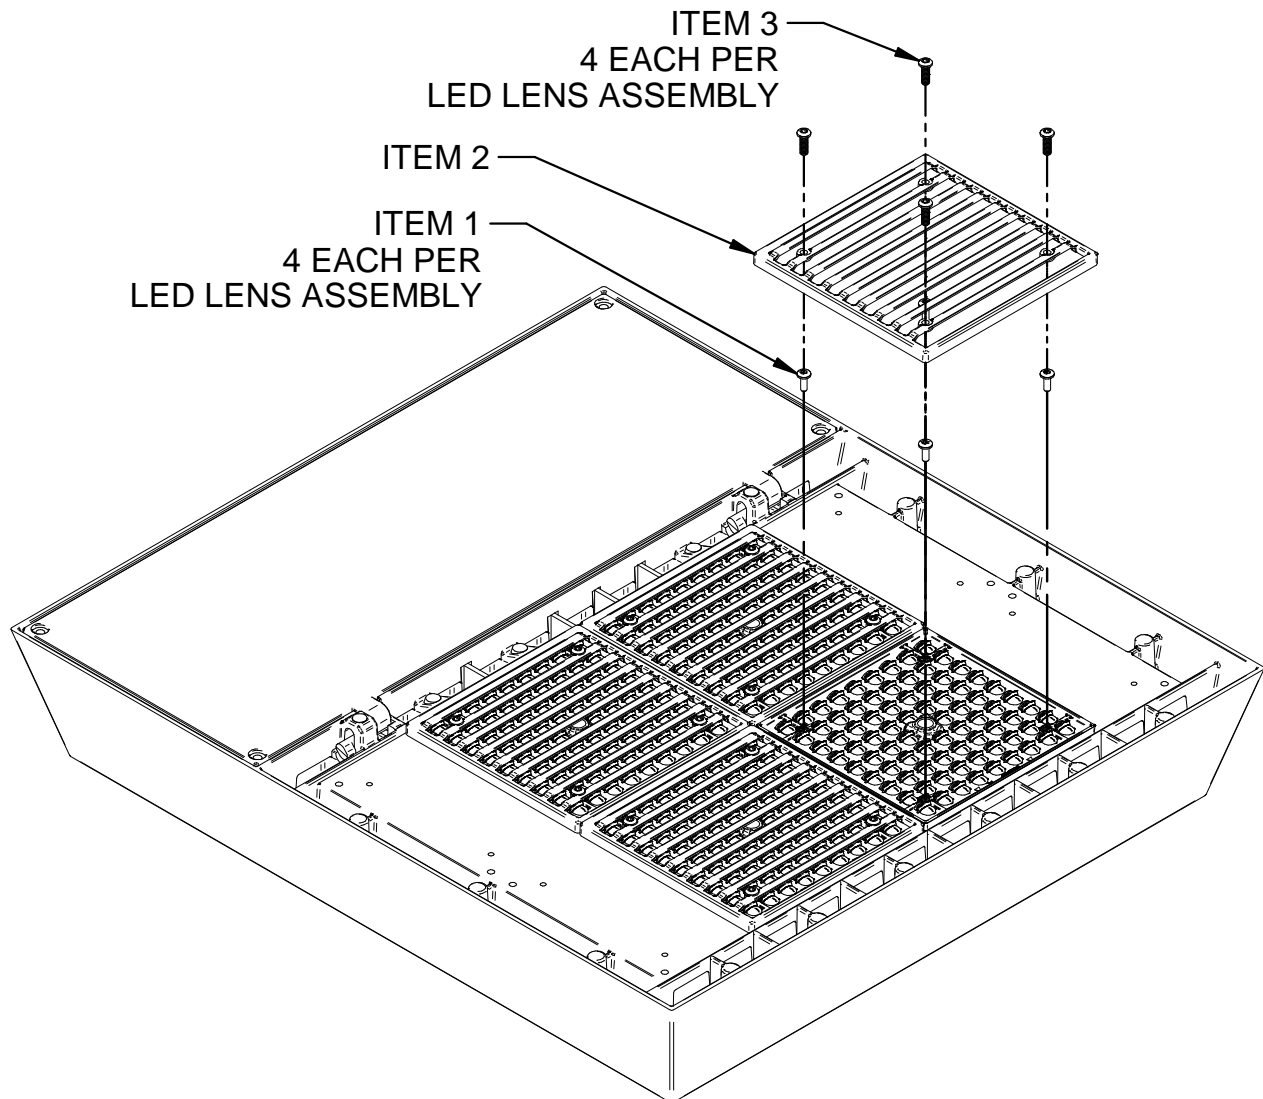

Installation instructions:

1. Tools required: T-15 Torx Driver.
2. Remove the lens hold-down screws (Item 1). These screws will not be re-used. Do not remove, lift or reposition the LED lens assembly.
3. Position the Backlight Control Shield (Item 2) over the lens assembly. It will only fit correctly one way, and the screw holes will line up.
4. Install the supplied 6-32 x 1/2 Torx Head screws (Item 3).
Torque to no more than 10 in-lbs.
5. Repeat steps 2 through 4 for each LED lens assembly.

Shipping Package Contents:

Backlight Control Shield

Qty. 1 (RARBC80L)
Qty. 2 (RARBC160L)
Qty. 4 (RARBC320L)
Qty. 6 (RARBC480L)
Material: Polypropylene

6-32 x 1/2 Torx Head Screw

Qty. 4 (RARBC80L)
Qty. 8 (RARBC160L)
Qty. 16 (RARBC320L)
Qty. 24 (RARBC480L)


Current Lighting
701 Millennium Blvd.
Greenville, SC 29607

Technical Support: (864) 678-1000
Fax: (864) 898-1065
www.currentlighting.com

Instruction Sheet: 93099926 Rev C

RA-RARBC-ACC CONTROLE DU RETROECLAIRAGE

ACCESSOIRES

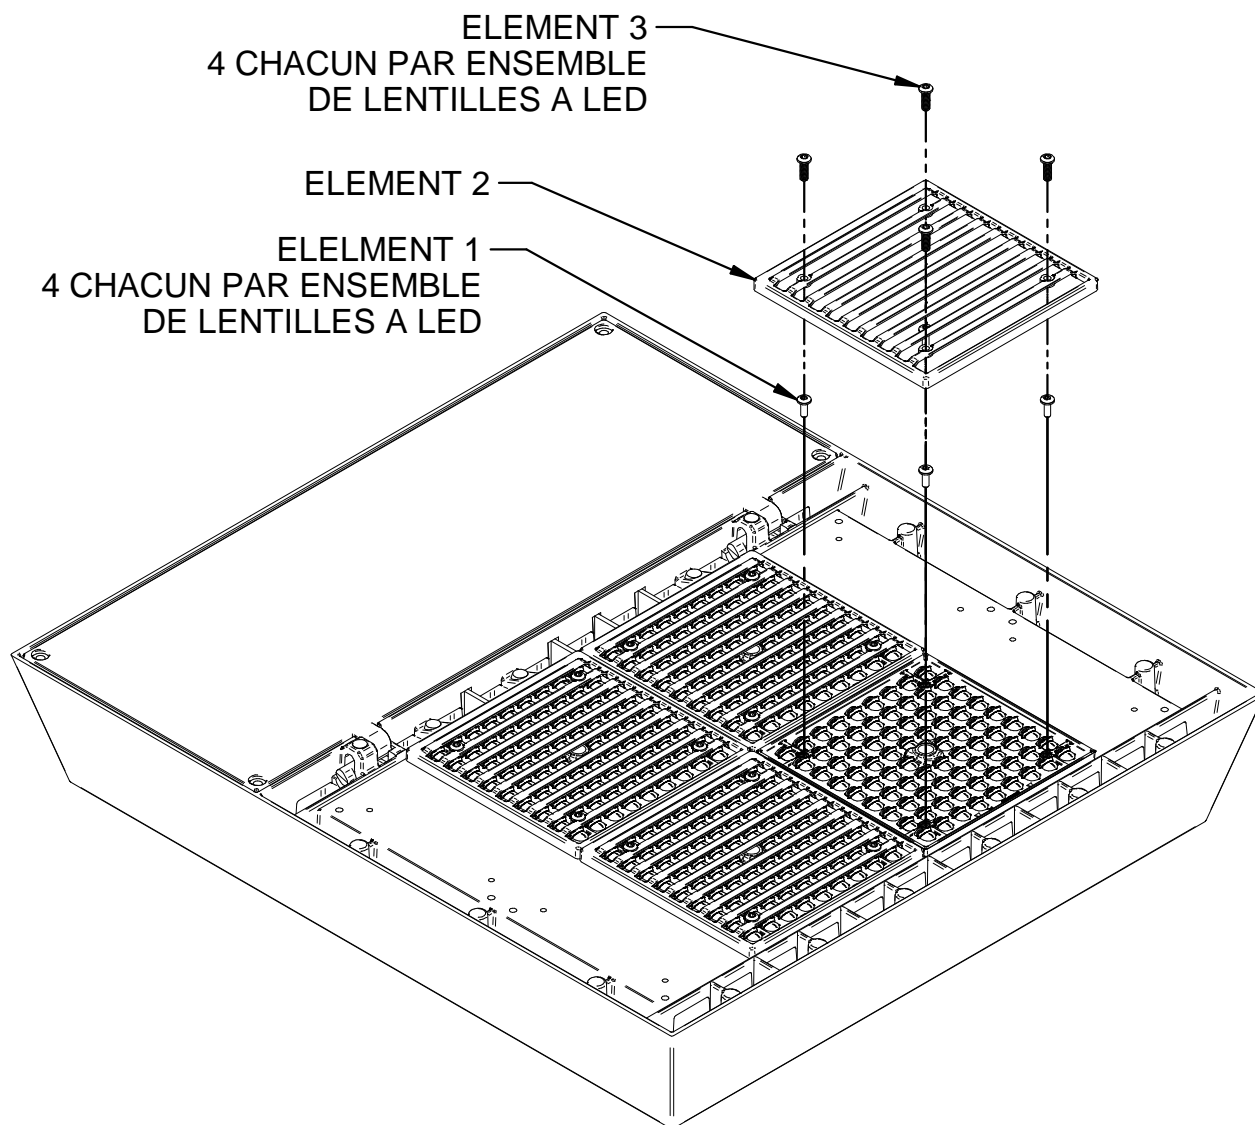

ELEMENT 3
4 CHACUN PAR ENSEMBLE
DE LENTILLES A LED

ELEMENT 2

ELEMENT 1
4 CHACUN PAR ENSEMBLE
DE LENTILLES A LED

Instructions d'installation:

1. Outils nécessaires: Tournevis Torx T-15.
2. Retirez les vis de fixation de l'objectif (élément 1). Ces vis ne seront pas réutilisées. Ne pas retirer, soulever ou repositionner l'ensemble lentille à LED.
3. Positionnez le bouclier de commande de rétroéclairage (élément 2) sur l'objectif. Il ne s'adaptera correctement que dans un sens et les trous de vis s'aligneront.
4. Installez les vis à tête Torx 6-32 x 1/2 fournies (élément 3).
Couple à pas plus de 10 lb-po.
5. Répétez les étapes 2 à 4 pour chaque ensemble de lentille à LED.

Contenu du colis d'expédition:

Bouclier de contrôle de rétroéclairage

Qty. 1 (RARBC80L)
Qty. 2 (RARBC160L)
Qty. 4 (RARBC320L)
Qty. 6 (RARBC480L)
Matériau: Polypropylène

Vis à tête Torx 6-32 x 1/2

Qty. 4 (RARBC80L)
Qty. 8 (RARBC160L)
Qty. 16 (RARBC320L)
Qty. 24 (RARBC480L)

Current Lighting
701 Millennium Blvd.
Greenville, SC 29607

Technical Support: (864) 678-1000
Fax: (864) 898-1065
www.currentlighting.com

Instruction Sheet: 93099926 Rev C