

DIMENSION A


JOINING WITH 24" LINEAR FIXTURES:

3L - 12.81"
4L - 11.56"
6L - 9.56"

JOINING WITH 36", 48", 60", 72", OR 96" LINEAR FIXTURES:

3L - 16.81"
4L - 15.56"
6L - 13.56"

PLAN VIEW - OUTSIDE CORNER

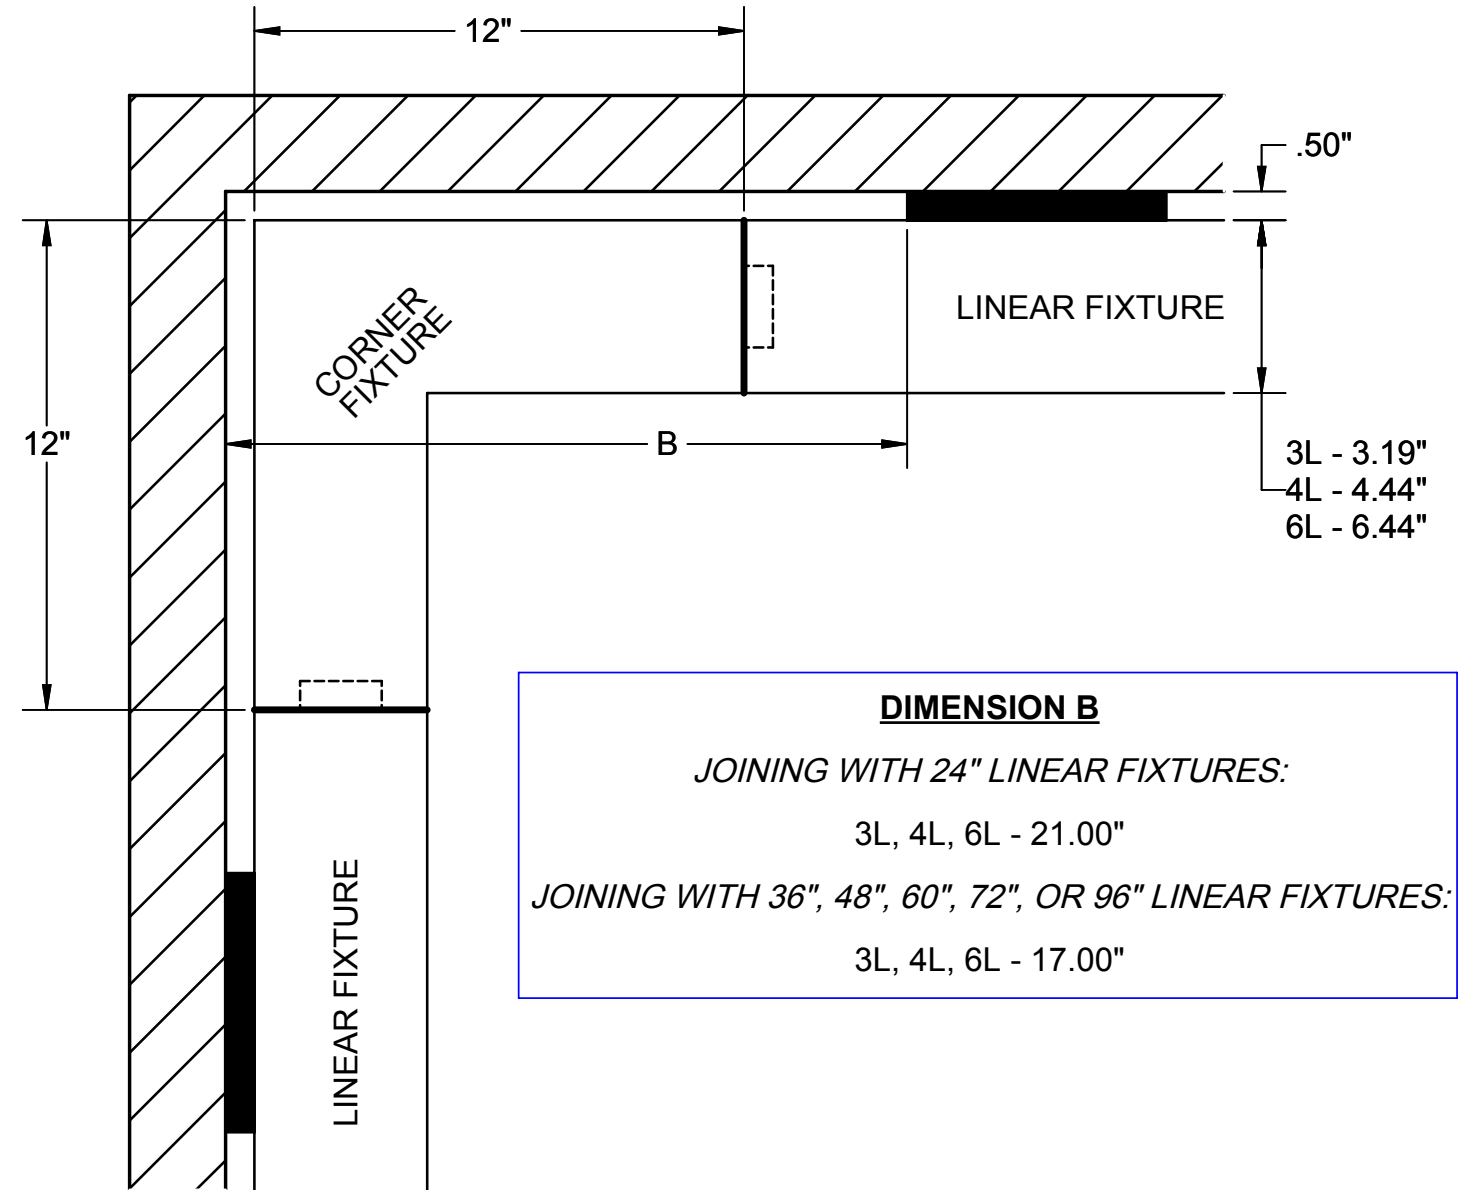

DIMENSION B

JOINING WITH 24" LINEAR FIXTURES:

3L, 4L, 6L - 21.00"

JOINING WITH 36", 48", 60", 72", OR 96" LINEAR FIXTURES:

3L, 4L, 6L - 17.00"

PLAN VIEW - INSIDE CORNER

GENERAL NOTES: (READ SHEETS COMPLETELY BEFORE STARTING)

1. **USE THIS INSTRUCTION SHEET IN CONJUNCTION WITH INSTRUCTION SHEET 510637.**
2. LEAVE PROTECTIVE WRAPPING MATERIAL ON FIXTURE(S) UNTIL START OF INSTALLATION TO PROTECT FINISH FROM DAMAGE.
3. FIXTURES ARE PROVIDED WITH FACTORY-INSTALLED BRANCH CIRCUIT WIRING. REFER TO SUPPLEMENTAL INSTRUCTION SHEET WHEN MAKING CONNECTIONS.
4. CORNER FIXTURES ARE NOT PROVIDED WITH AND DO NOT USE WALL BRACKETS.

TOOLS REQUIRED	SUPPLIED BY INSTALLER
- SCREWDRIVER/DRILL	

1

(OUTSIDE CORNER SHOWN)

LOCATE THE WALL BRACKETS OF THE LINEAR FIXTURES ADJACENT TO THE CORNER; SEE PLAN VIEW ON PAGE 1 FOR DIMENSIONS. MOUNT LINEAR FIXTURE AT ONE END OF THE CORNER. FOLLOW INSTRUCTION SHEET 510637.

2

REMOVE LED REFLECTOR MODULES OF CORNER FIXTURE BY REMOVING 8-32 MACHINE SCREWS. ALLOW MODULES TO HANG DOWN ON NYLON TETHERS.

3

(SOME PARTS HIDDEN)

JOIN CORNER FIXTURE WITH MOUNTED LINEAR FIXTURE BY ALIGNING THE EXTRUSION BRACKET AND INSERTING IT INTO THE ADJOINING FIXTURE. SECURE WITH 6-20 X 2" LONG HEX HEAD SCREWS. DO NOT OVERTIGHTEN WITH POWER DRILL. ROUTE BRANCH CIRCUIT WIRING THROUGH FIXTURE JOINT.

4

NOTE: AS SHOWN, FIXTURES HAVE ONE MALE END (WITH EXTRUSION BRACKET) AND ONE FEMALE END.

INSTALL LINEAR FIXTURE AT OTHER SIDE OF CORNER AND ATTACH FIXTURES BY FOLLOWING THE PROCEDURE IN STEP 5. MAKE ELECTRICAL CONNECTIONS.

5

REPLACE LED REFLECTOR MODULE. CLEAN FIXTURE EXTERIORS WITH A GENERAL WINDOW CLEANER.

(FIXTURE HOUSINGS HIDDEN FOR CLARITY)

ATTACH ROW JOINT COVER PLATES, AS SHOWN, AT BOTH FIXTURE JOINTS.

6

(LINEAR FIXTURES HIDDEN FOR CLARITY)

SNAP DIFFUSERS INTO BOTTOM OF HOUSING AS SHOWN. TO REMOVE, INSERT SCREWDRIVER OR FLAT HEAD PRY TOOL INTO SIDE OF HOUSING AND PULL DOWN.

LK DUST COVER OPTION (SHIPPED SEPARATELY): PLACE DUST COVER ONTO LED REFLECTOR MODULE ASSEMBLY. MAGNETS HOLD THE DUST COVER IN PLACE.