

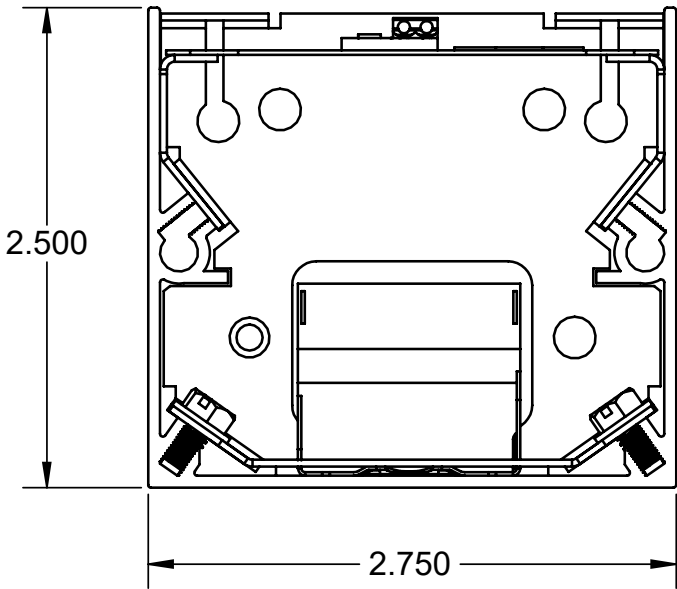
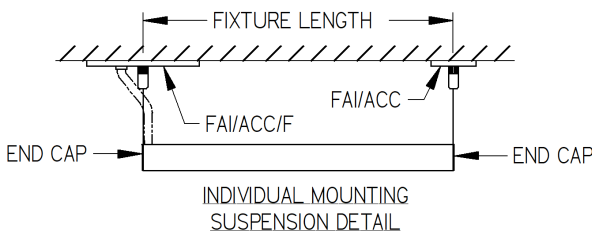


PENDANT MOUNT

STD CROSS SECTION

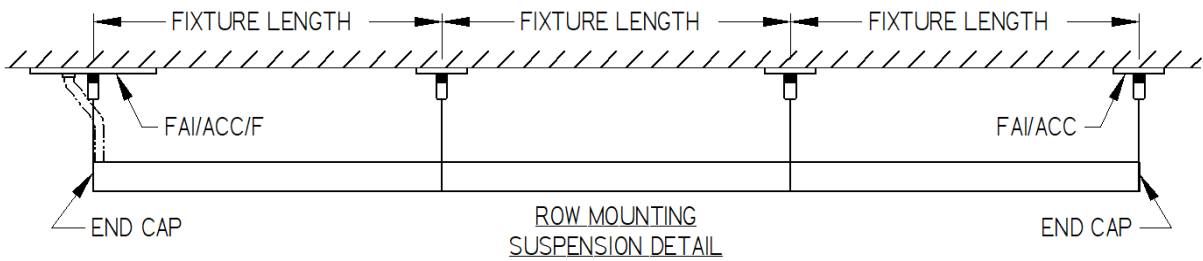


LPA CROSS SECTION


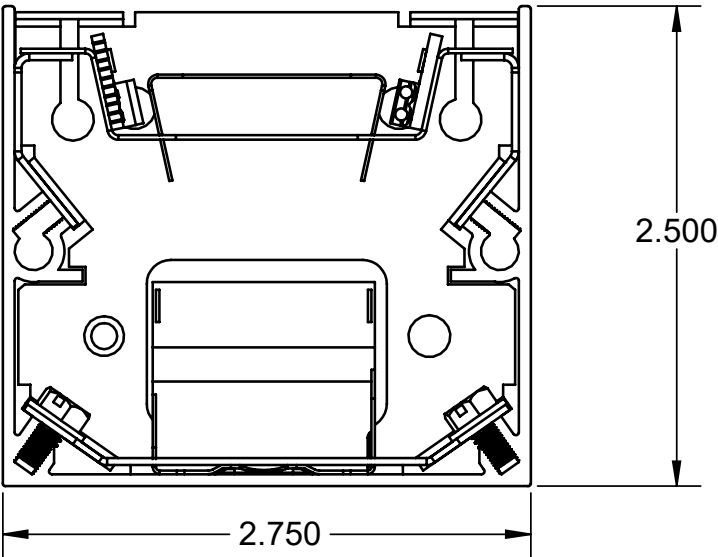


WALL MOUNT

STD CROSS SECTION

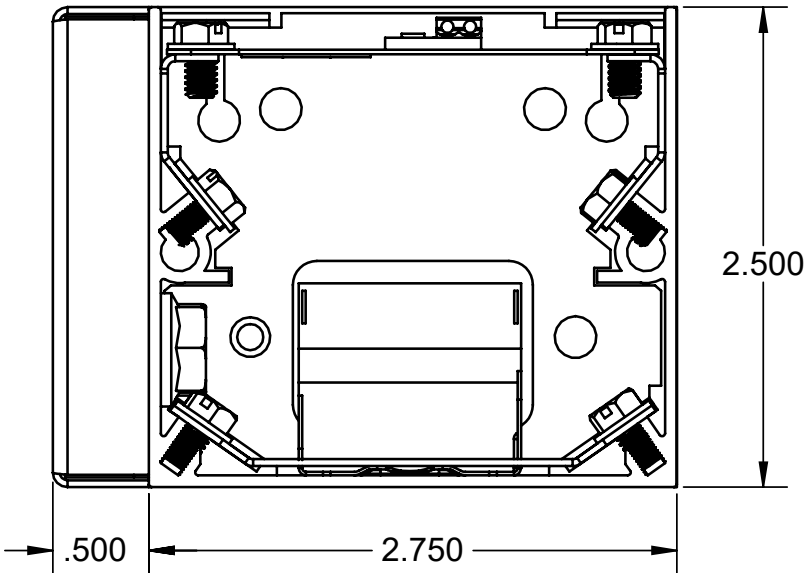

LPA CROSS SECTION

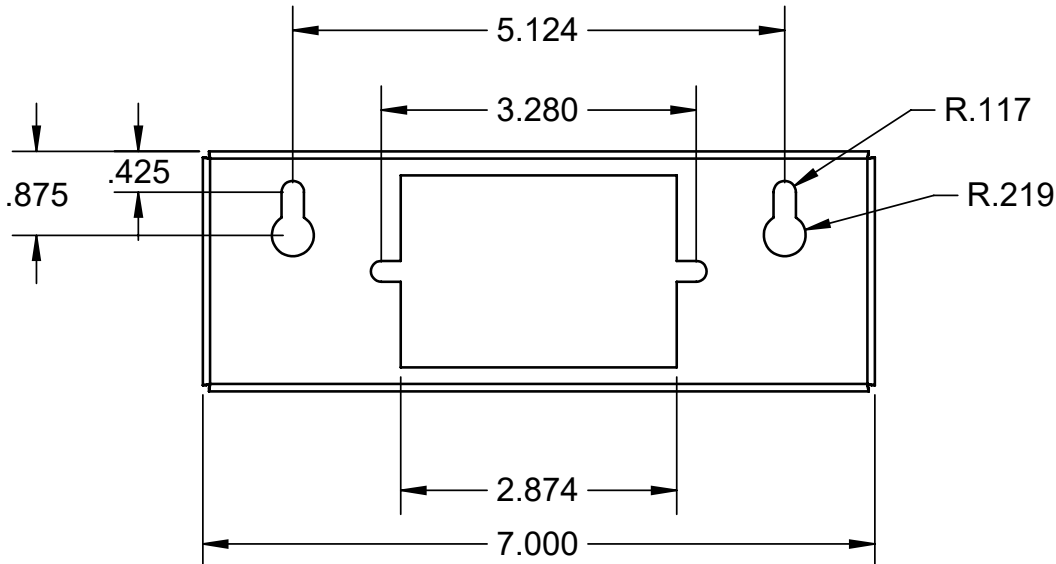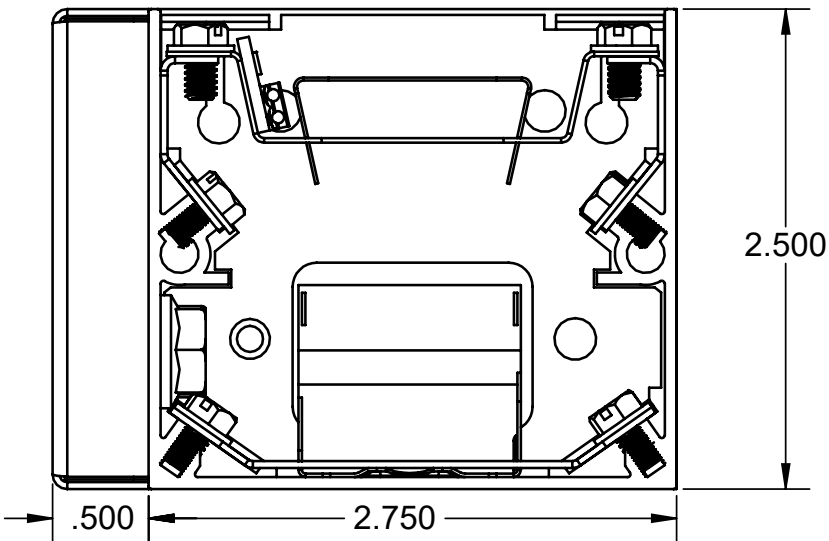


- NOTES:
1. READ ENTIRE INSTRUCTION SHEET BEFORE INSTALLATION.
  2. FIXTURES ARE SUPPLIED WITH FACTORY INSTALLED BRANCH CIRCUIT WIRING. REFER TO SUPPLEMENTAL INSTRUCTION SHEET FOR MAKING CONNECTIONS.
  3. AIRCRAFT CABLES AND/OR WALL BOX ASSEMBLIES, AND ENDCAP KITS ARE SHIPPED SEPARATELY.

TOOLS REQUIRED


7/16" SOCKET/WRENCH (WALL MOUNT ONLY)  
11/32" WRENCH/SOCKET OR PLIERS

SUPPLIED BY INSTALLER


1 LOCATE AIRCRAFT CABLES ALONG A STRAIGHT LINE IN CEILING PER DIMENSIONS SHOWN ON PAGE 1 (REFER TO INSTRUCTION SHEET 510481)

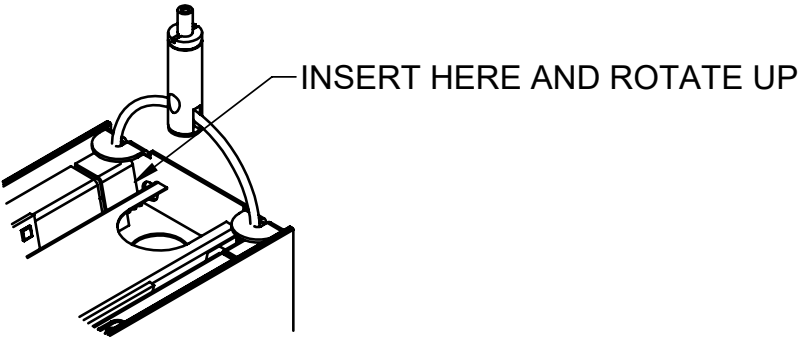


ON BOTH SIDES OF FIRST FIXTURE IN ROW (OR INDIVIDUAL) INSTALL SWAGES ON YOKES BY INSERTING INTO HOLES IN END HEADER ALONG FIXTURE AXIS AND ROTATING UPWARDS

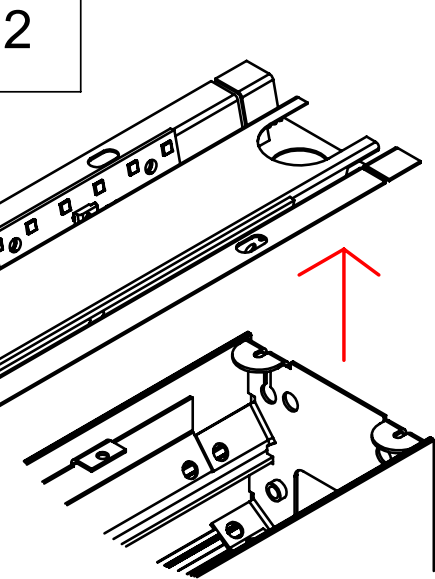


REMOVE LED ASSEMBLY BY REMOVING (6) #8 SHEET METAL SCREWS

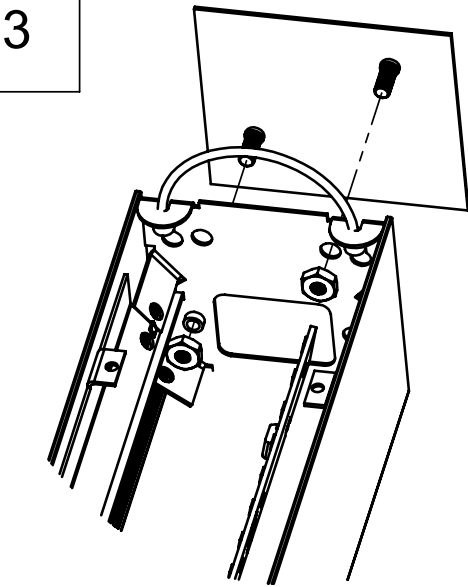


INSTALL END CAP ON BEGINNING OF ROW SIDE (OR BOTH SIDES OF INDIVIDUAL FIXTURE) BY INSERTING WELD STUDS INTO PROPER HOLES (BE CAUTIOUS OF LEFT HAND VS RIGHT HAND) AND SECURING WITH #8-32 NUTS PROVIDED IN END CAP KIT (SHIPPED SEPARATELY)

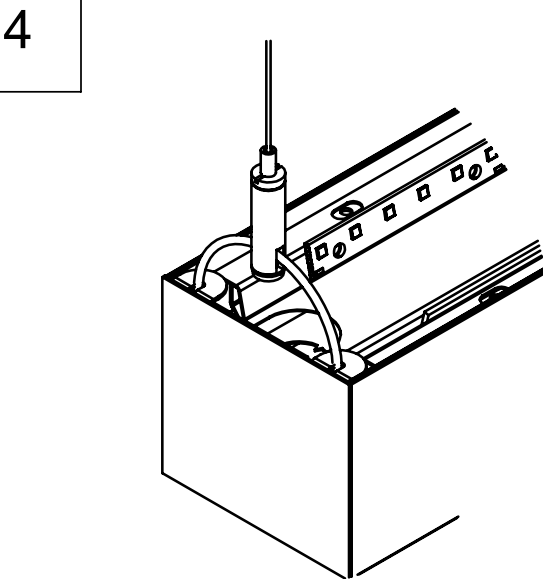


RAISE FIXTURE UP AND INSTALL CABLE HANGERS ONTO AIRCRAFT CABLE AND MAKE WIRING CONNECTIONS

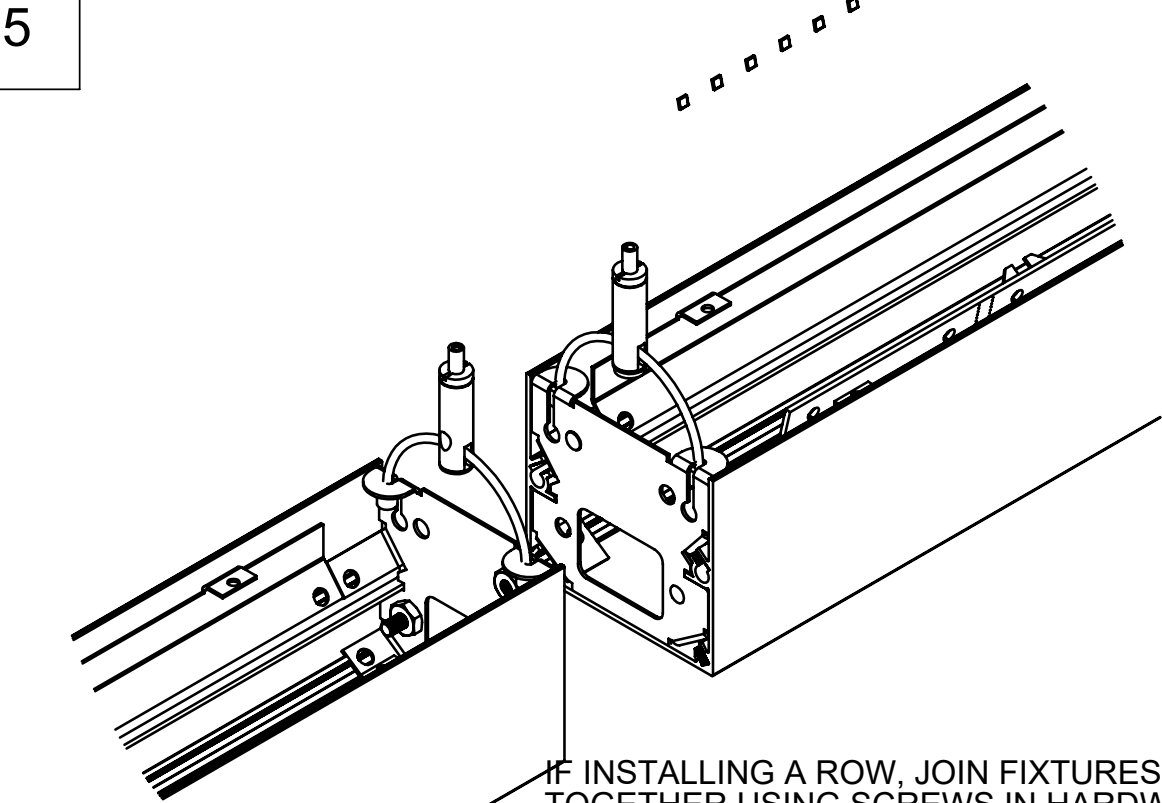

IF INSTALLING A ROW, JOIN FIXTURES TOGETHER USING SCREWS IN HARDWARE KIT. WIRING CONNECTIONS CAN GO THROUGH BOTTOM HOLES IN END HEADERS

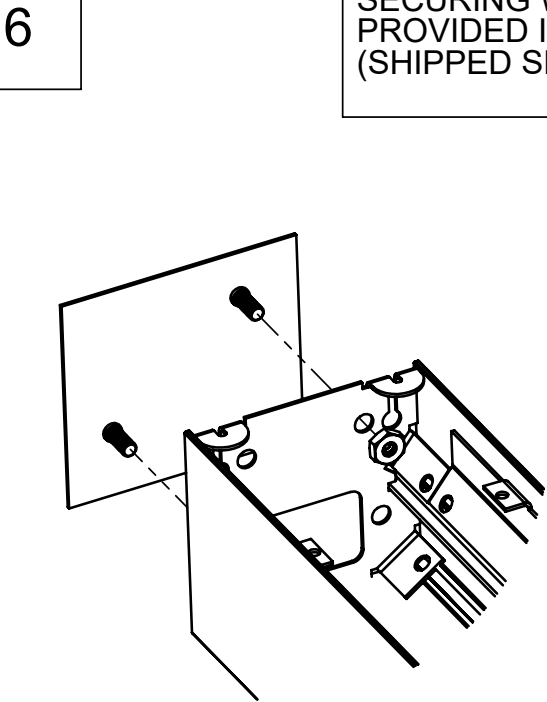

REPEAT STEP 3 AND INSTALL END OF ROW END CAP

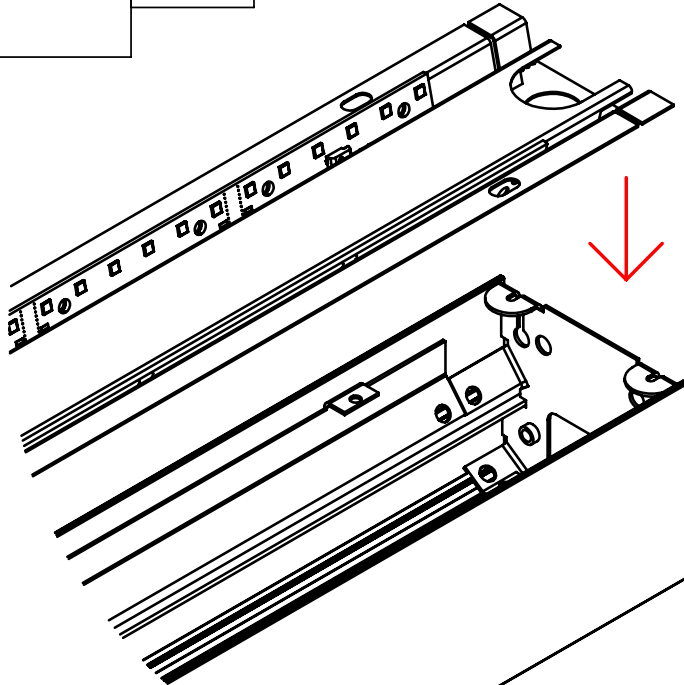

RE-INSTALL LED ASSEMBLY

