## INSTALLATION INSTRUCTIONS FO FLEX CORD/HOOK/LOOP ASSEMBL CH, BL, SW, LW, ML

#### WARNINGS

- Install, operate, and maintain to meet all applicable codes.
- Handle and secure fixture(s) so they cannot fall.

# CH - INSTALLATION OF FLEX CORD (FIG. 1)

### ITEMS NEEDED FOR INSTALLATION:

ITEM NO	<u>DESCRIPTION</u>	QTY
1	CORD, ACS, FLEX	1
2	HOOK, AND LOOP, DIECAST CI	1
3	WASHER, .43" ID, .91" OD, CORDGRIP	3
4	GSKT, RUB BUSHG, 1/8, .41 ID, .93 OD	1
5	CORD-GRIP, 16/3, .34D/.41D, #23	1
6	BRKT, HOOK CLOSURE, HOOK/LOOP	1
7	SCR, 8-32X1/2, HWSD, ROLK, STL, MGD	1

- 1. Push flex cord (1) through the thru-hole of the die cast hook (2).
- 2. After the cord end passes through the cast hook, a cordgrip washer (3), a rubber gasket (4), and a second washer (3) are to be placed on the cord.
- 3. The flex cord should now be fed through the opening in the top of the Slick-On casting.
- 4. A third cord-grip washer (3) should now be placed on the
- 5. The plastic cord-grip (5) should now be squeezed onto the cord (placed 3/8" from the end of the cord jacket). The cord grip is to be clamped to at least one tooth from being fully engaged.
- 6. Attach the hook closure bracket (6) to the die cast hook, using the #8 screw (7) as shown.
- 7. Align the cord-grip washers and the rubber gasket with the hole in the Slick-On casting and thread the die cast hook until tight.
- 8. The #10 screw inside the Slick-On casting can be tightened against the hook to prevent it from backing out of the threaded hole.
- 9. Wire connections made by joining like-colored wires.

## **BL – INSTALLATION OF FLEX CORD (FIG. 2)**

ITEMS NEEDED FOR INSTALLATION:			
ITEM NO	<u>DESCRIPTION</u>	QTY	
1	CORD, ACS, FLEX	1	
2	HOOK, AND LOOP, DIECAST CI	1	
3	CORD-GRIP, GOTCHA RING, 16/3	1	
4	GSKT, RUB BUSHG, 1/8, .41 ID, .93 OD	1	
5	WASHER, .43"ID, .91"OD, CORDGRIP	1	
6	BRKT, HOOK CLOSURE, HOOK/LOOP	1	
7	SCR, 8-32X1/2, HWSD, ROLK, STL, MGD	1	
8	WIRE-NUT, TWIST-ON, SELF-INSULAT	1	

- 1. Push flex cord (1) through the thru-hole of the die cast hook (2).
- 2. After the cord end passes through the cast hook, a cordgrip gotcha ring (3), a rubber gasket (4), and a cord-grip washer (3) are to be placed on the cord.
- The flex cord should now be fed through the opening in the top of the Quick-On cover assembly.

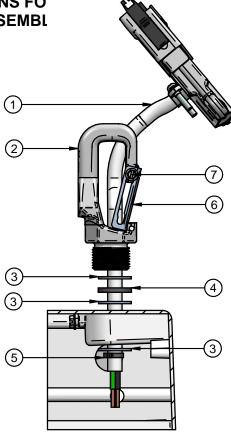


FIGURE 1

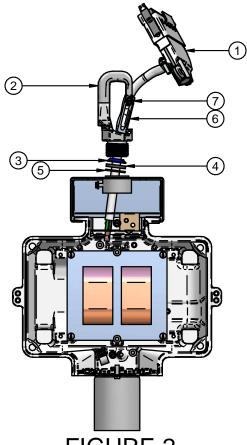


FIGURE 2

93006662 Rev. 11/06

