
# INSTALLATION INSTRUCTIONS

CATALOG NUMBER **PKSP** 

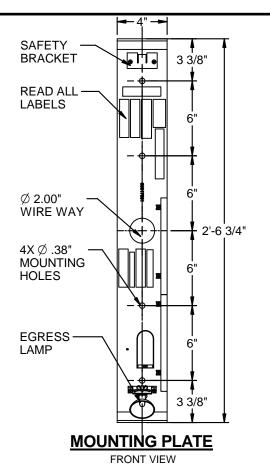

NOTE:

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.


## **INSTALLATION**

arealighting

- TURN OFF POWER.
- READ ALL WARNING LABELS ON THE MOUNTING PLATE.
- PULL INCOMING WIRE LEADS THROUGH WIREWAY AND SECURE MOUNTING PLATE TO MOUNTING SURFACE. NOTE: TO BE MOUNTED INDEPENDENT OF JUNCTION BOX. (MOUNTING HARDWARE BY OTHERS)
- APPLY SILICONE ALL AROUND MOUNTING PLATE WHERE PLATE MEETS THE MOUNTING SURFACE. CONNECT INCOMING WIRES LEADS TO
- WIRE HARNESS WITH WIRE CONNECTIONS (WHITE TO WHITE, BLACKTO BLACK, GREEN TO GREEN.)
- SECURE SAFETY CABLE INTO THE SAFETY BRACKET ON THE MOUNTING PLATE
- THE EGRESS SOCKET MUST BE WIRED TO A SEPARATE LISTED EMERGENCY CIRCUIT (LISTED TO UL924 AND CSA 141).
- SECURE FIXTURE ASSEMBLY TO WALL PLATE WITH (4) 1/4-20 x 3/4" SET SCREWS.
- TURN POWER ON AND CHECK FOR OPERATION.
- 10. INSTALLATION COMPLETE.

## **RE-LAMPING EGRESS LAMP**

- TURN OFF POWER.
- LOOSEN (4) 1/4-20 x 3/4" SET SCREWS ON WALL CANOPY, MOVE FIXTURE ASSEMBLY AWAY FROM WALL PLATE.
- REMOVE EGRESS LAMP GENTLY BY PULLING AWAY FROM EGRESS LAMP SOCKET.
- 4. REPLACE MR-16 LAMP.
- 5. TO RE-ASSEMBLE, REVERSE PROCEDURE.

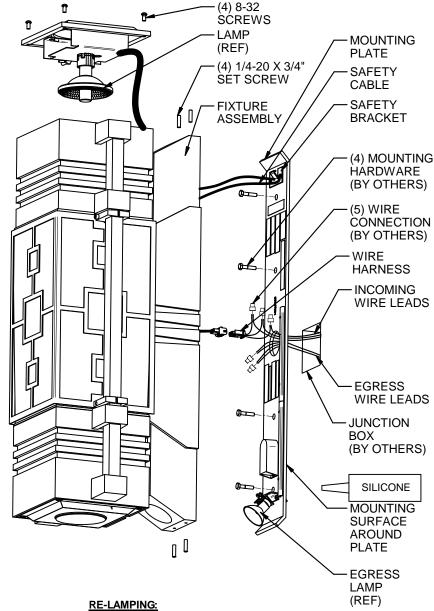

# 1. TURN OFF POWER.


- 2. REMOVE (4) 8-32 SCREWS FROM TOP OR BOTTOM LID. PULL ON LID TO ACCESS LAMP SOCKET, AND INSTALL LAMP.
- 3. RETURN LID AND SCREWS TO ORIGINAL POSITION AND TIGHTEN SCREWS SECURELY.
- 4. INSTALLATION COMPLETE.

### **BALLAST SERVICING:**

- 1. TURN OFF POWER.
- 2. LOOSEN (4) 1/4-20 x 3/4" SET SCREWS ON WALL CANOPY, DISCONNECT WIRING & MOVE FIXTURE AWAY FROM WALL PLATE. FIXTURE MUST BE SUPPORTED DURING SERVICING.
- 3. SERVICE BALLAST.
- 4. MAKE WIRE CONNECTIONS. (REFER TO WIRING DIAGRAM)
- RETURN FIXTURE ASSEMBLY TO WALL PLATE AND SECURE WITH (4) 1/4-20 x 3/4" SET SCREWS.
- 6. INSTALLATION COMPLETE.



# INSTALLATION INSTRUCTIONS

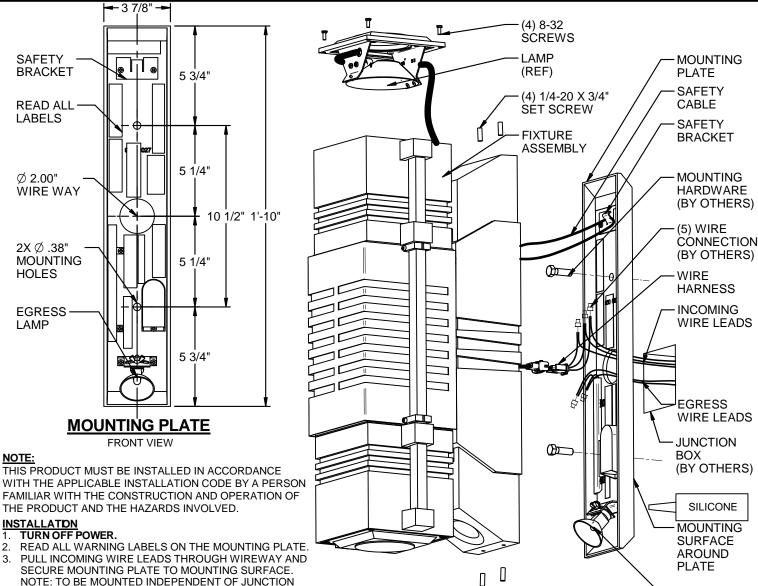

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF

### INSTALLATION

architectural arealighting

- NOTE: TO BE MOUNTED INDEPENDENT OF JUNCTION BOX. (MOUNTING HARDWARE BY OTHERS)
- APPLY SILICONE ALL AROUND MOUNTING PLATE WHERE PLATE MEETS THE MOUNTING SURFACE.
- CONNECT INCOMING WIRES LEADS TO WIRE HARNESS WITH WIRE CONNECTIONS. (WHITE TO WHITE, BLACK TO BLACK, GREEN TO GREEN.)
- SECURE SAFETY CABLE INTO THE SAFETY BRACKET ON THE MOUNTING PLATE
- 7. THE EGRESS SOCKET MUST BE WIRED TO A SEPARATE LISTED EMERGENCY CIRCUIT (LISTED TO UL924 AND CSA 141).
- SECURE FIXTURE ASSEMBLY TO WALL PLATE WITH (4) 1/4-20 x 3/4" SET SCREWS.
- 9. TURN POWER ON AND CHECK FOR OPERATION.
- 10. INSTALLATION COMPLETE.

# **RE-LAMPING EGRESS LAMP**

- 1. TURN OFF POWER.
- LOOSEN (4) 1/4-20 x 3/4" SET SCREWS ON WALL CANOPY, MOVE FIXTURE ASSEMBLY AWAY FROM WALL PLATE.
- REMOVE EGRESS LAMP GENTLY BY PULLING AWAY FROM EGRESS LAMP SOCKET.
- REPLACE MR-16 LAMP.
- 5. TO RE-ASSEMBLE, REVERSE PROCEDURE.

# **RE-LAMPING:**

- 1. TURN OFF POWER.
- REMOVE (4) 8-32 SCREWS FROM TOP OR BOTTOM LID. PULL ON LID TO ÁCCESS LAMP SOCKET, AND INSTALL LAMP.
- 3. RETURN LID AND SCREWS TO ORIGINAL POSITION AND TIGHTEN SCREWS SECURELY.
- 4. INSTALLATION COMPLETE.


## **BALLAST SERVICING:**


- 1. TURN OFF POWER.
- 2. LOOSEN (4) 1/4-20 x 3/4" SET SCREWS ON WALL CANOPY. DISCONNECT WIRING & MOVE FIXTURE AWAY FROM WALL PLATE. FIXTURE MUST BE SUPPORTED DURING SERVICING.
- 3. SERVICE BALLAST.
- 4. MAKE WIRE CONNECTIONS. (REFER TO WIRING DIAGRAM)
- RETURN FIXTURE ASSEMBLY TO WALL PLATE AND SECURE WITH (4) 1/4-20 x 3/4" SET SCREWS.
- 6. INSTALLATION COMPLETE.


**EGRESS** LAMP

(REF)



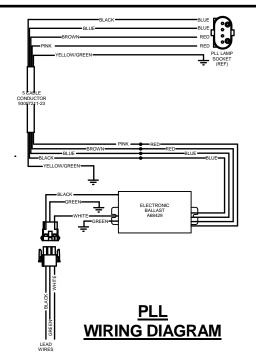


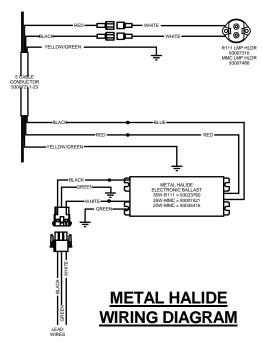

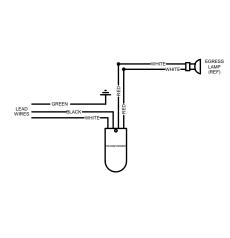

**EGRESS** 

**WIRING DIAGRAM** 

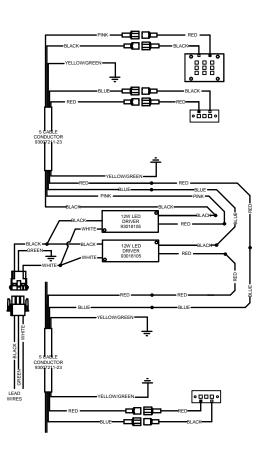

œ≢ 08080 • **≠**000 

15 LED WIRING DIAGRAM

**24 LED** WIRING DIAGRAM



architectural arealighting

# WIRING DIAGRAMS

CATALOG NUMBER PKSP

