


INSTALLATION INSTRUCTIONS

CATALOG NUMBER

M2-LED-PXA

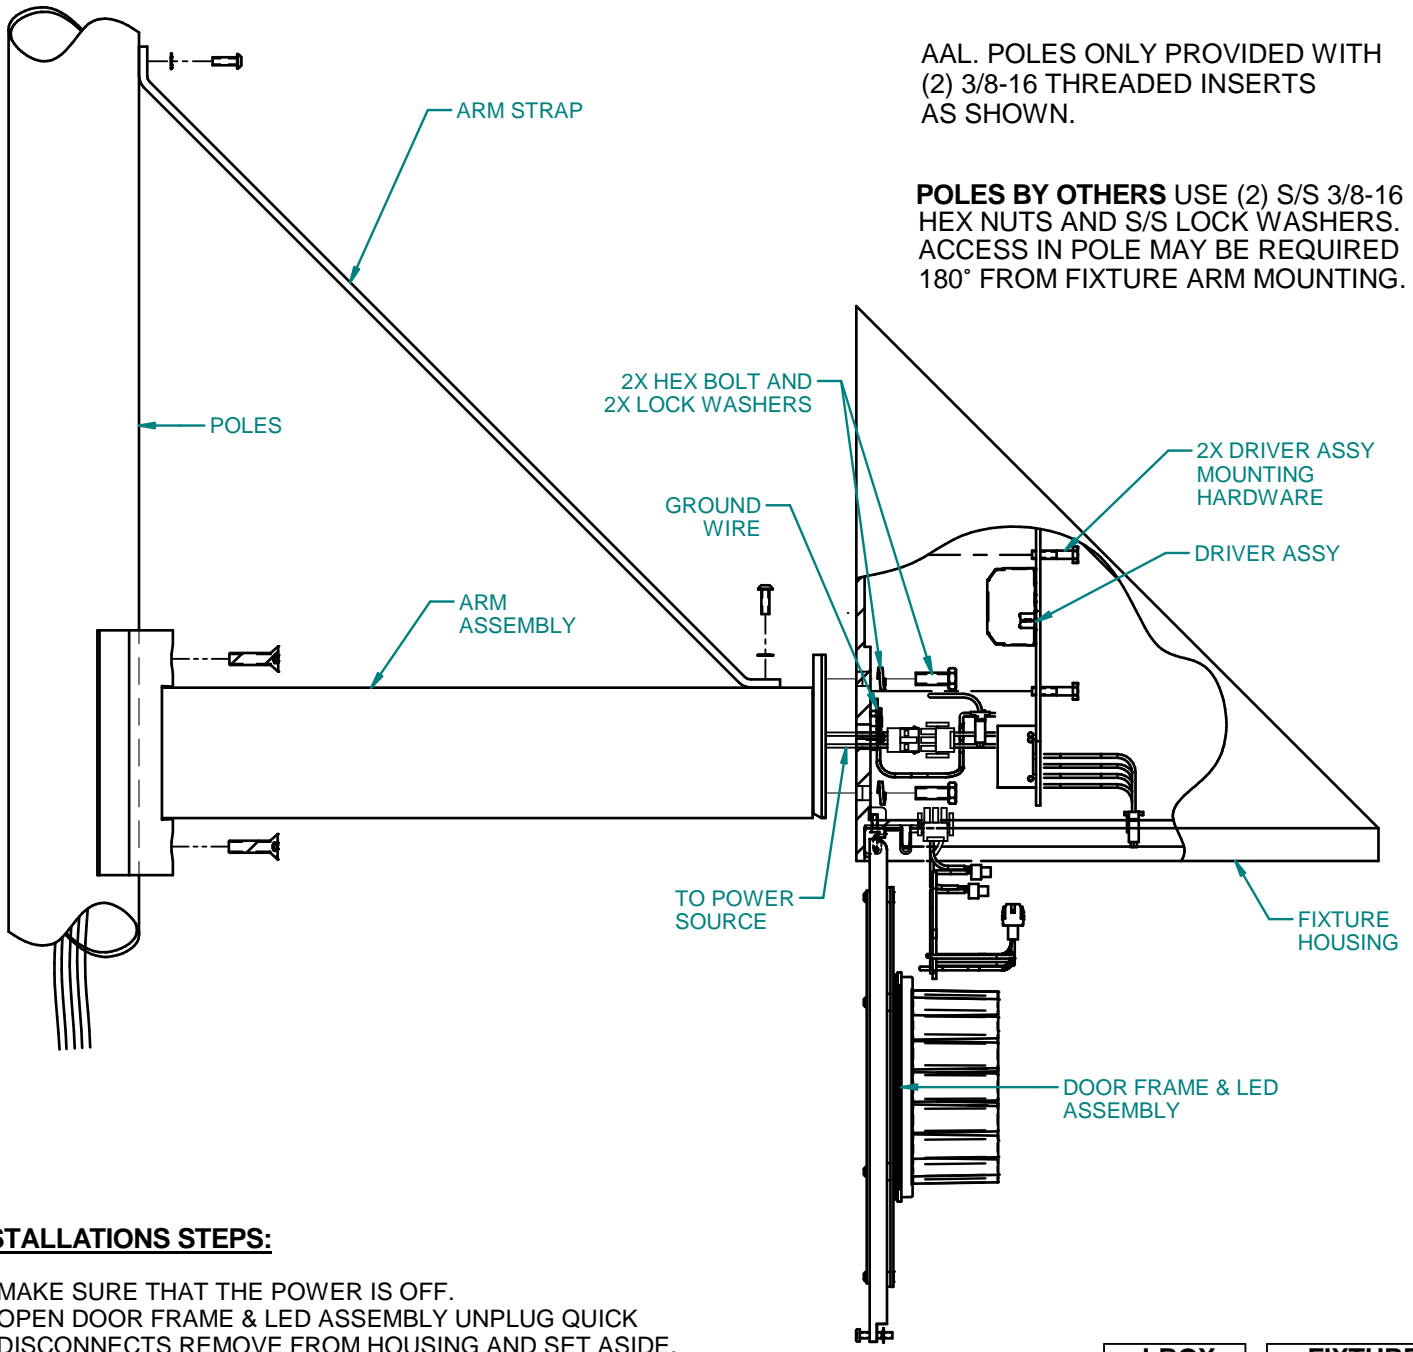


AAL. POLES ONLY PROVIDED WITH (2) 3/8-16 THREADED INSERTS AS SHOWN.

POLES BY OTHERS USE (2) S/S 3/8-16 HEX NUTS AND S/S LOCK WASHERS. ACCESS IN POLE MAY BE REQUIRED 180° FROM FIXTURE ARM MOUNTING.

INSTALLATIONS STEPS:

- 1) MAKE SURE THAT THE POWER IS OFF.
- 2) OPEN DOOR FRAME & LED ASSEMBLY UNPLUG QUICK DISCONNECTS REMOVE FROM HOUSING AND SET ASIDE.
- 3) REMOVE DRIVER ASSEMBLY UNPLUG QUICK DISCONNECT TO ACCESS TO MOUNTING ARM ASSEMBLY AND SET ASIDE.
- 4) FEED WIRE LEADS FROM POLE OUT THROUGH WIREWAY HOLE FOR CONNECTION TO FIXTURE.
- 5) SECURE ARM STRAP TO POLE AS SHOWN.
- 6) PLACE THE FIXTURE OVER ARM ASSEMBLY AND SECURE IN PLACE WITH (2) LOCKWASHERS AND HEX BOLTS AS SHOWN.
- 7) MAKE WIRE CONNECTIONS INSIDE OF FIXTURE AS REQUIRED PER CODE.
- 8) RE-ASSEMBLE DRIVER ASSEMBLY, DOOR FRAME & LED ASSEMBLY BY REVERSING PROCEDURE.
- 9) TURN ON POWER & CHECK FOR OPERATION.
- 10) **INSTALLATION COMPLETED.**

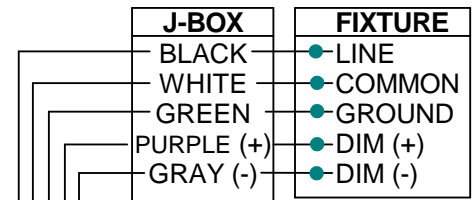

NOTE:
PURPLE & GRAY WIRES FOR DIMMING OPTIONAL.

TO INCOMING POWER SOURCE