



- GENERAL NOTES:
- 1. ALL CEILING T-BARS MUST BE INSTALLED BEFORE FIXTURES ARE MOUNTED IN CEILING.
  - 2. BEND OUT TABS PROVIDED IN HOUSING CAN BE SECURED TO T-BAR WITH SELF TAPPING SCREWS IF REQUIRED BY LOCAL CODE REQUIREMENTS.
  - 3) REFER TO COMPONENT REPLACEMENT GUIDE 93166200 FOR INSTRUCTIONS ON REPLACING COMPONENTS.
  - 4) DO NOT REMOVE DOOR STRAPPING UNTIL THE FIXTURE HAS BEEN FULLY INSTALLED, IF APPLICABLE.

TOOLS REQUIRED	SUPPLIED BY INSTALLER
	-GUY WIRE -SELF TAPPING SCREW (AS NEEDED)

IX4 GRID FIXTURE

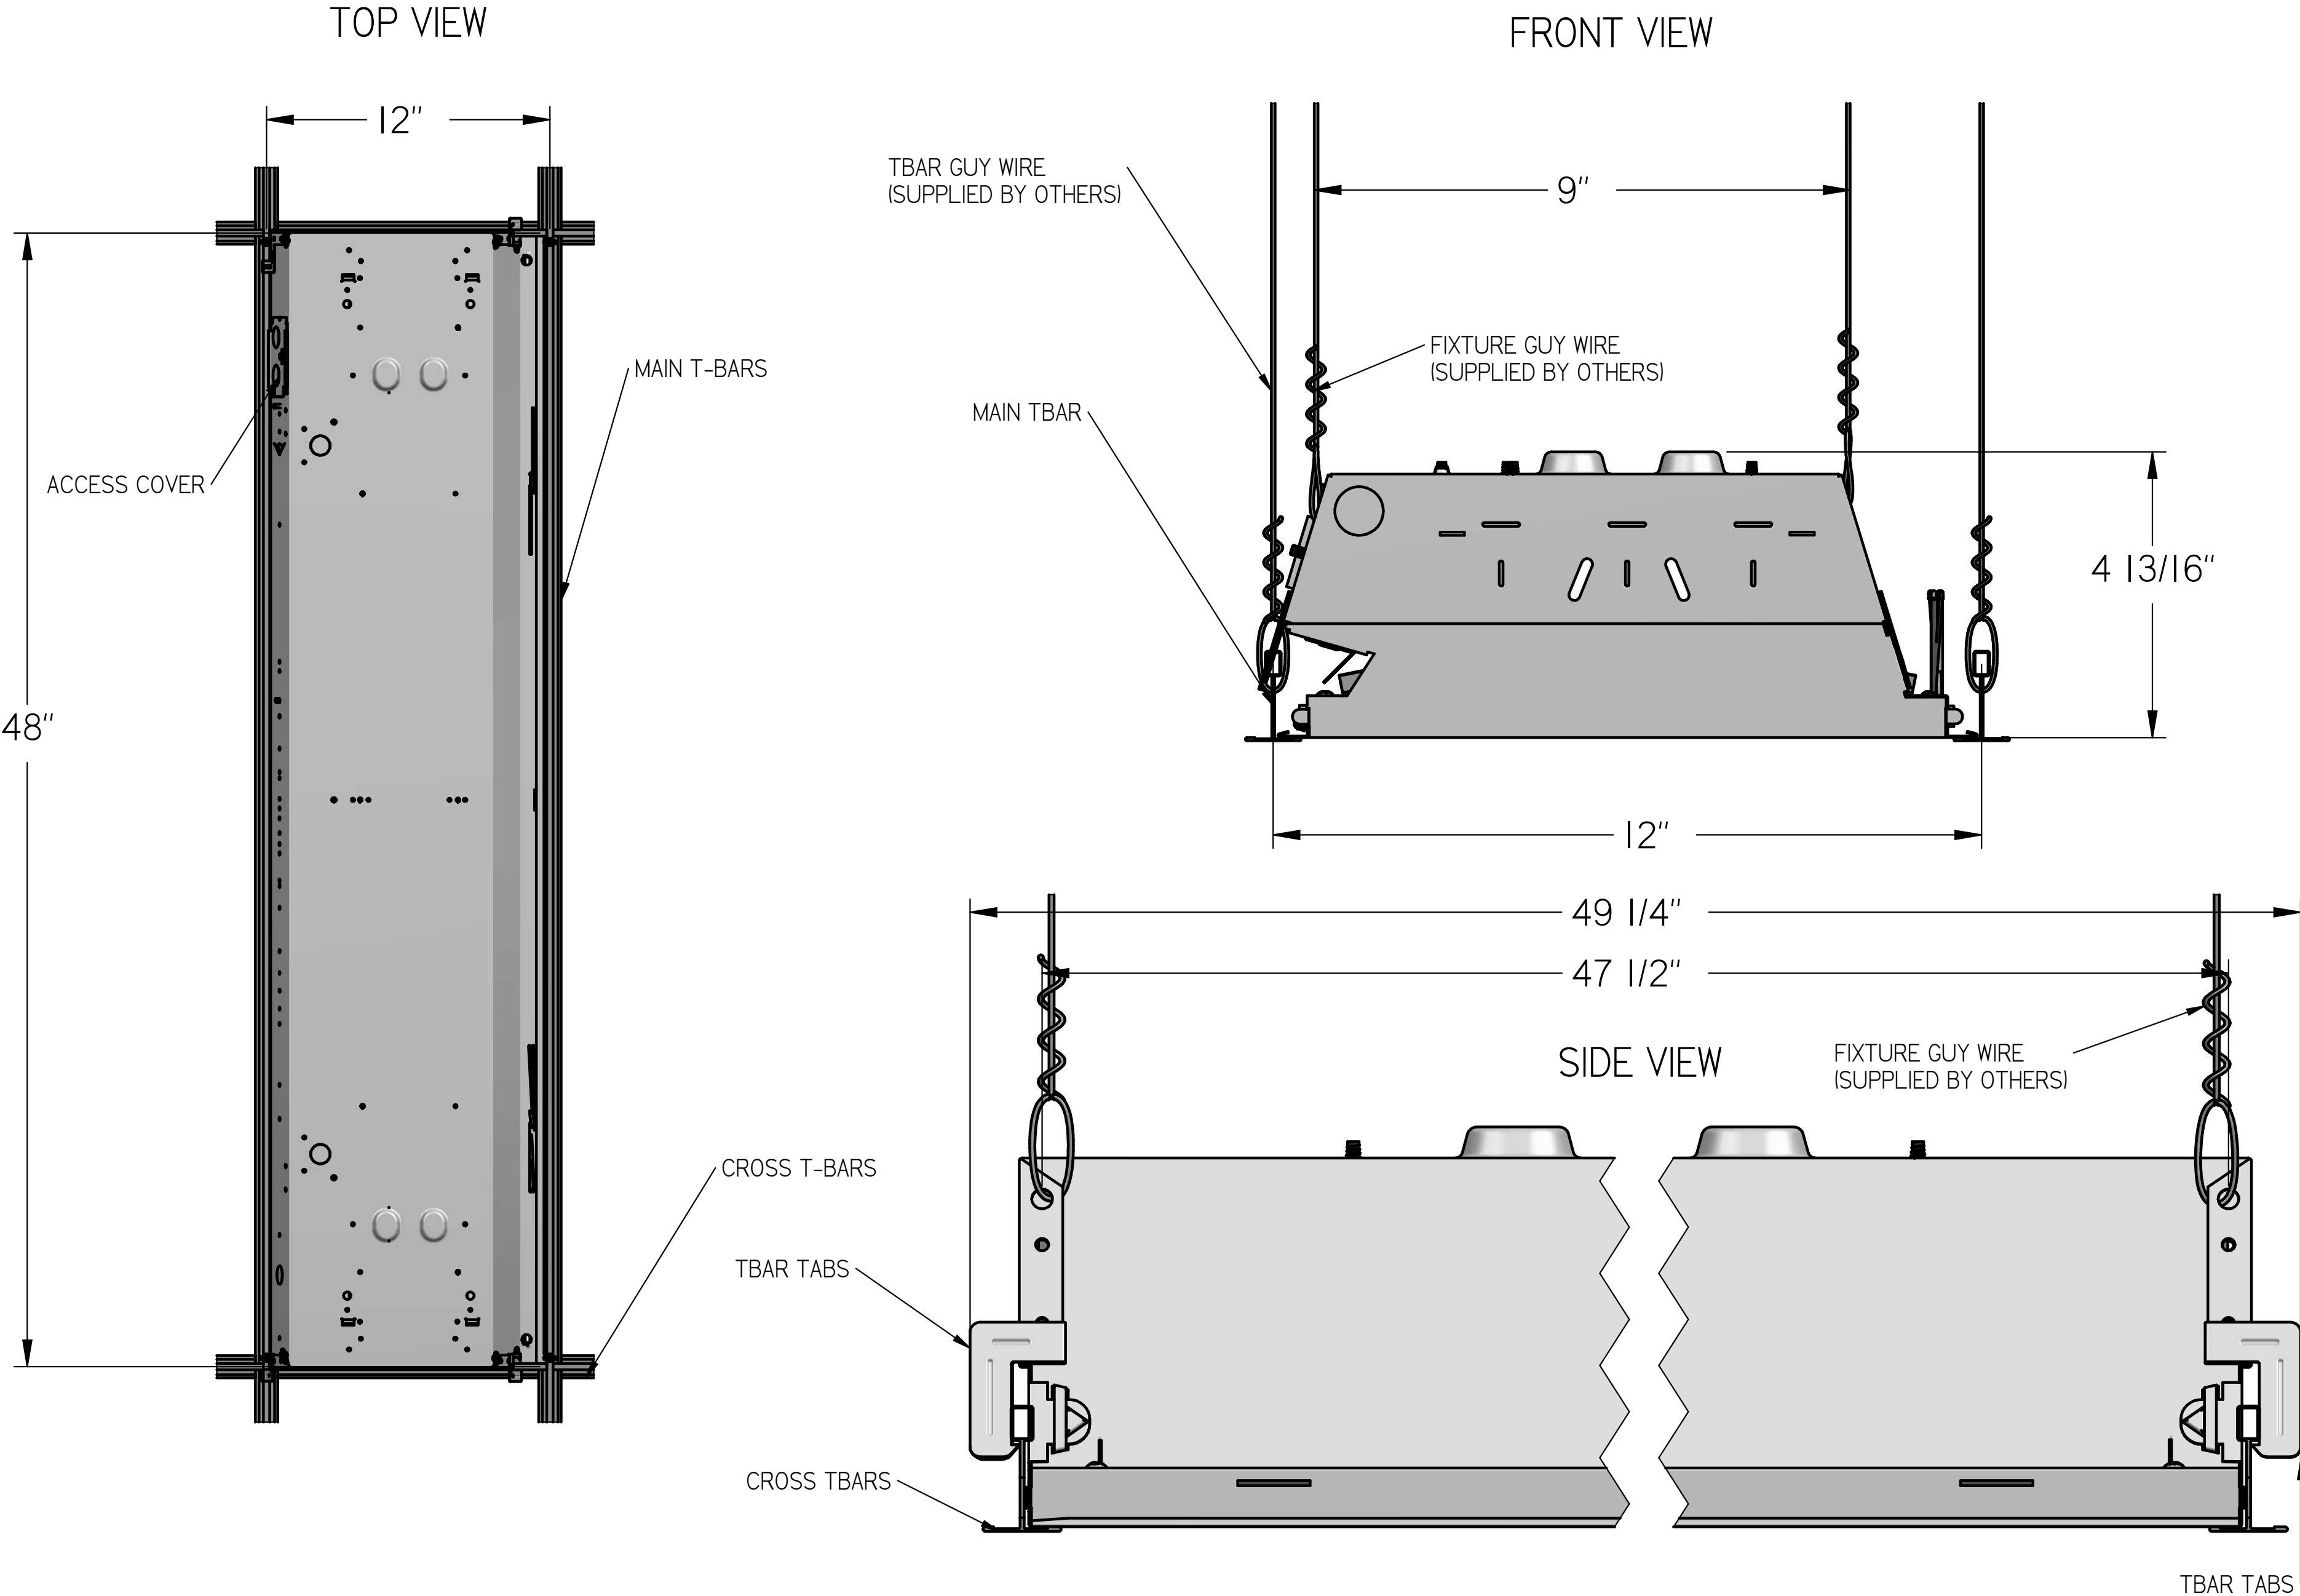


1

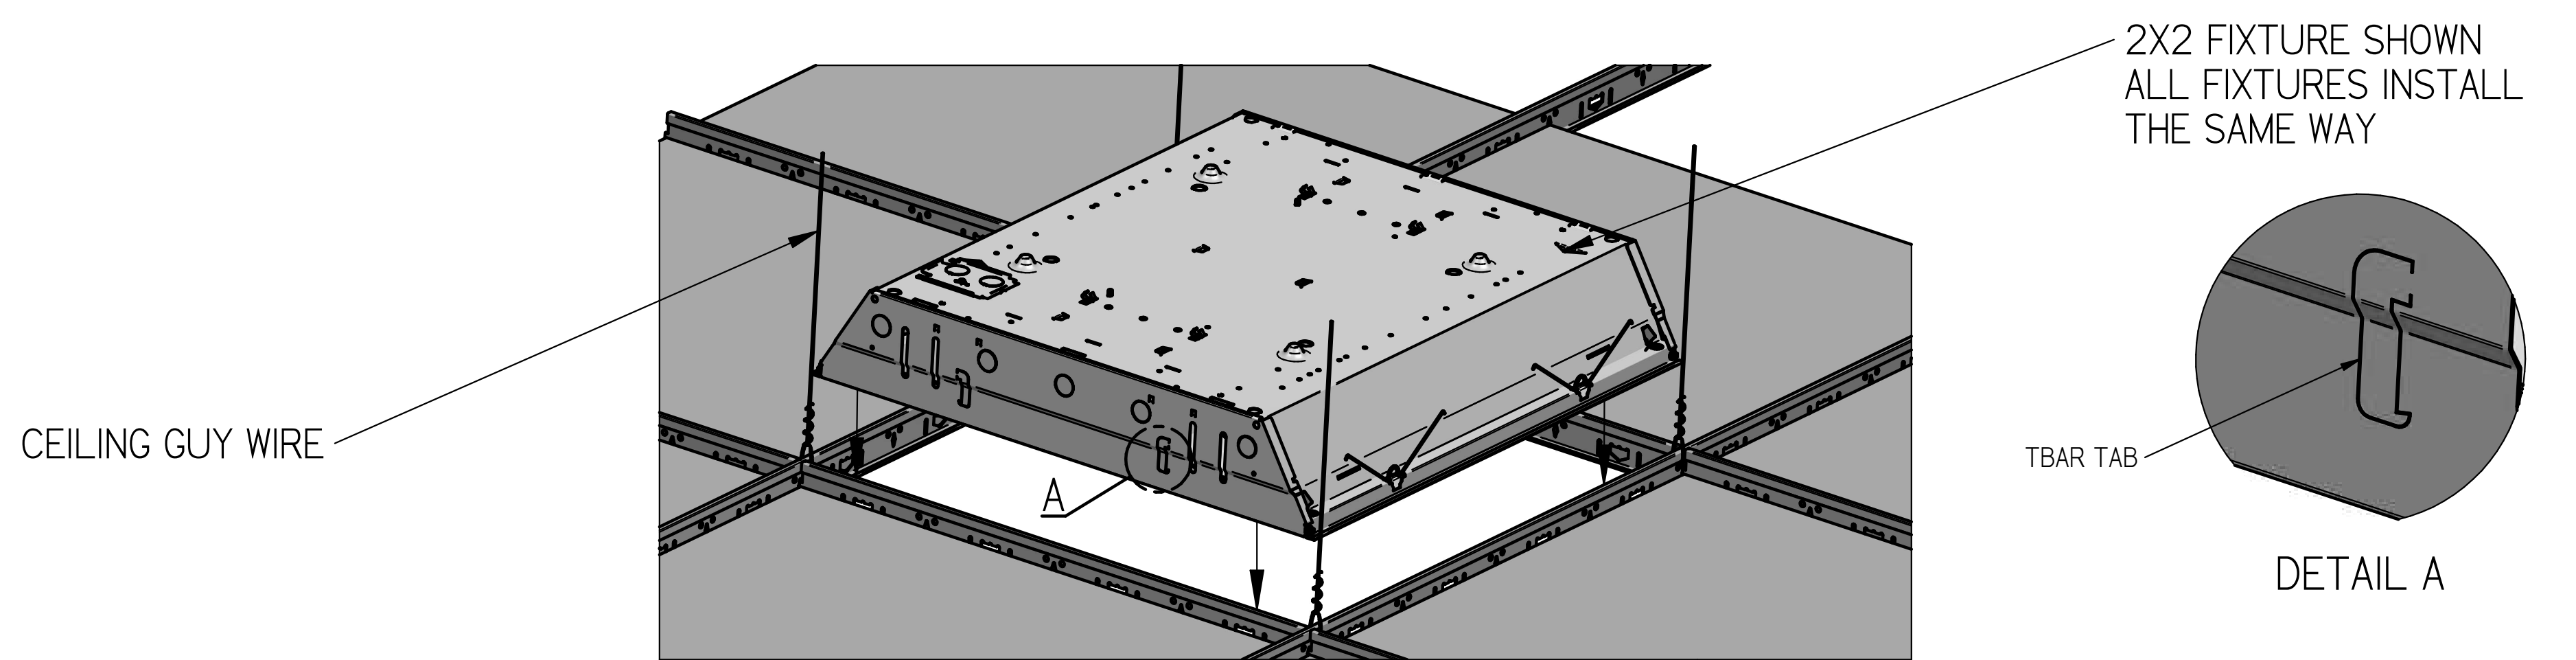

AFTER INSTALLING GRID CEILING TO THE GIVEN DIMENSIONS ON SHEETS 1 AND 2, BEND OPTIONAL TBAR TABS ON EACH FIXTURE END CAP. PLACE FIXTURE ABOVE THE CEILING AND LOWER INTO PLACE. PLEASE NOTE THE DIRECTION OF THE CENTER CHANNEL ON 2X2 FIXTURES IS FACING THE DESIRED DIRECTION. DEPENDING ON LOCAL CODE REQUIREMENTS, SECURE TBAR TABS TO TBAR USING A SELF TAPPING SCREW (SUPPLIED BY OTHERS)

2

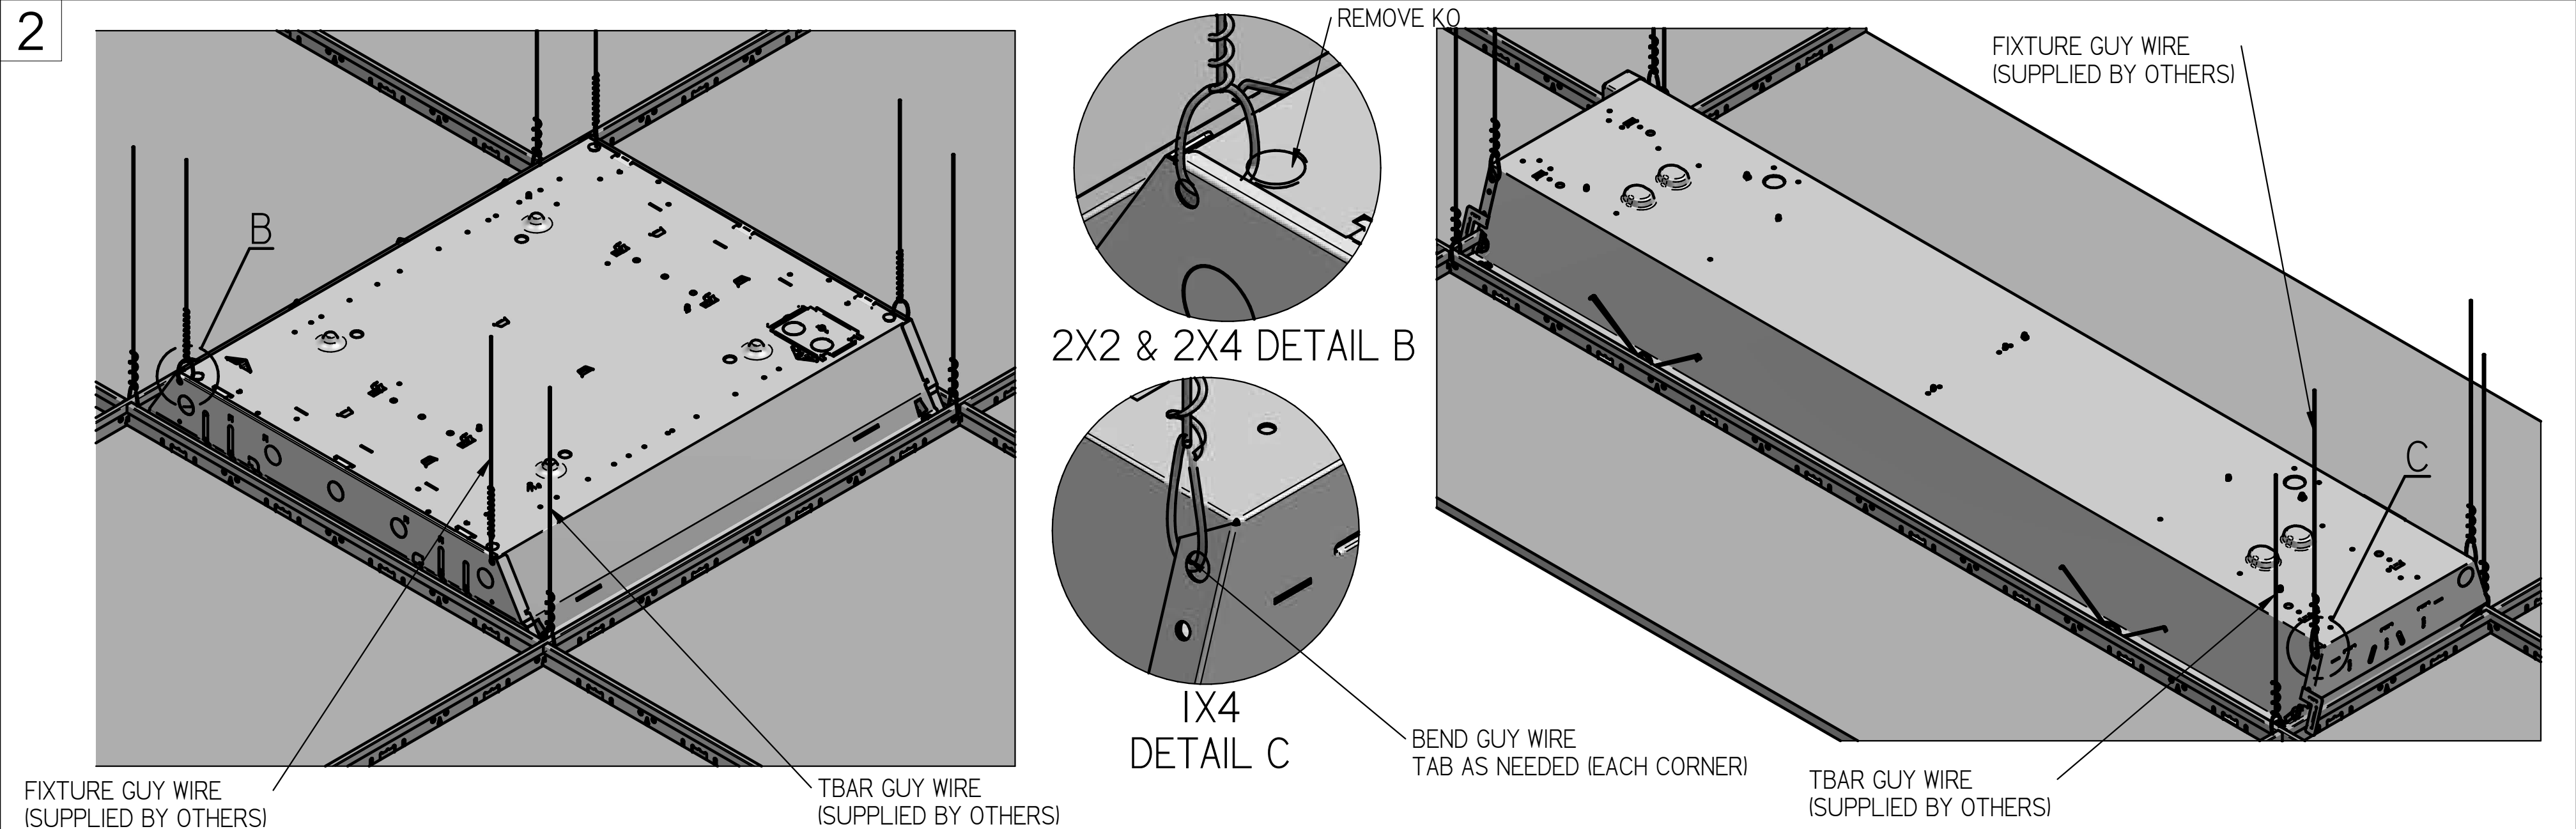

SECURE FIXTURE WITH GUY WIRE (SUPPLIED BY OTHERS). FOR 2X2 AND 2X4 FIXTURES, REMOVE THE KO SHOWN IN DETAIL B. FOR IX4 FIXTURES GUY WIRE TABS MAY NEED TO BE BENT AT EACH CORNER AS SHOWN IN DETAIL C.




3







REMOVE ACCESS COVER BY FIRST PUSHING ON THE ACCESS COVER TAB IN THE DIRECTION SHOWN AND THEN PULLING UP ON THE TAB. ALL WIRING WILL BE SECURED TO ACCESS COVER. REMOVE DESIRED KO AND FEED WIRING THROUGH. WIRE ACCORDINGLY.

4

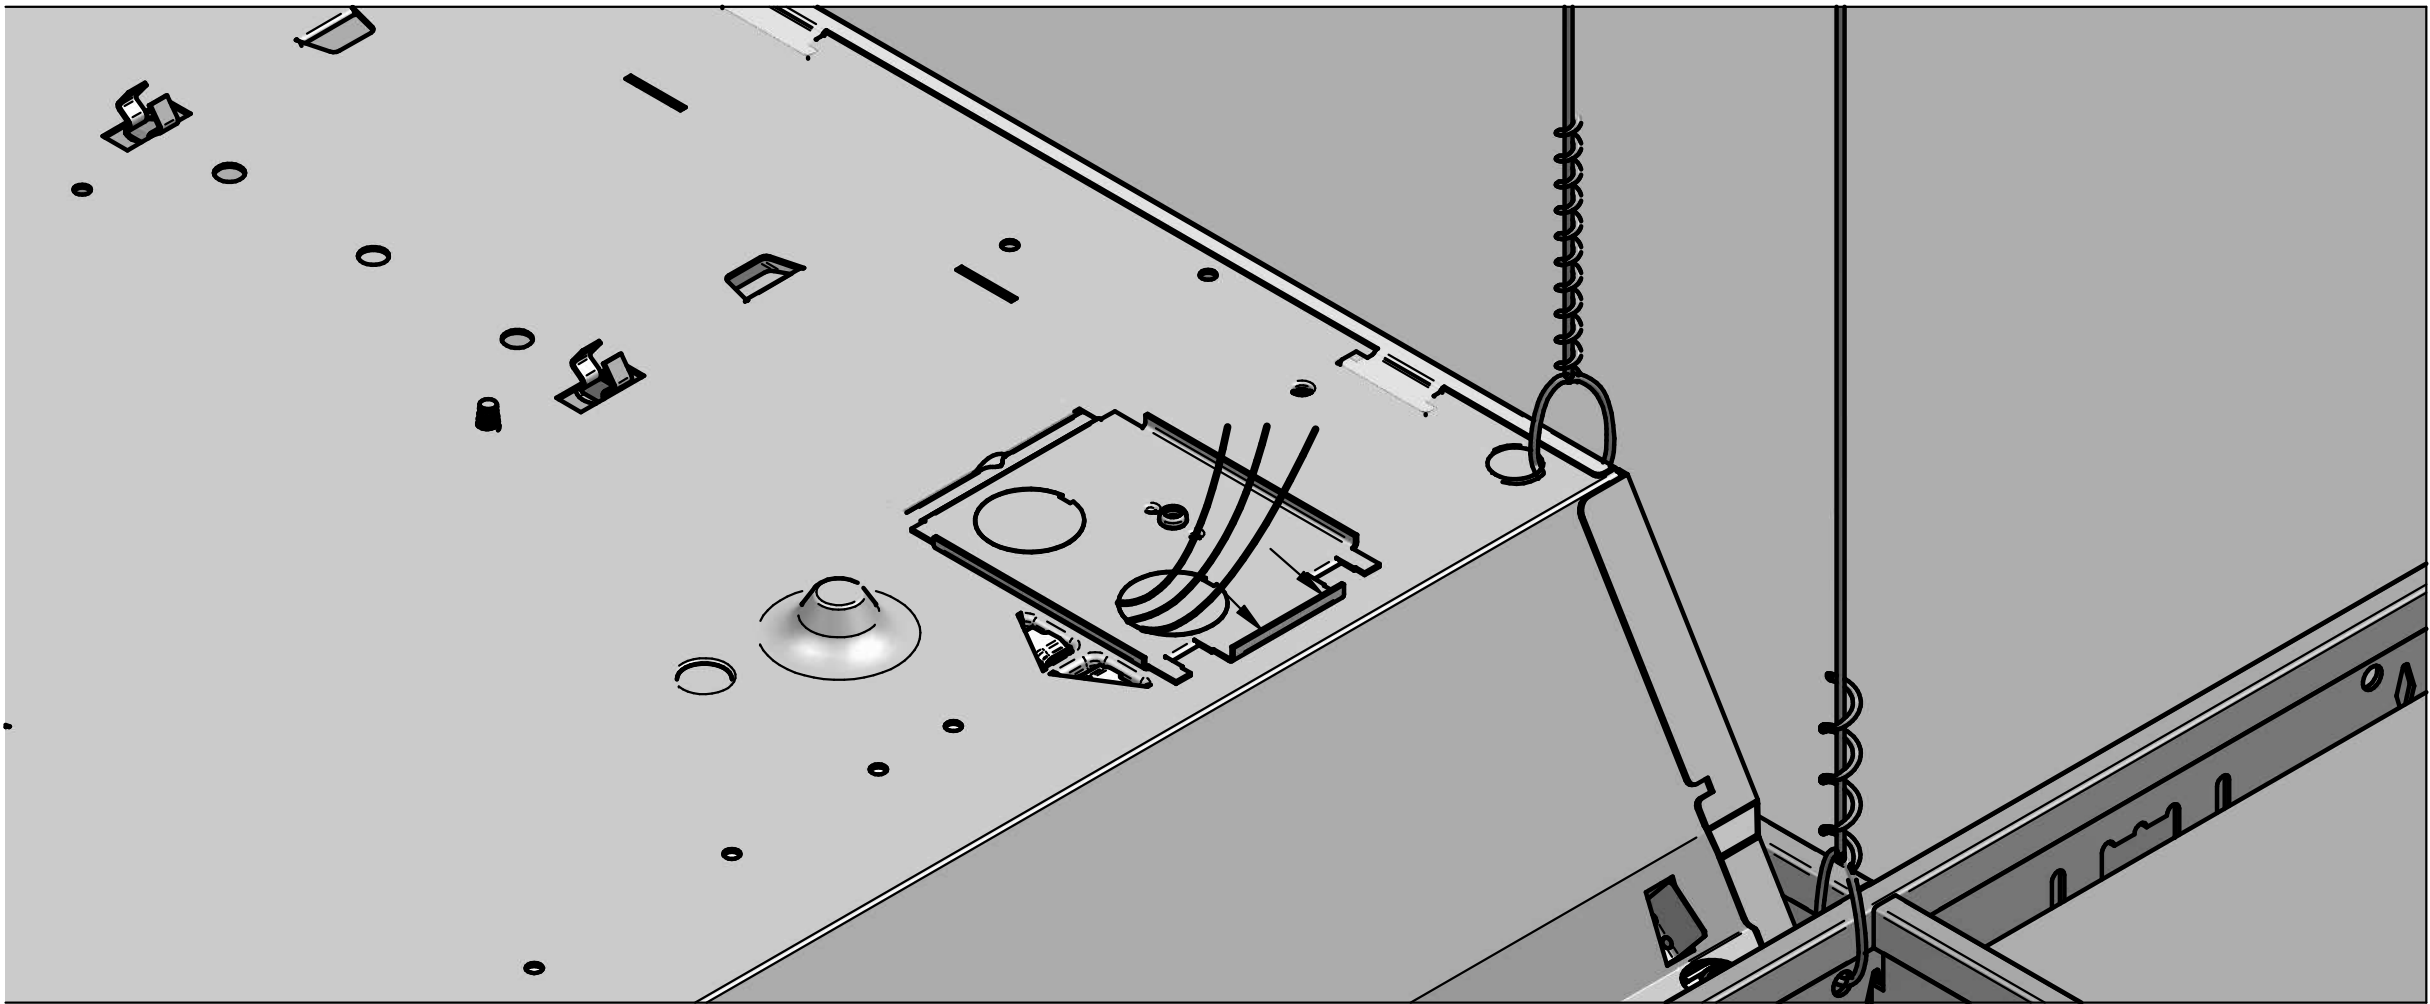

SECURE ACCESS COVER BACK ON THE FIXTURE AS SHOWN. DEPENDING ON THE DOOR TYPE AND ONCE FIXTURE IS FULLY INSTALLED, CUT DOOR STRAPPING ON ONE SIDE. GENTLY PULL THE BUCKLED END OF THE STRAPPING UNTIL REMOVED FROM DOOR. DEPENDING ON THE FIXTURE SIZE, THERE MAY BE MULTIPLE STRAPS.

ADDITIONAL INSTRUCTIONS

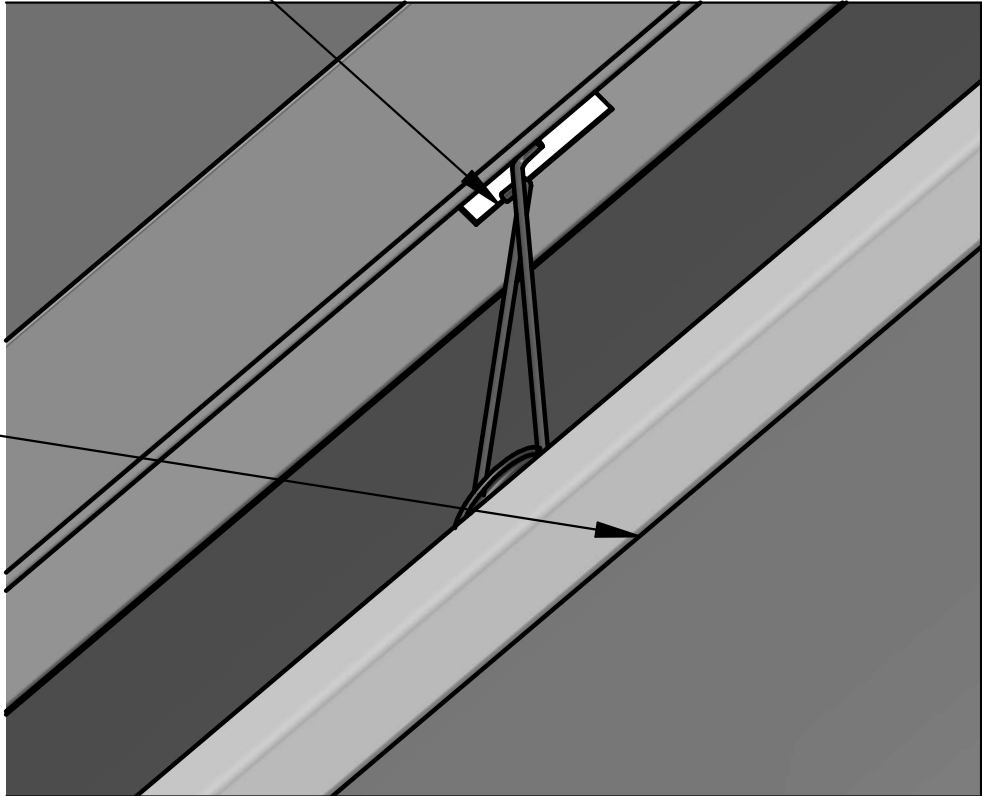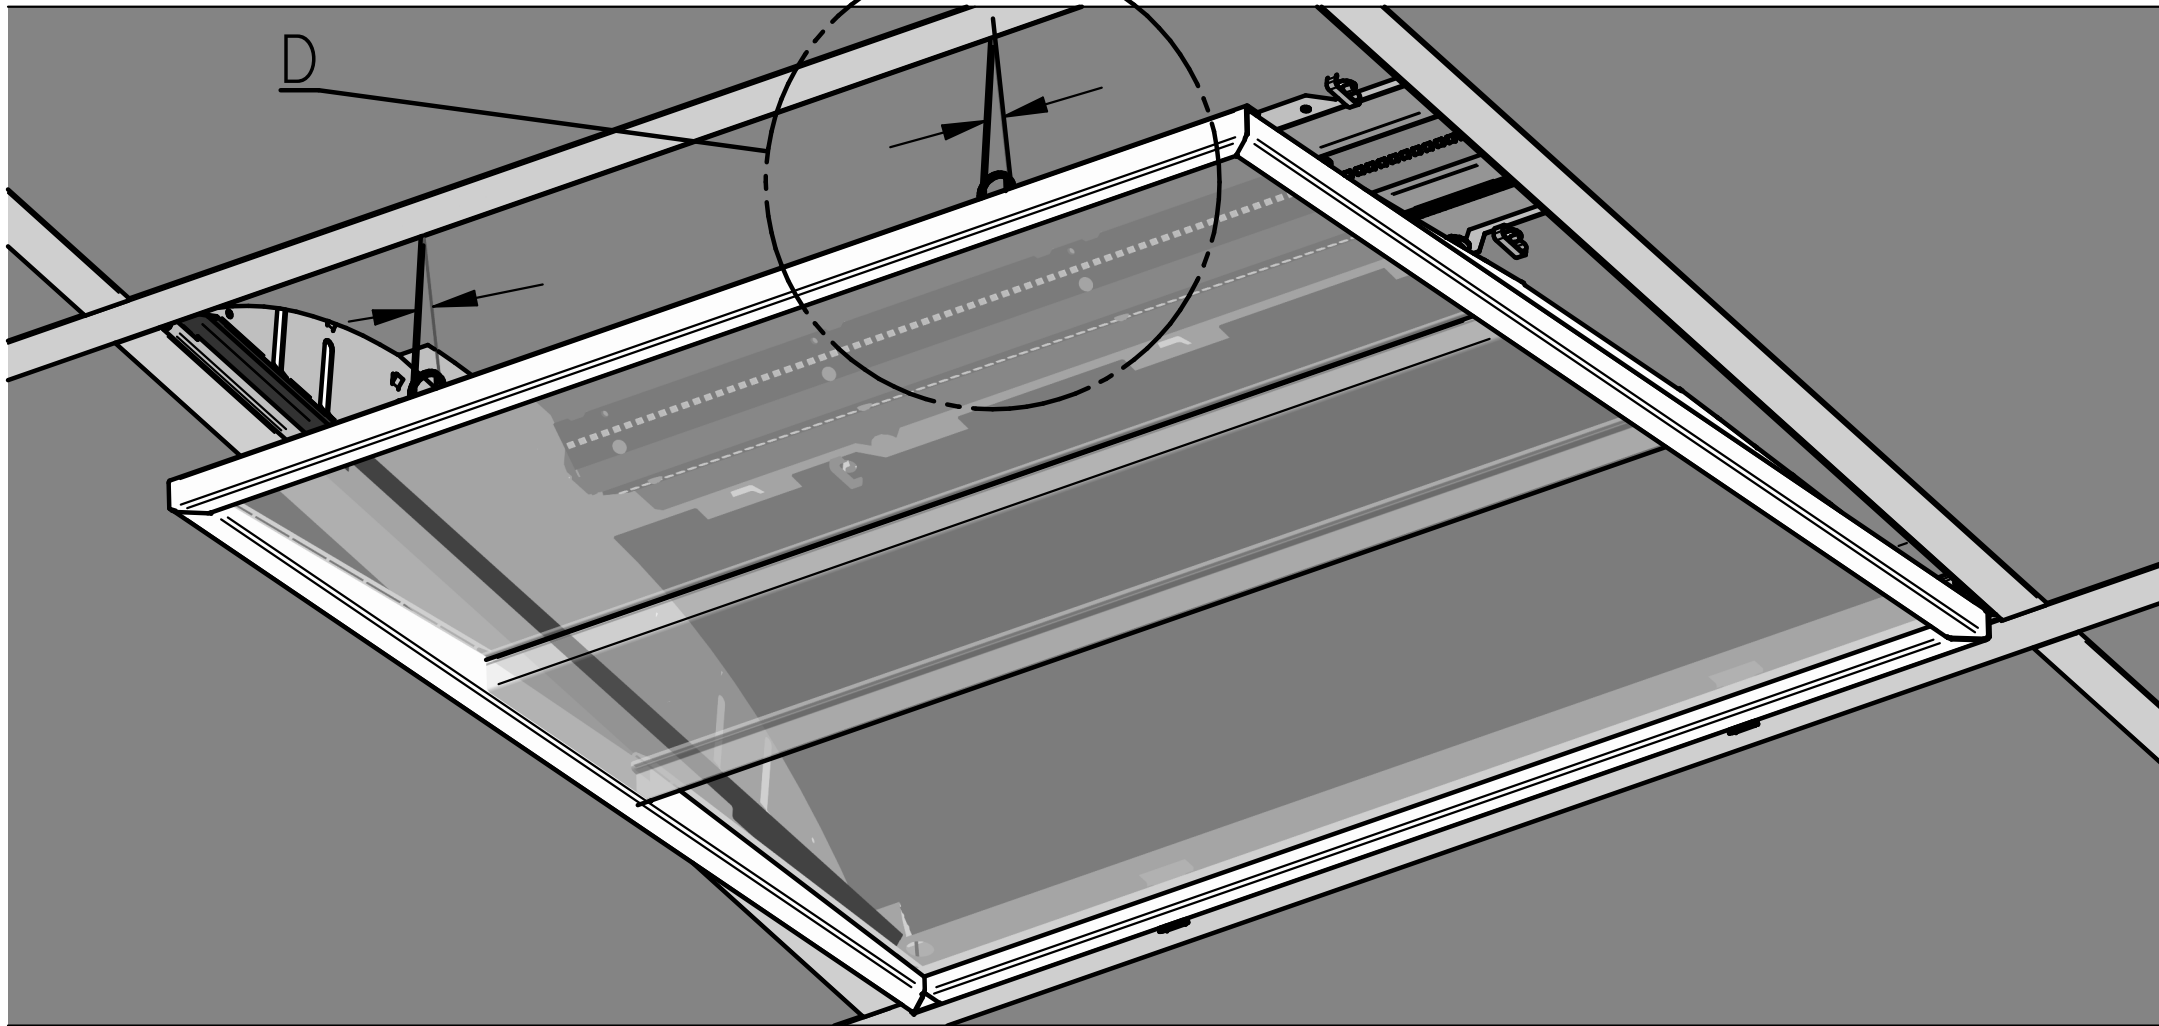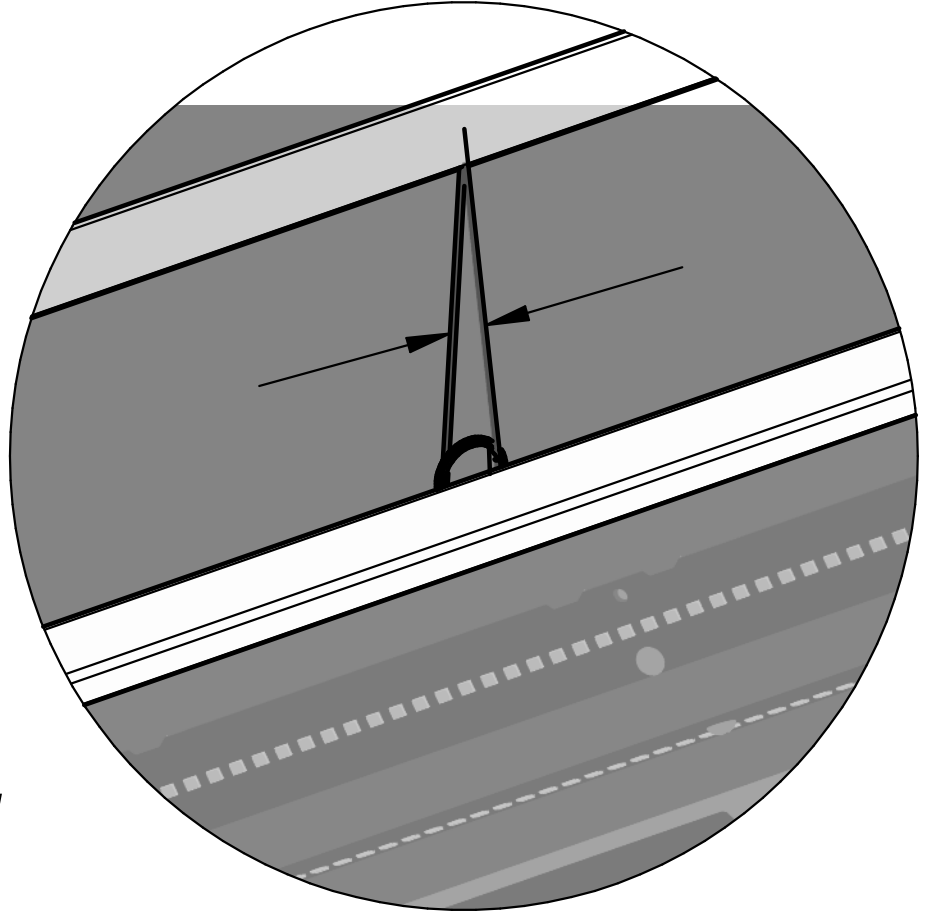
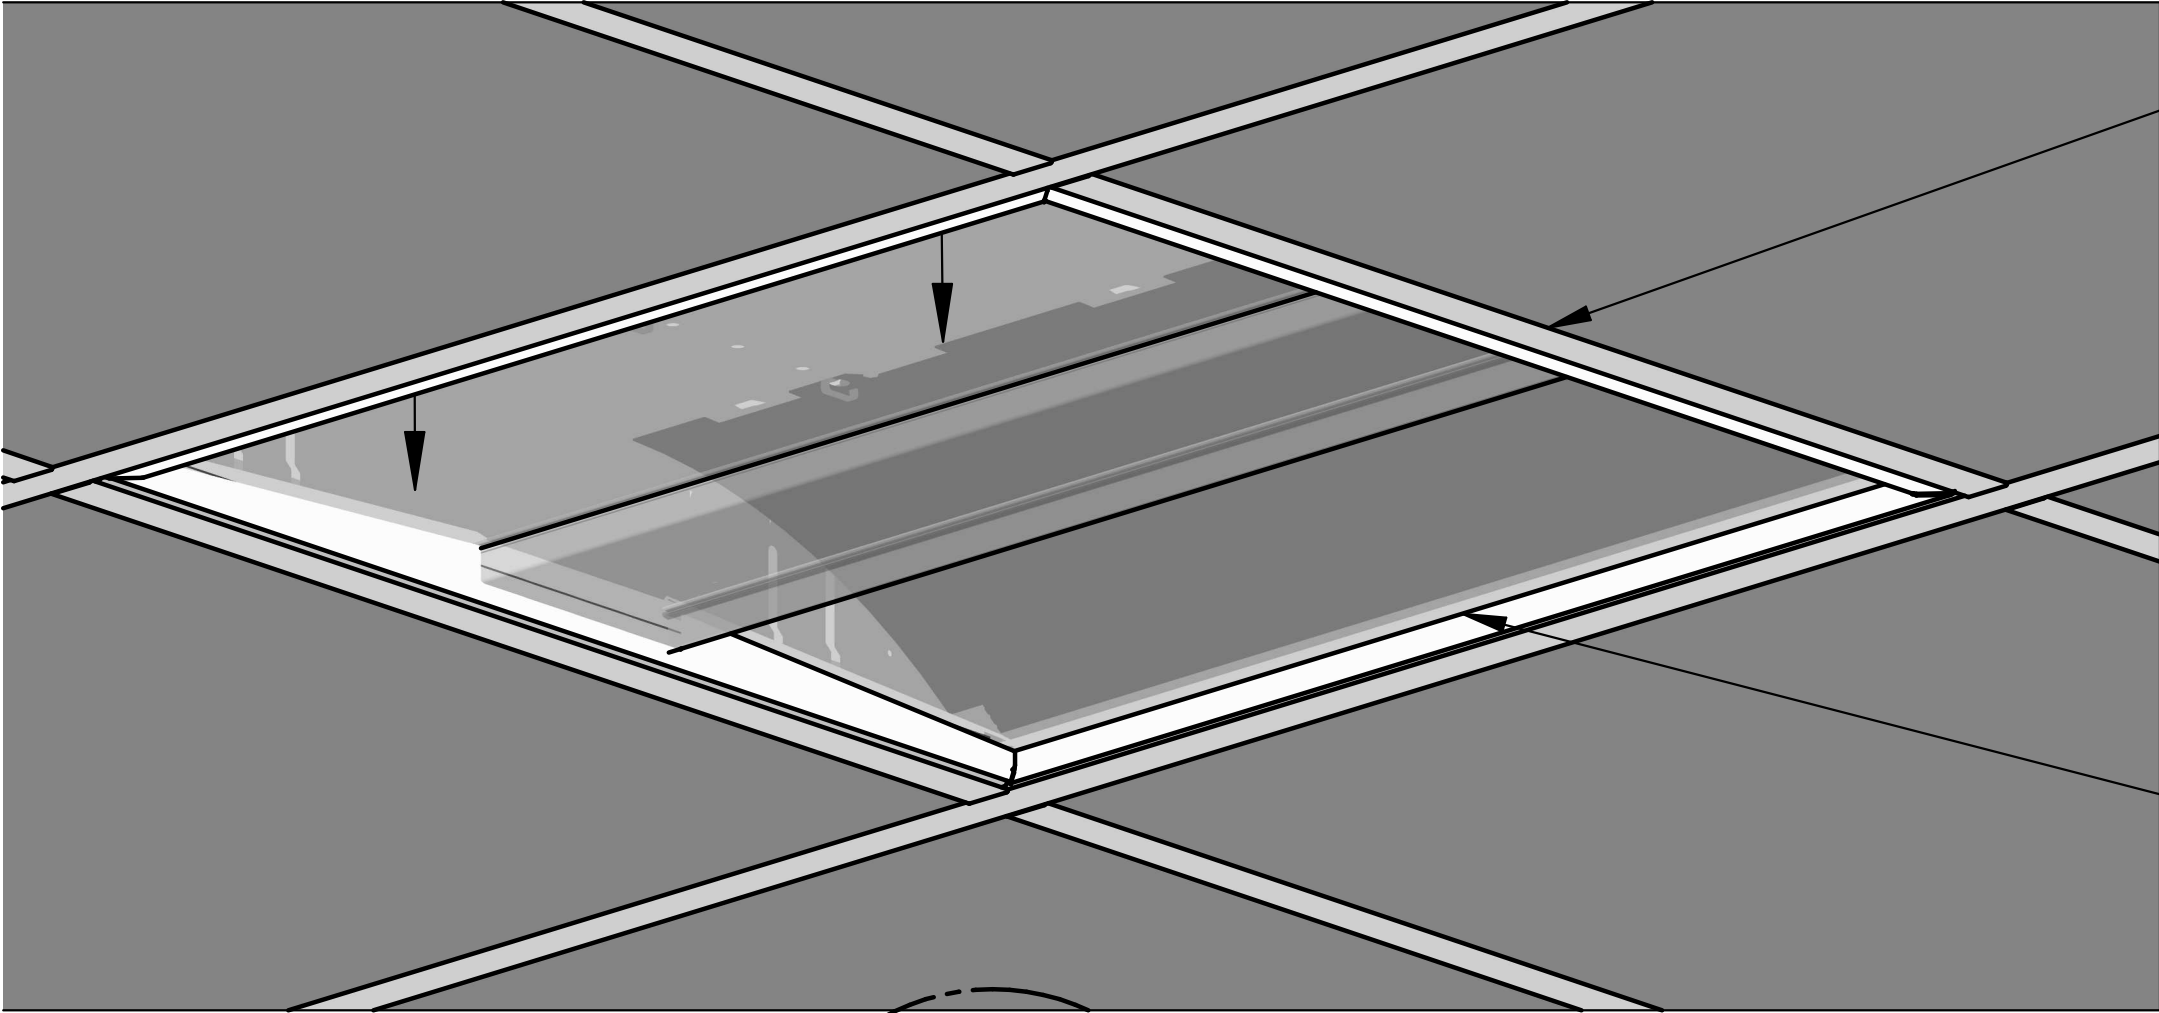


GENTLY BUT FIRMLY PULL DOWN ON ONE OF THE SIDES PARALLEL TO THE CENTER CHANNEL UNTIL THE DOOR STARTS TO SEPERATE FROM THE HOUSING. IF THE DOOR ISNT OPENING, THE HINGE SIDE IS BEING PULLED ON, SWITCH TO THE OTHER SIDE OF THE DOOR. ALLOW DOOR TO OPEN UNTIL STOPPED BY THE END OF THE TORSION SPRINGS. SQUEEZE IN ON BOTH SIDES OF THE TORSION SPRINGS TO RELEASE DOOR FROM HOUSING.


TO CLOSE, COMPRESS THE SPRINGS UNTIL THEY CLEAR TORSION SPRING SLOTS IN THE HOUSING  
ALLOW SPRINGS TO DECOMPRESS IN THE SLOTS. GENTLY PUSH THE DOOR TO THE CLOSED POSITION,  
THE SPRINGS WILL BEGIN TO ENGAGE AND SNAP DOOR SHUT.




ADDITIONAL INSTRUCTIONS

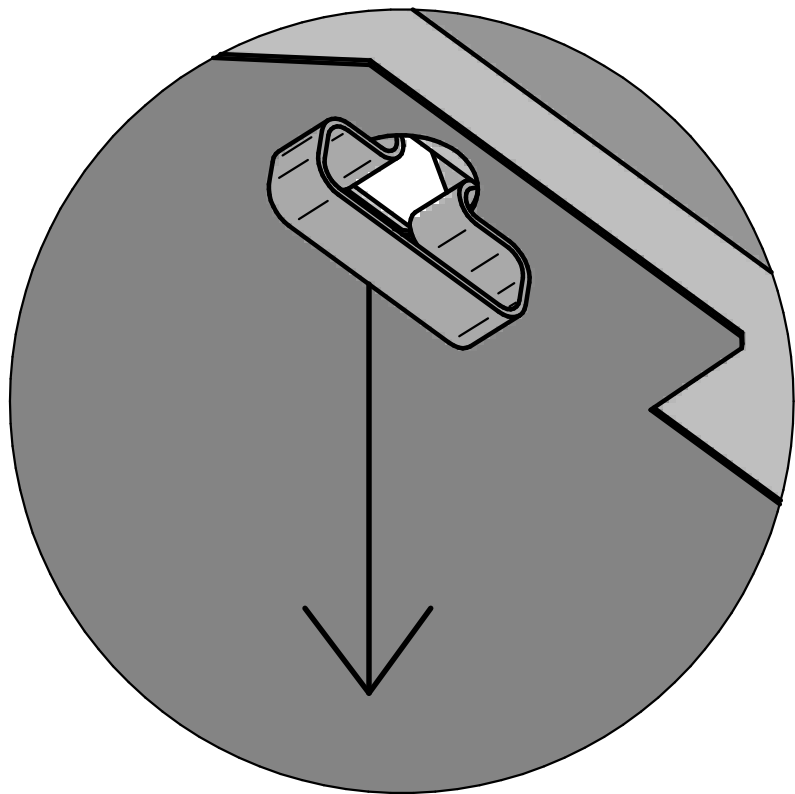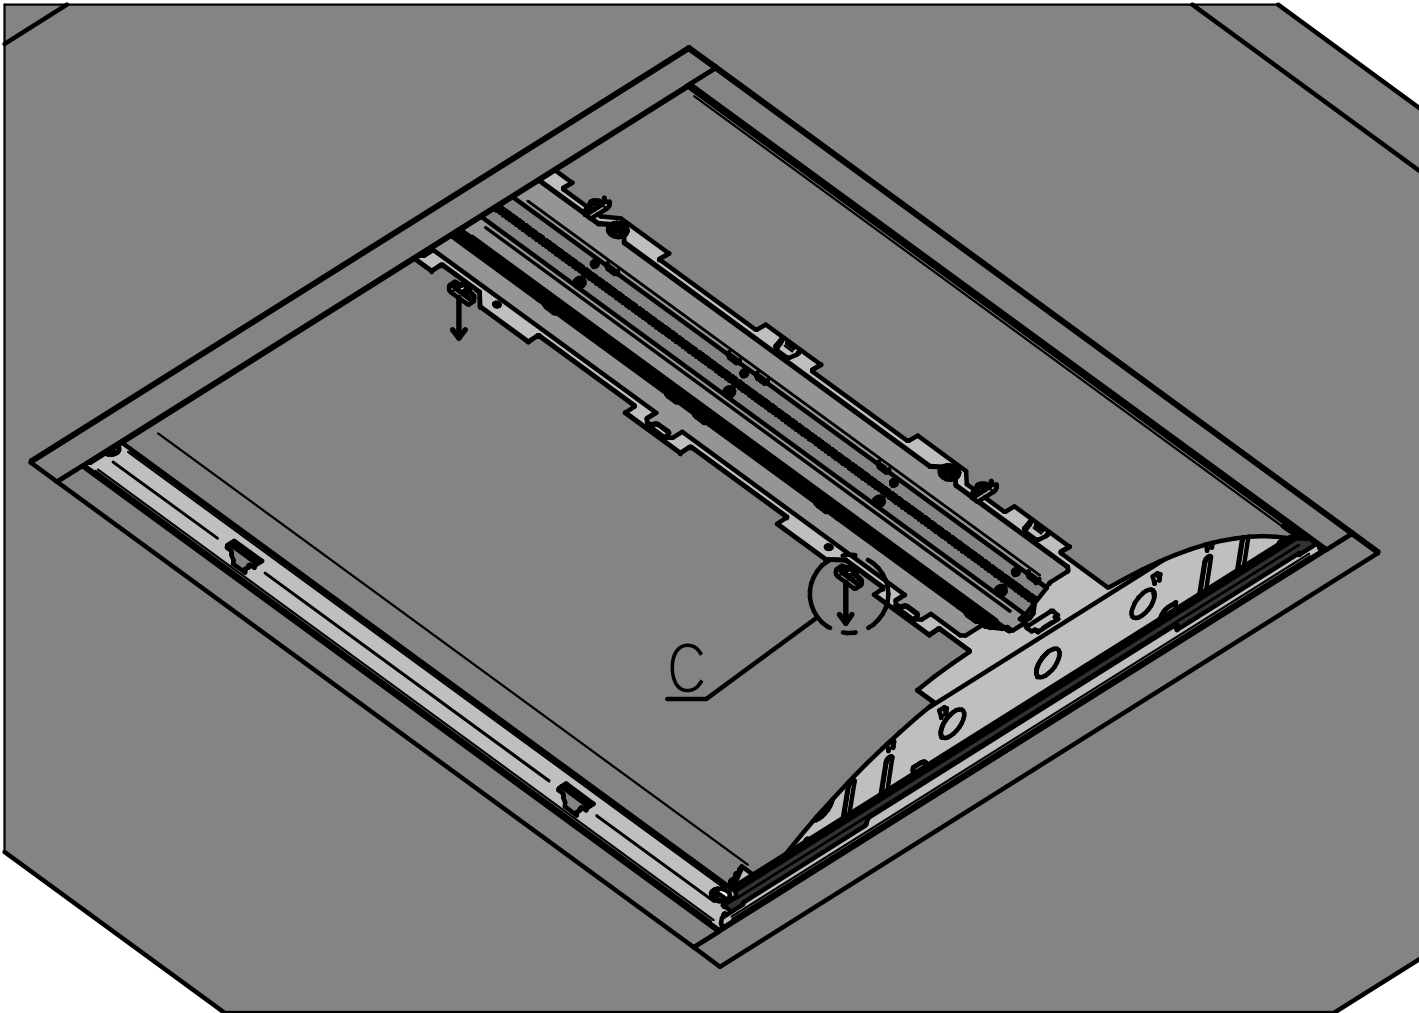


DETAIL C

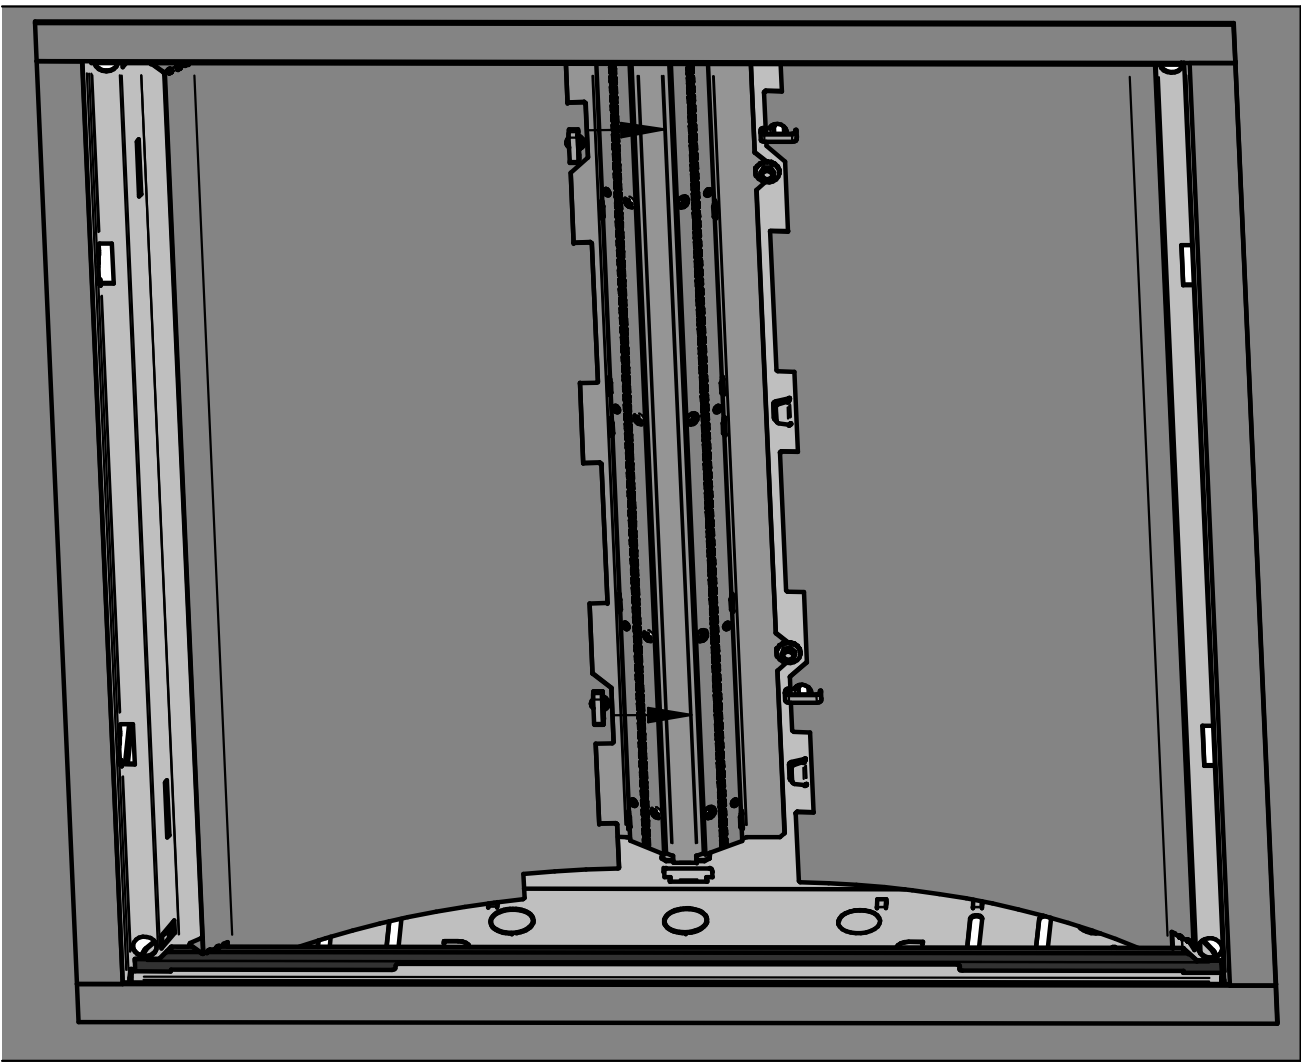

TO REMOVE THE REFLECTORS, ROTATE THE SPRING CLIPS 90 DEGREES LEFT OR RIGHT. GENTLY PULL DOWNWARDS ON THE SPRING CLIPS. WHEN CLIPS CLEAR THEIR MOUNTING SLOT, PULL REFLECTOR TOWARDS THE CENTER OF THE FIXTURE AS SHOWN TO REMOVE. REPEAT ON SECOND REFLECTOR AS NEEDED.

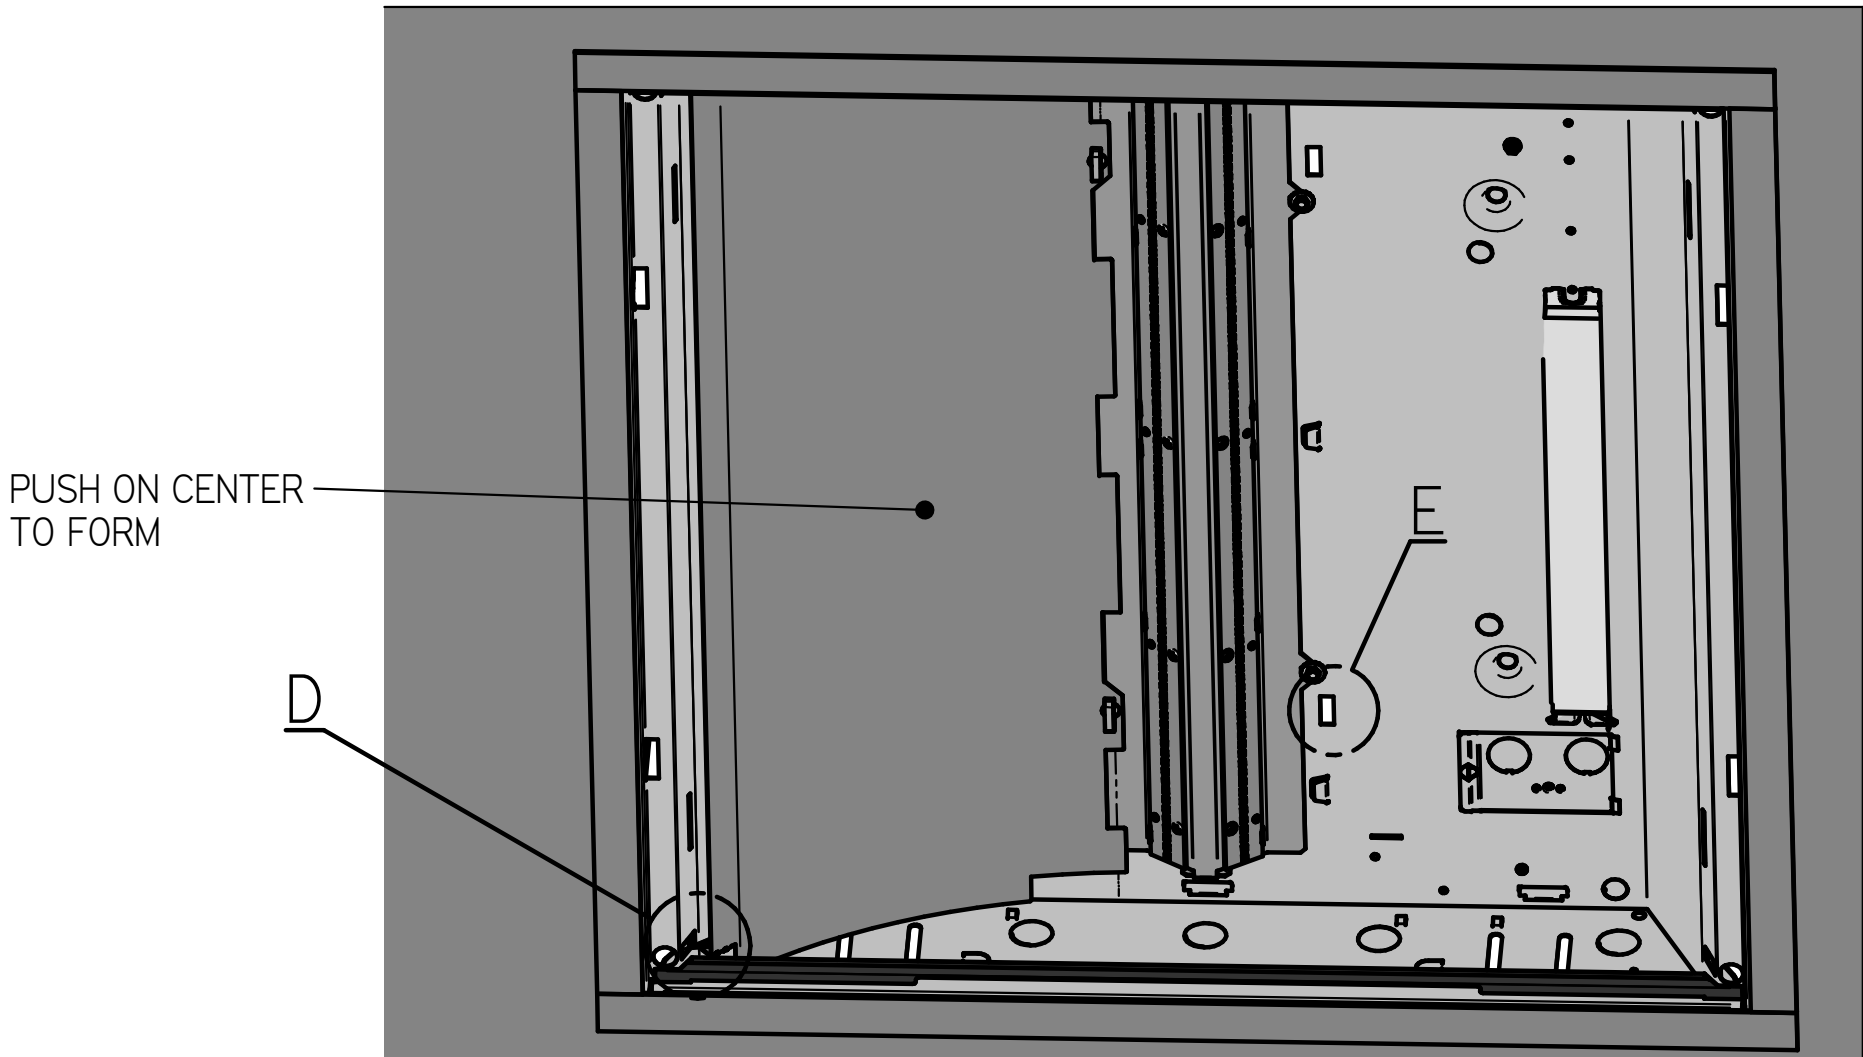

DETAIL D

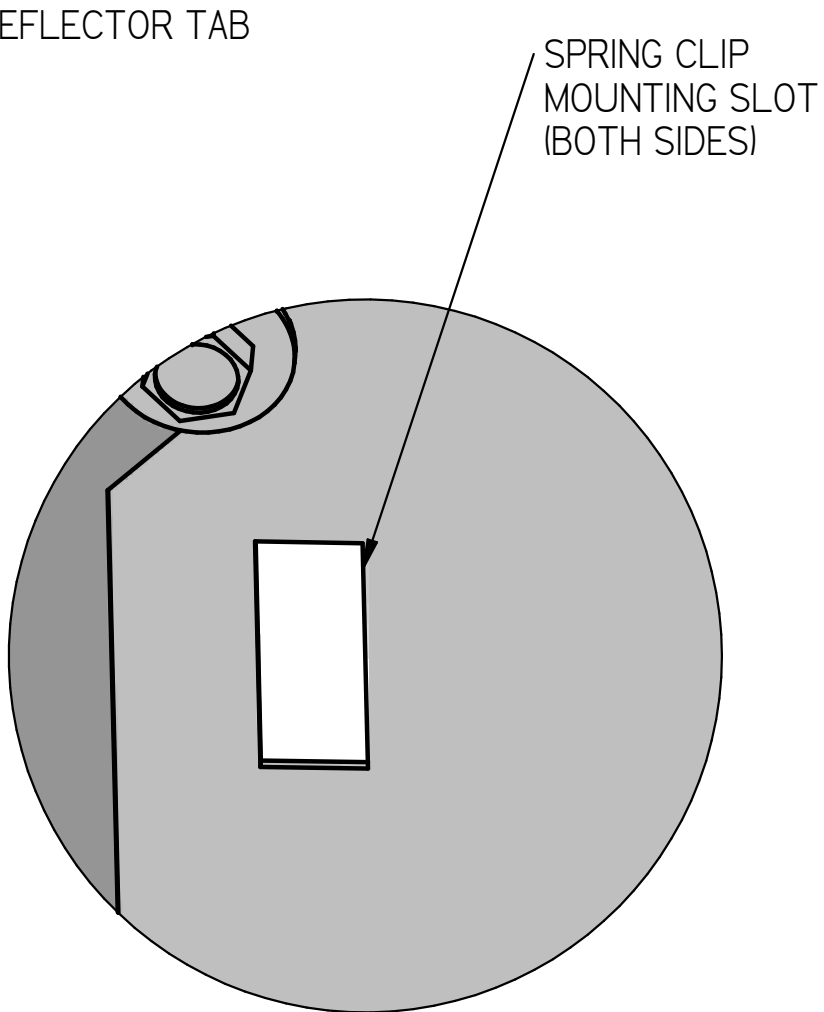

DETAIL E

TO REINSTALL, INSERT FLAT REFLECTOR BACK INTO FIXTURE AND INSERT BOTH TABS ON EACH END INTO THE MOUNTING SLOTS IN THE HOUSING. WHILE HOLDING THE REFLECTOR IN PLACE, AND WITH THE SPRING CLIPS PARALLEL TO THE LED BOARDS, GENTLY APPLY PRESURE ON THE CENTER OF THE REFLECTOR UNTIL THE CLIPS SIT IN THERE RESPECTED SLOTS. ONCE EACH CLIP IS IN PLACE ROTATE 90 DEGREES IN EITHER DIRECTION TO SECURE THE REFLECTOR. REPLACE DOOR. IF NOT PREVIOUSLY REMOVED, CUT STRAPPING ON ONE SIDE AND PULL ON THE BUCKLED END THE REMOVE.