


2X2 & 2X4

DRYWALL FIXTURE

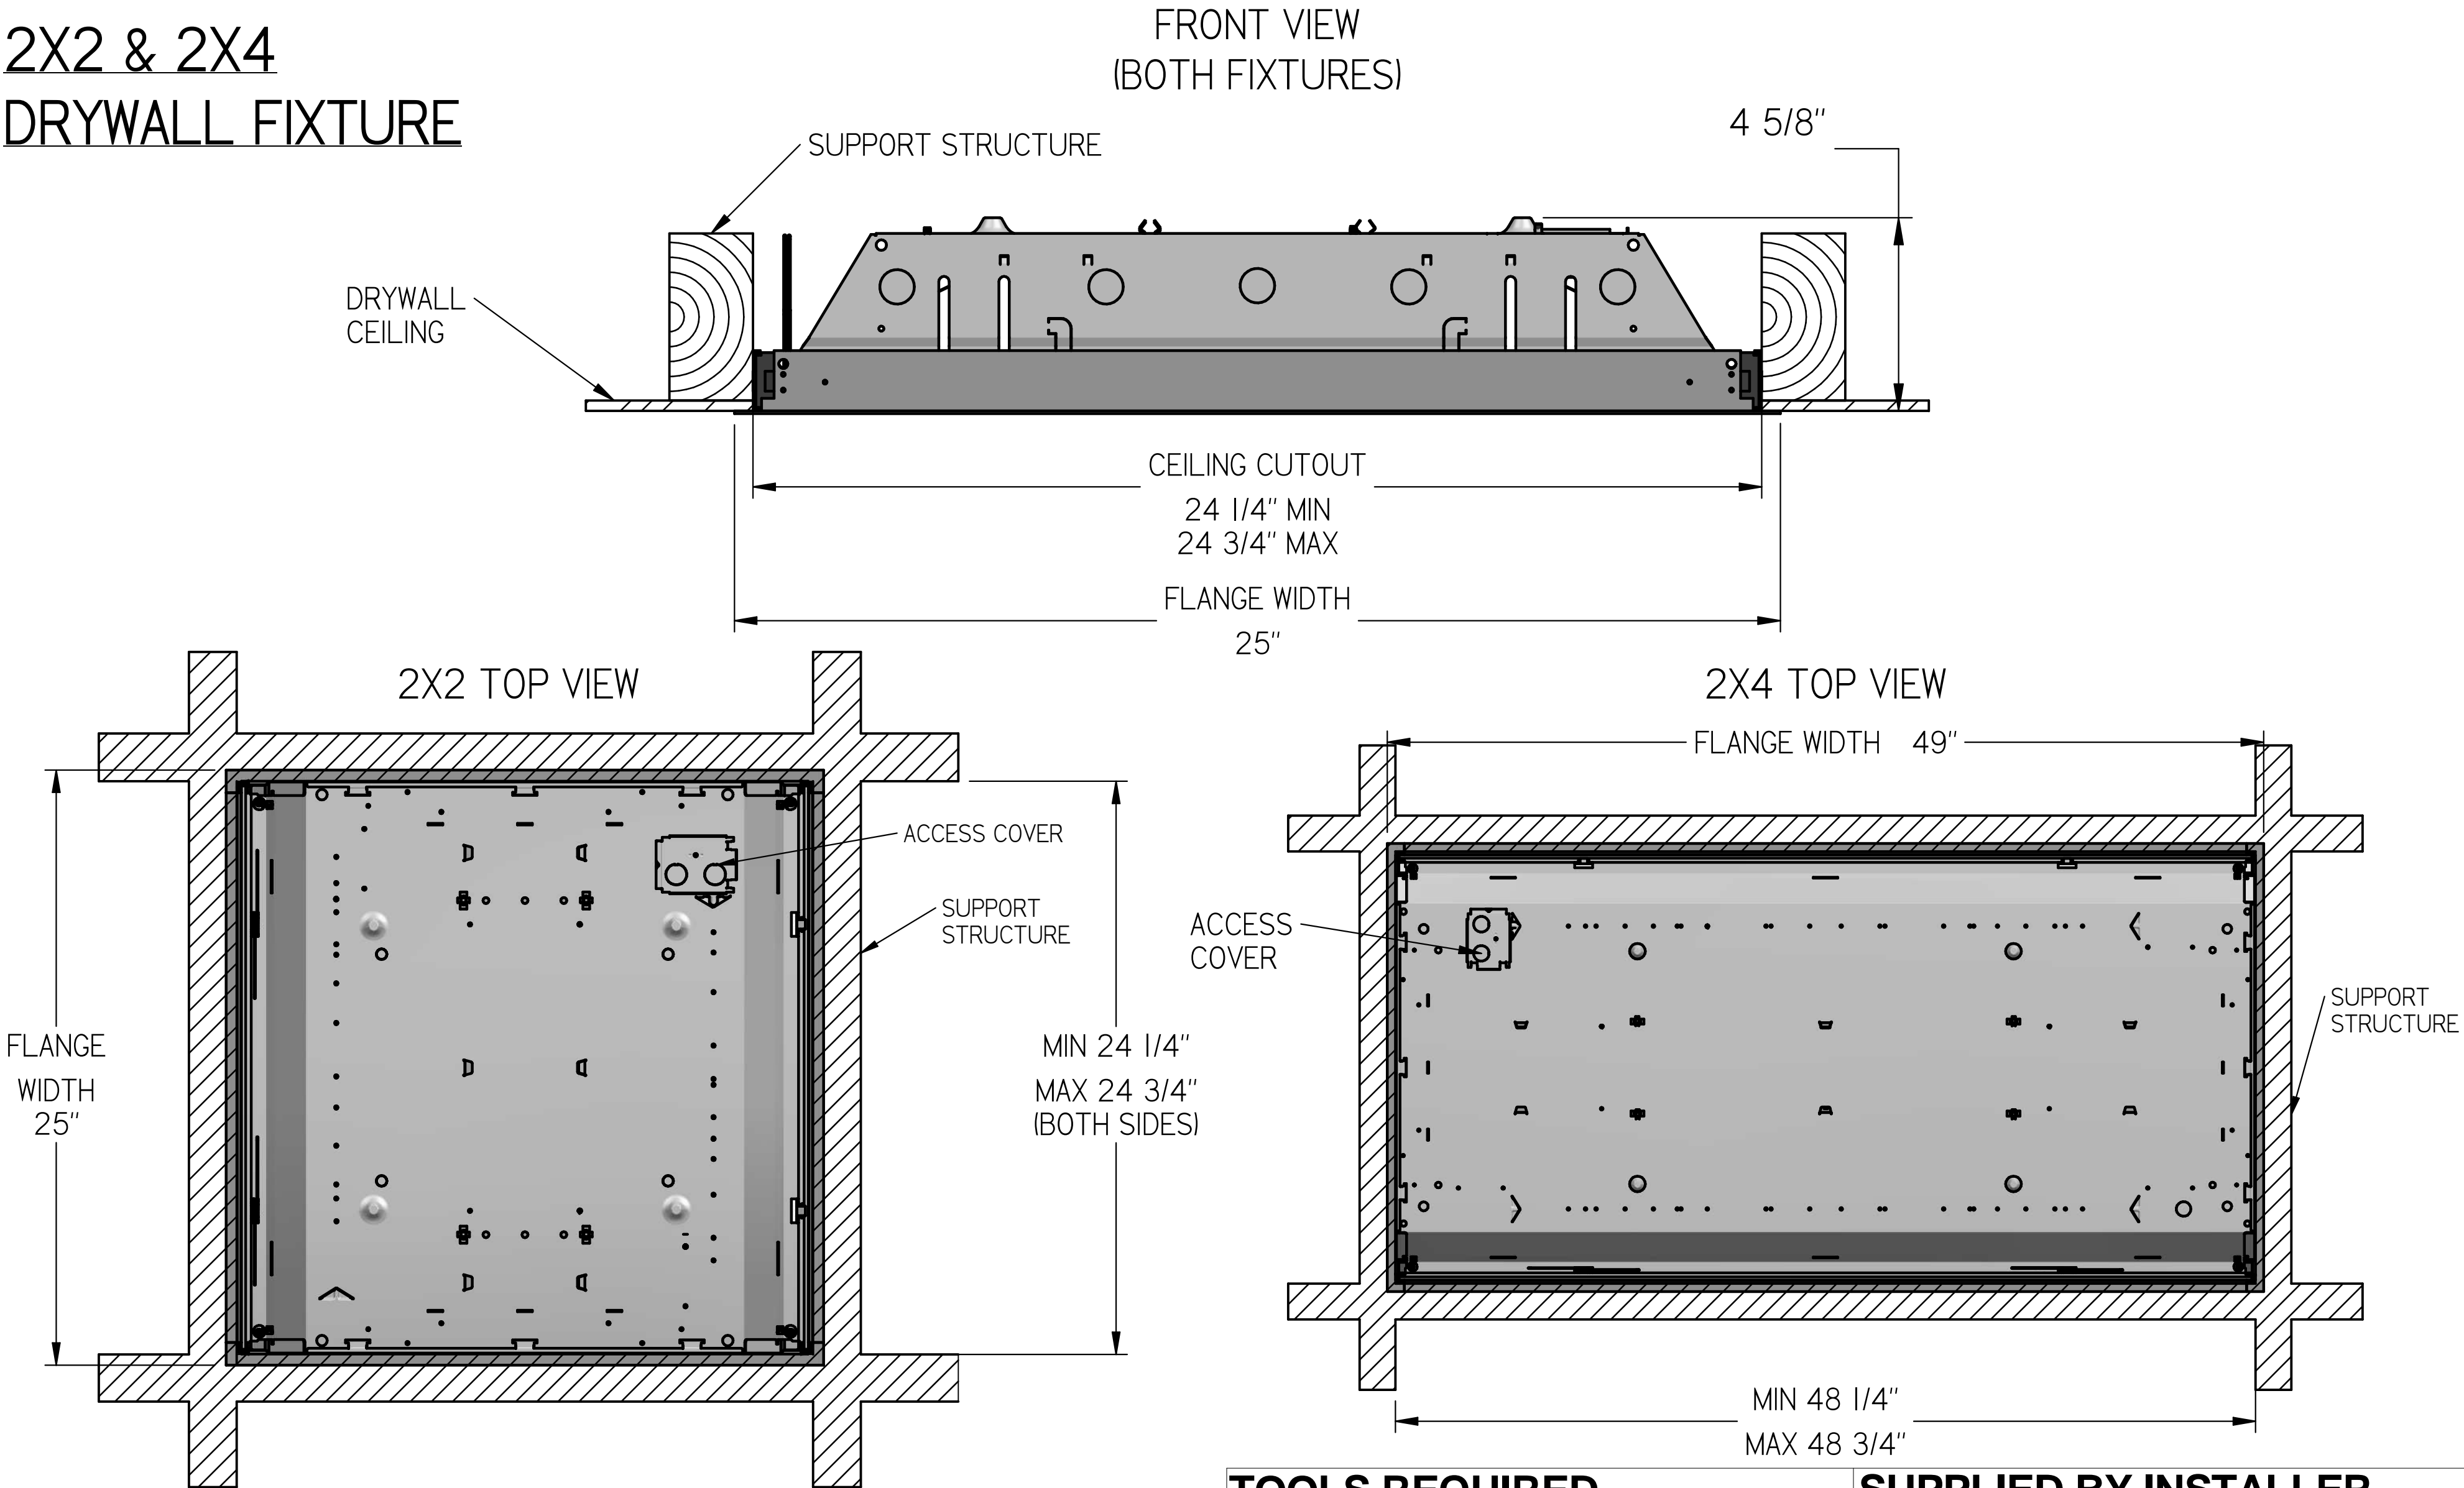

GENERAL NOTES:

1) SEPERATE DRYWALL FLANGE KIT TO NEEDS TO BE ASSEMBLED AND INSTALLED BEFORE FIXTURE INSTALLATION. REFER TO THE DRYWALL FLANGE KIT ASSEMBLY GUIDE.

2) GUY WIRE CAN BE USED TO SUPPORT THE DRYWALL FLANGE ASSEMBLY INSTEAD OF THE SUGGESTED SUPPORT BLOCKING.


3) REFER TO COMPONENT REPLACEMENT GUIDE 93166200 TO REPLACE INTERNAL COMPONENTS

4) IF APPLICABLE, DO NOT REMOVE DOOR STRAPPING UNTIL FIXTURE IS FULLY INSTALLED.


TOOLS REQUIRED	SUPPLIED BY INSTALLER
-DRYWALL KNIFE	-GUY WIRE (OPTIONAL) -(8) FASTENERS (1 1/4" MINIMUM)

IX4 DRYWALL FIXTURE



FRONT VIEW

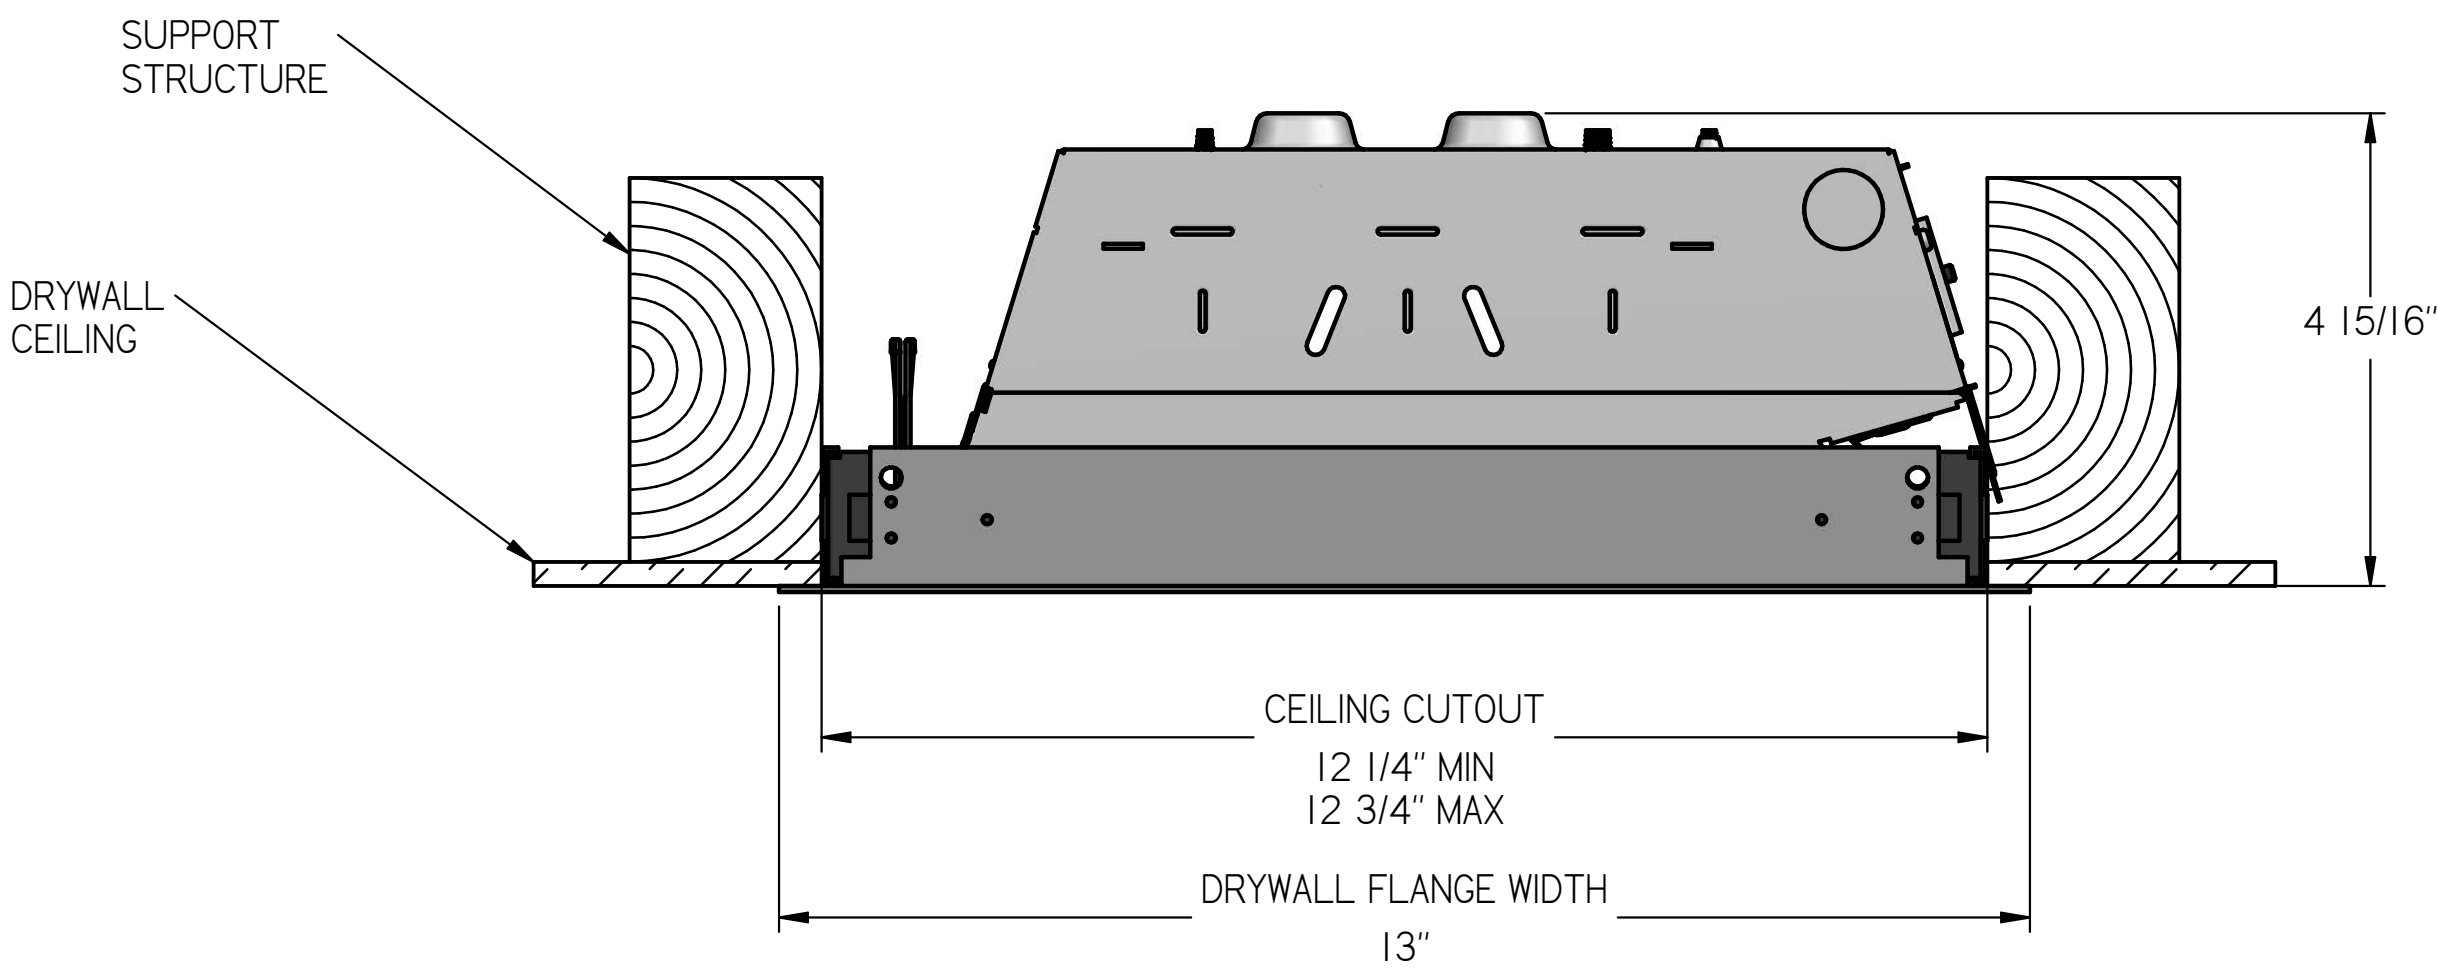

TOP VIEW

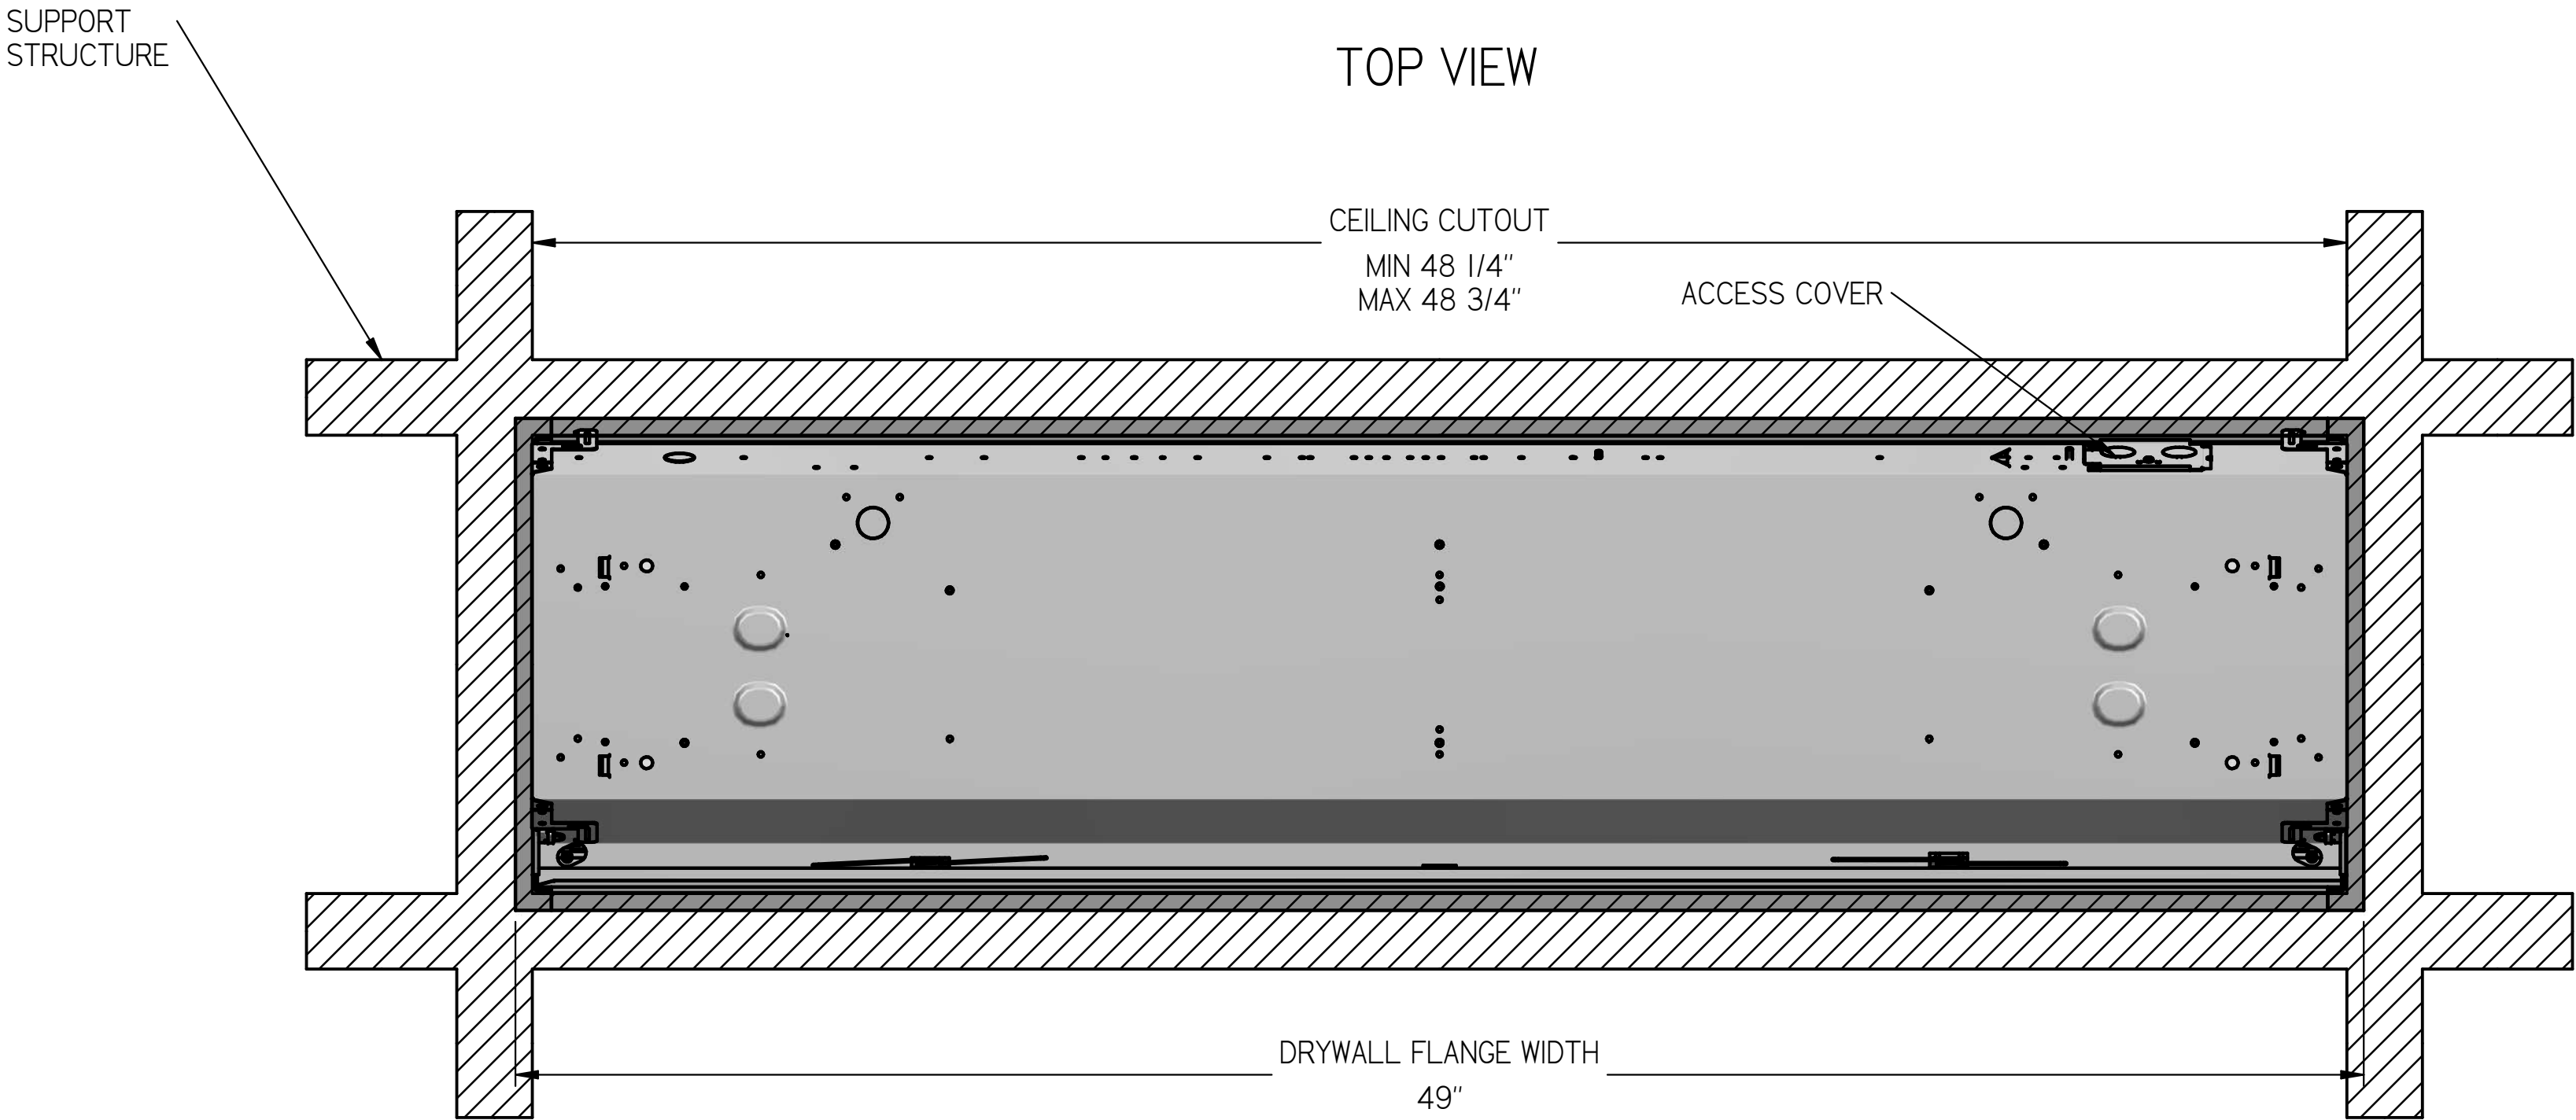



1

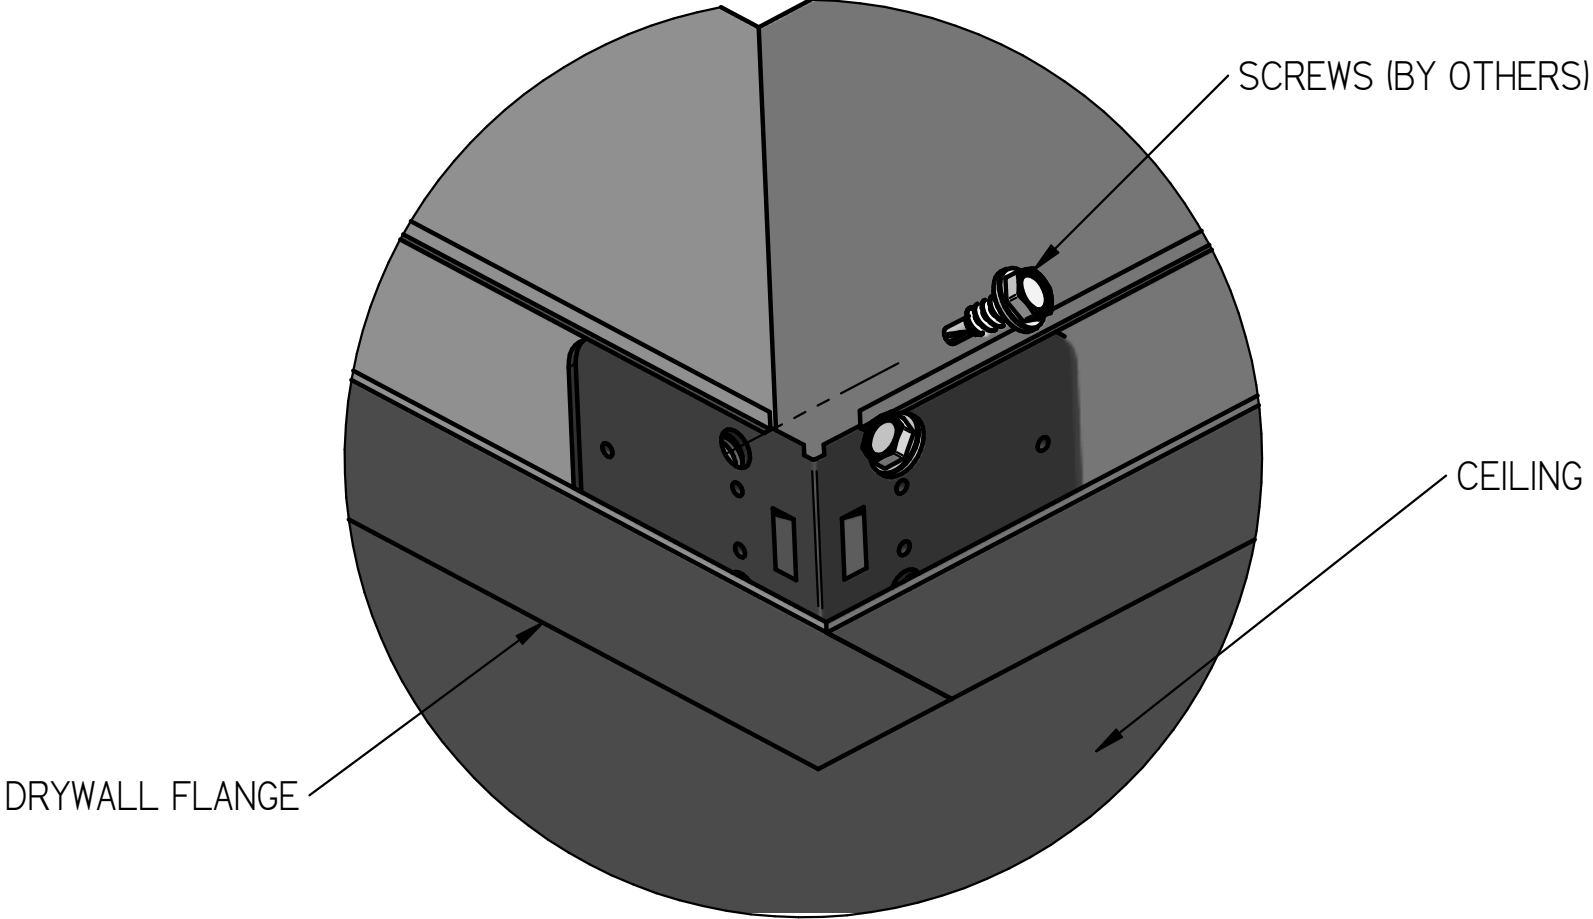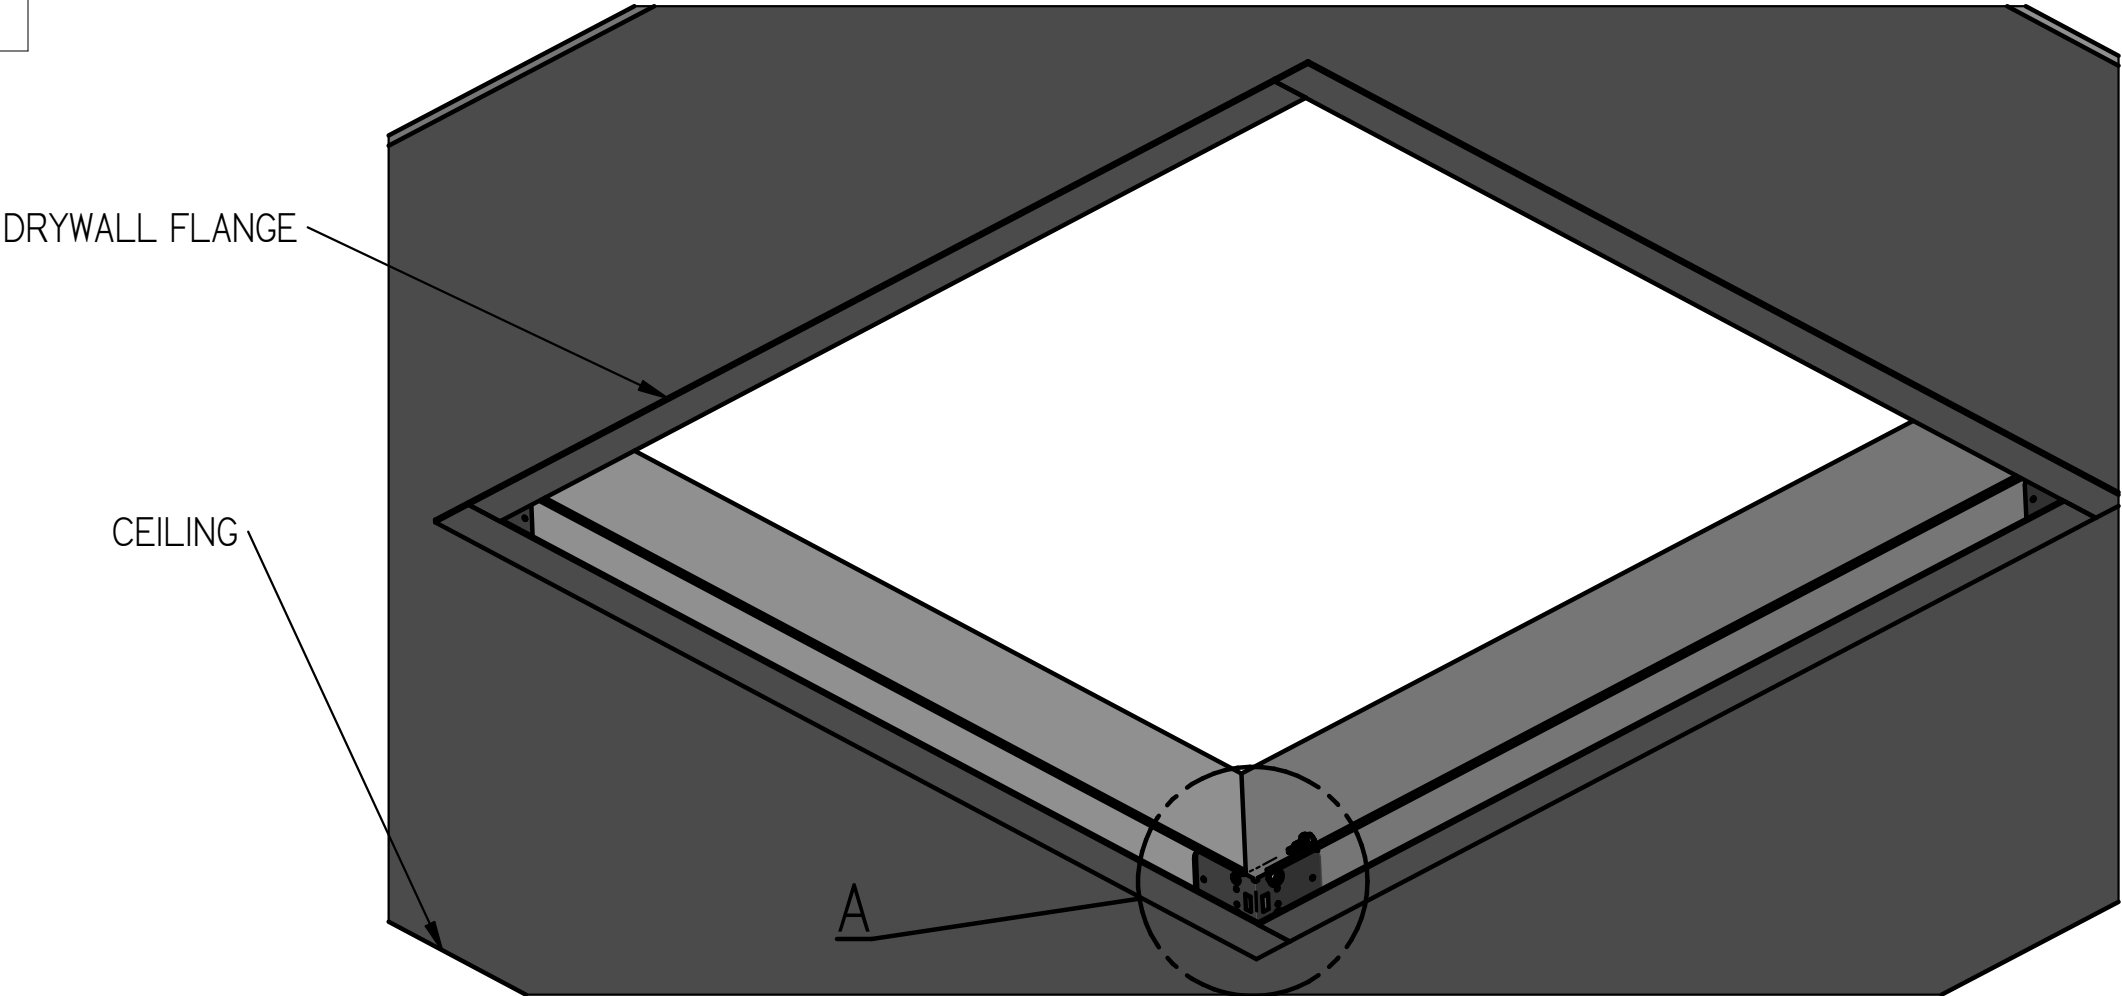

DETAIL A


AFTER MAKING THE HOLE CUT OUT IN THE CEILING BASED ON THE DIMENSIONS GIVEN ON SHEETS 1 AND 2, PUT TOGETHER THE DRYWALL FLANGE KIT WITH THE PROVIDED INSTRUCTIONS. INSTALL DRYWALL FLANGE KIT INTO CEILING BY SECURING TWO LOW PROFILE SCREWS INTO EACH CORNER OF THE DRYWALL FRAME (SUPPLIED BY OTHERS).

2

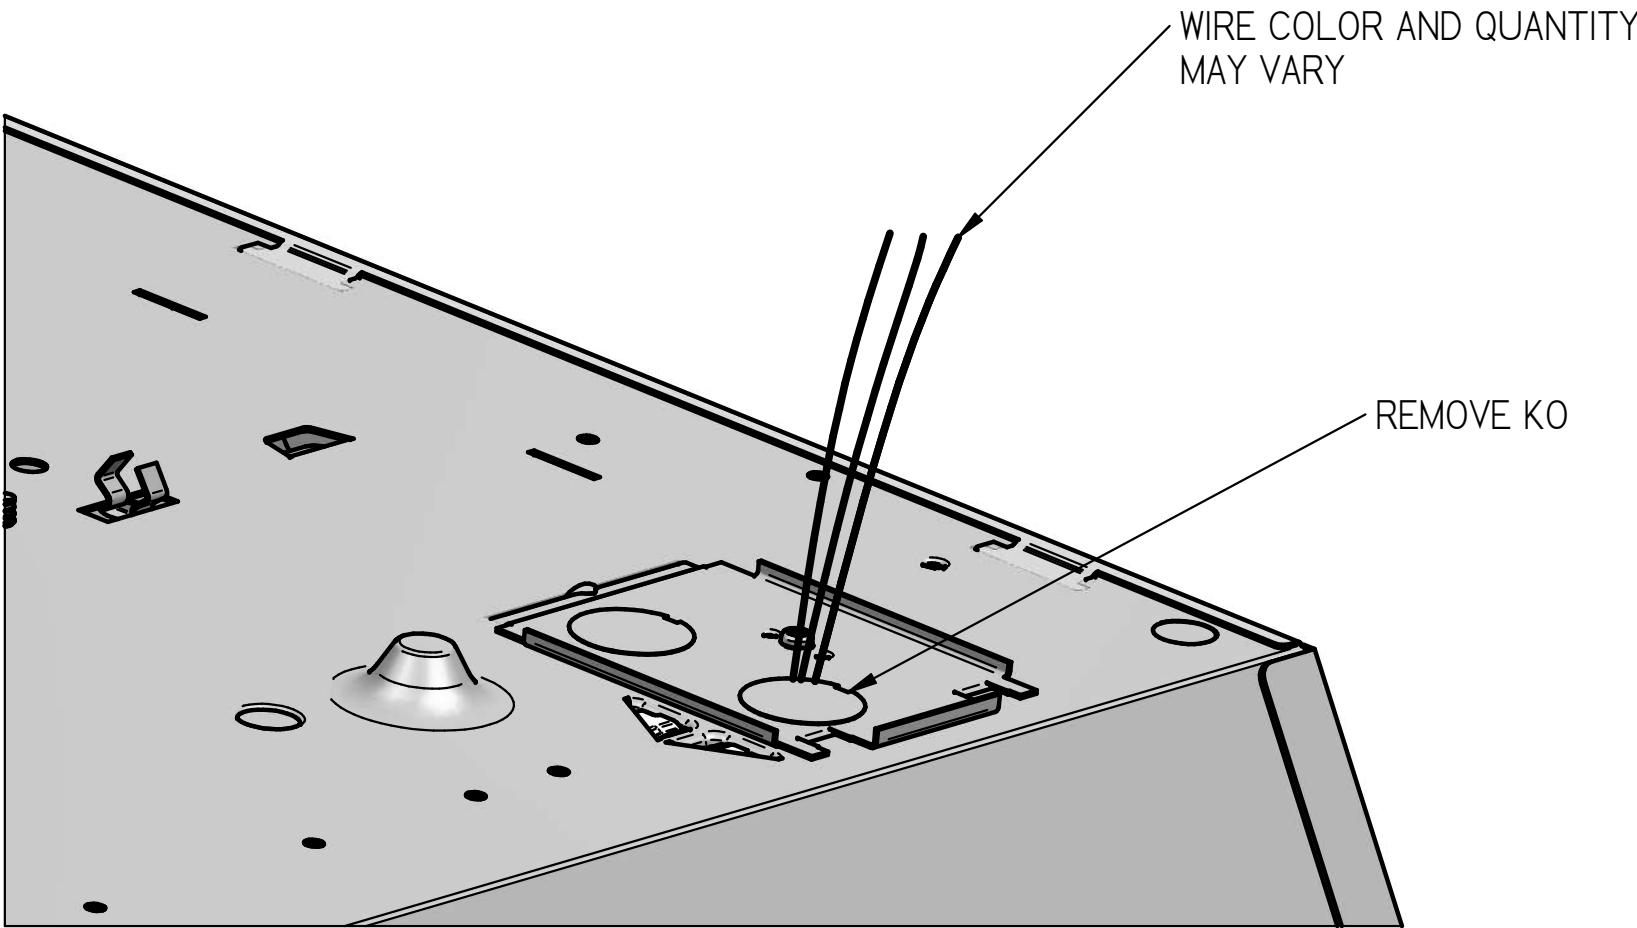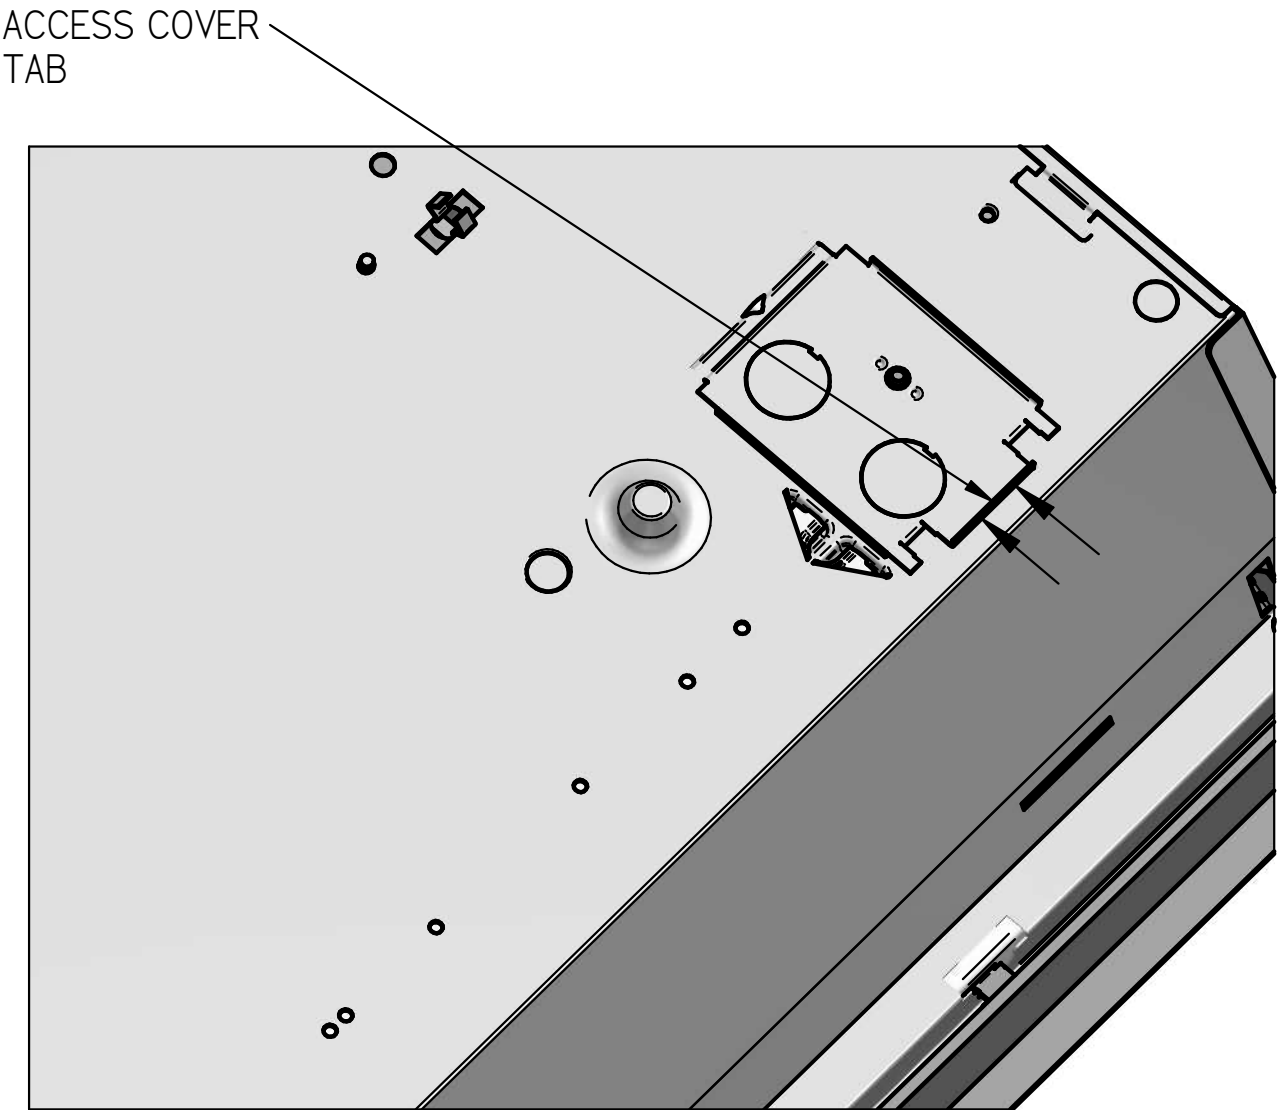

REMOVE ACCESS COVER BY FIRST PUSHING ON THE ACCESS COVER TAB IN THE DIRECTION SHOWN AND THEN PULLING UP ON THE TAB. ALL WIRING WILL BE SECURED TO ACCESS COVER. REMOVE DESIRED KO AND FEED WIRING THROUGH. WIRE LEADS TO BUILDING POWER. AFTER WIRING, REPLACE ACCESS COVER


3

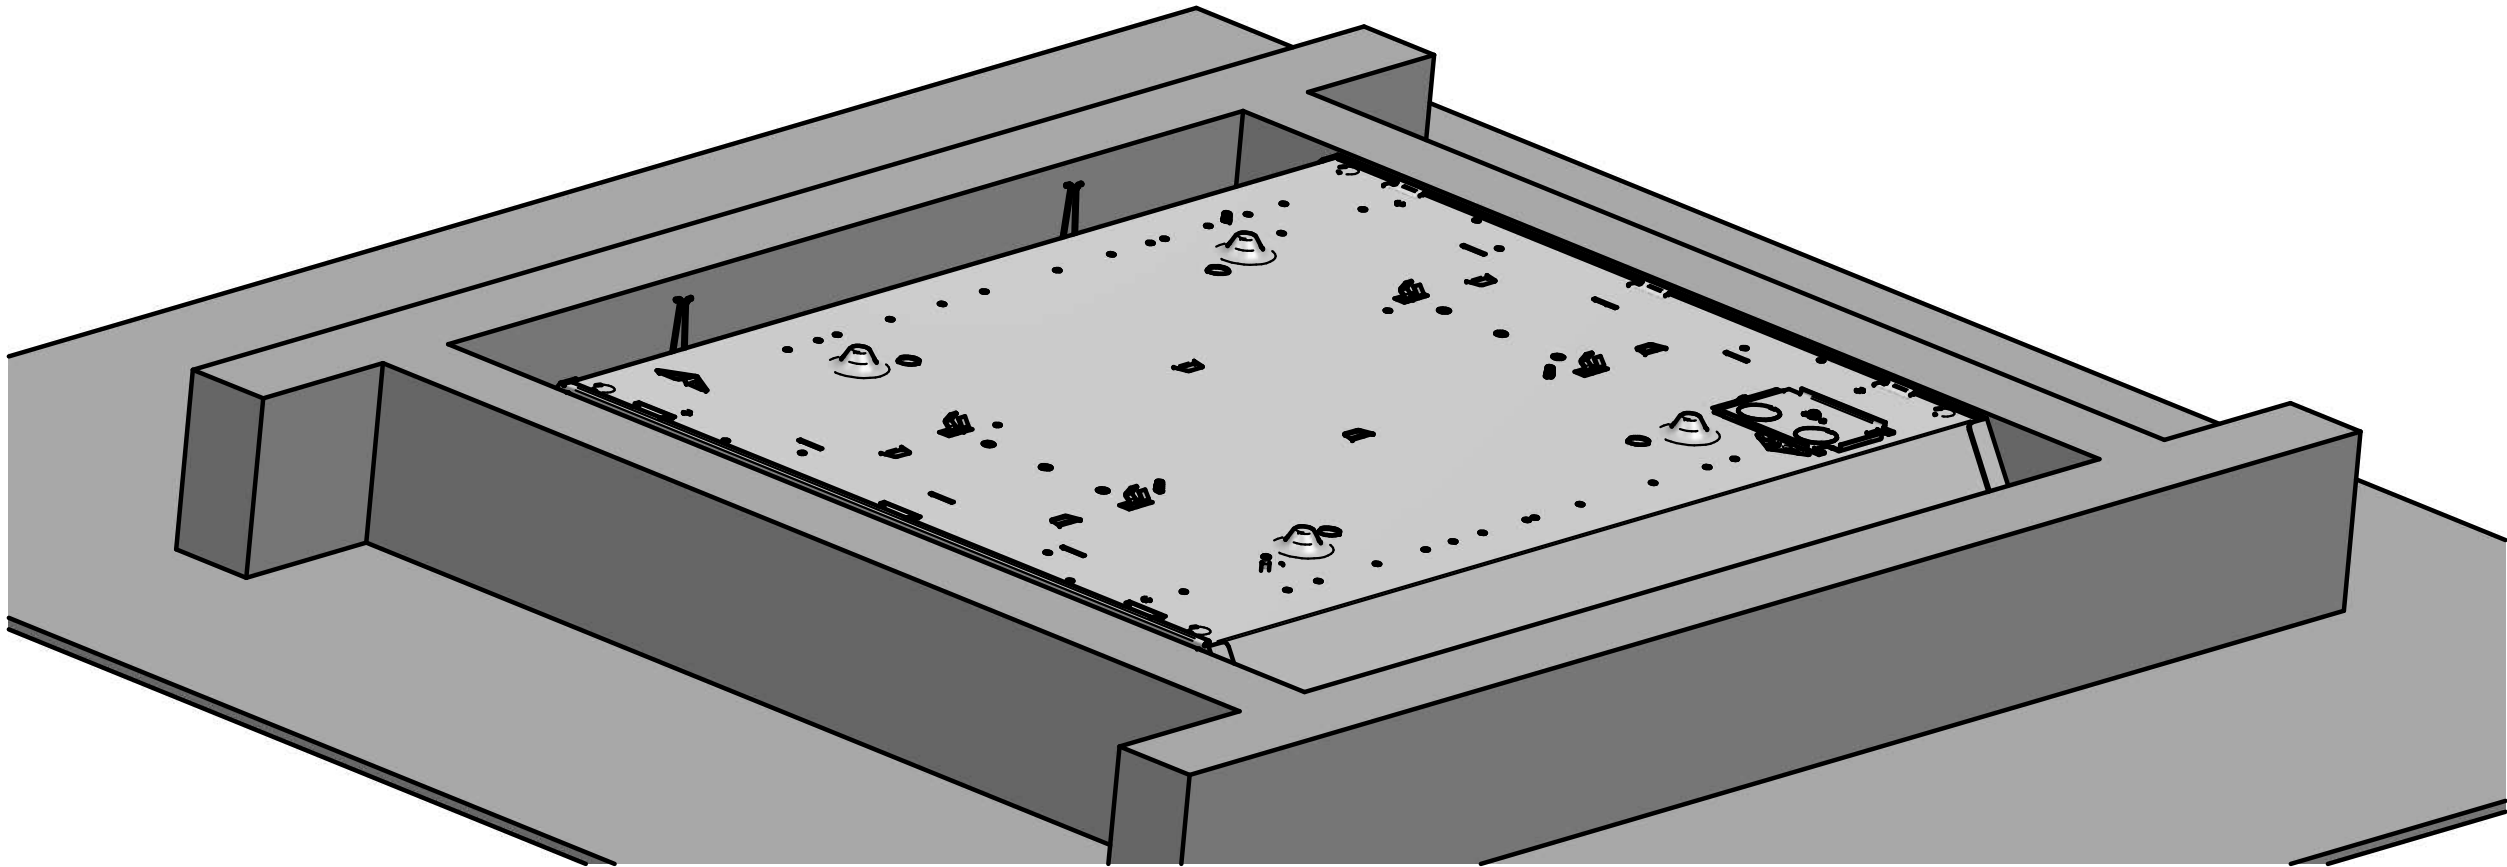

PLACE FIXTURE ABOVE THE CEILING AT AN ANGLE AND LOWER IN PLACE INSIDE THE DRYWALL FLANGE KIT. ONCE FULLY INSTALLED, CUT STRAPPING ONVONE SIDE AND PULL BUCKLE END UNTIL STRAPPING IS REMOVED FROM FIXTURE. THERE MAY BE MULTIPLE STRAPS DEPENDING ON FIXTURE SIZE.

ADDITIONAL INFORMATION: DOOR AND REFLECTOR REMOVAL



I

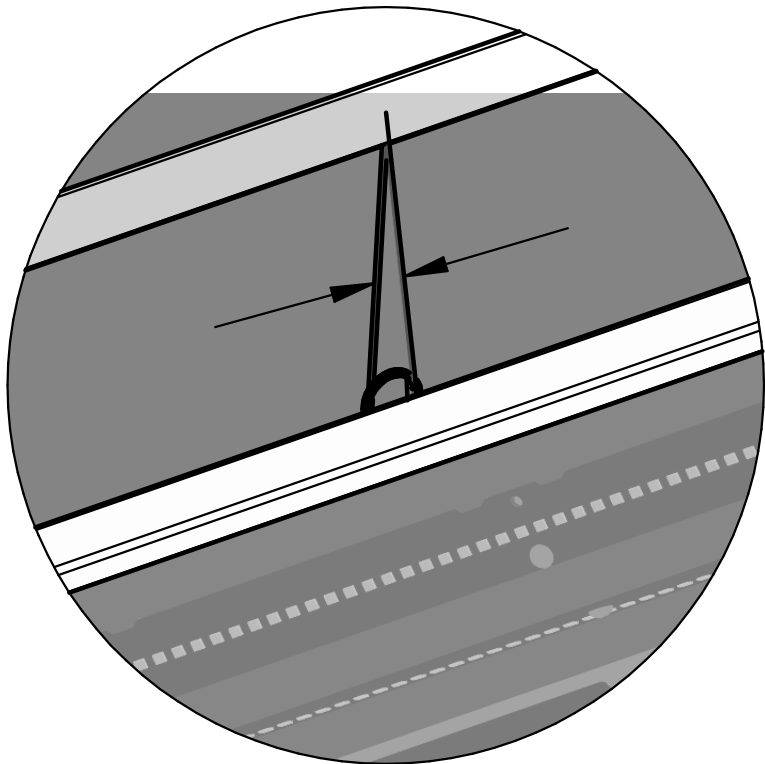




DETAIL D

CLOSED POSITION




VIEW FROM BELOW

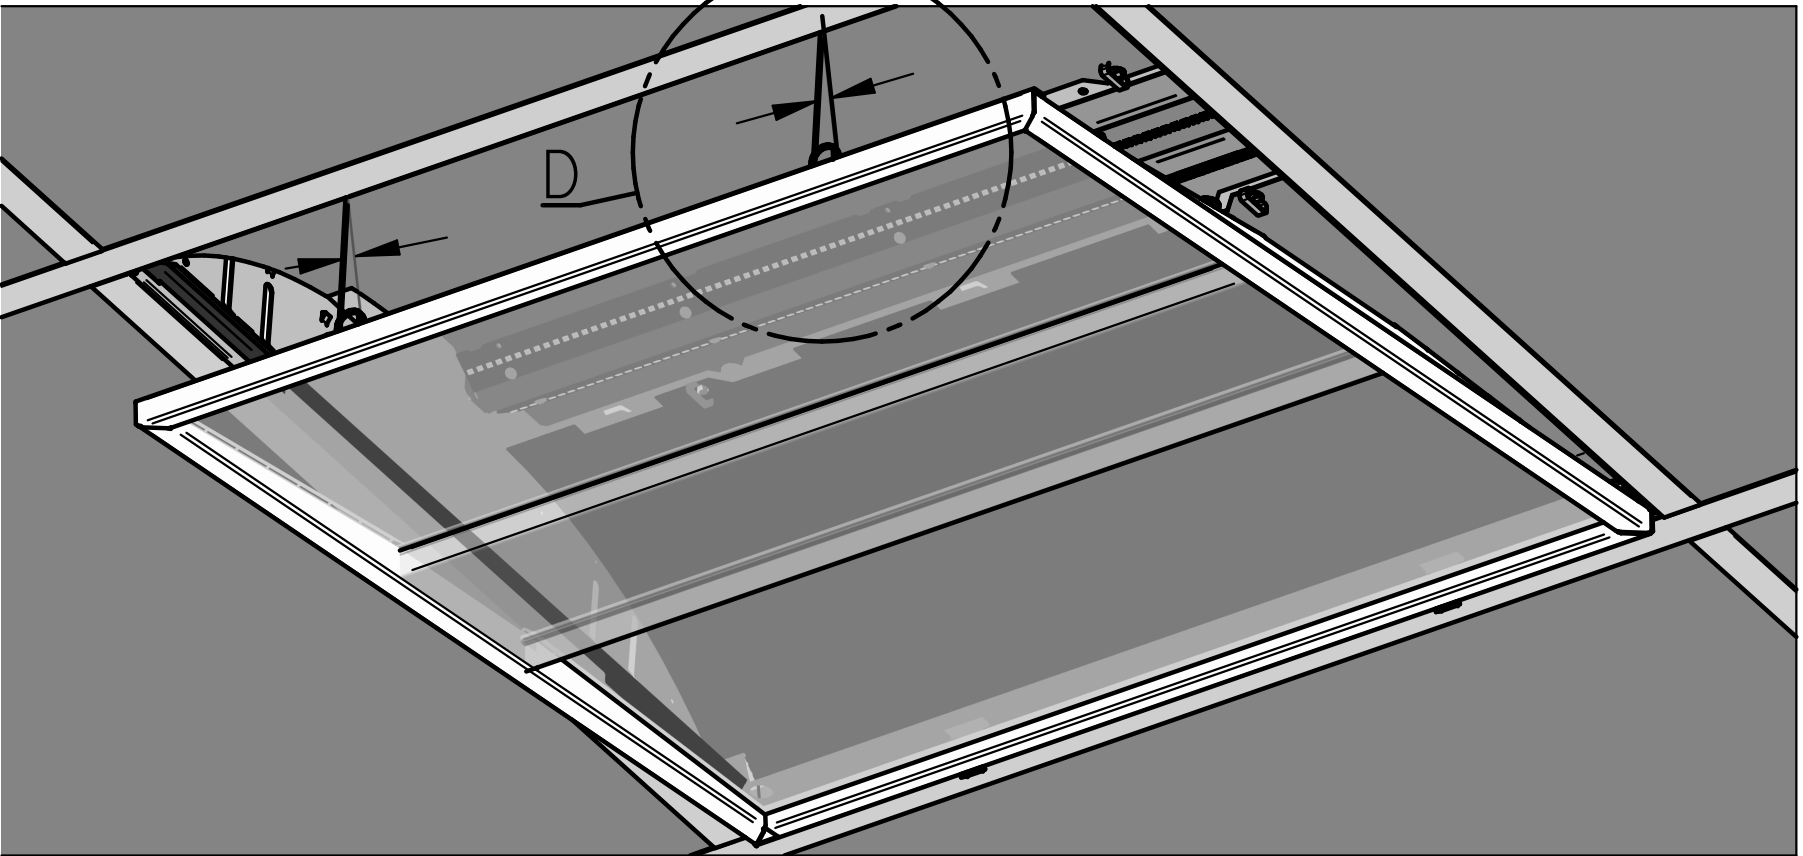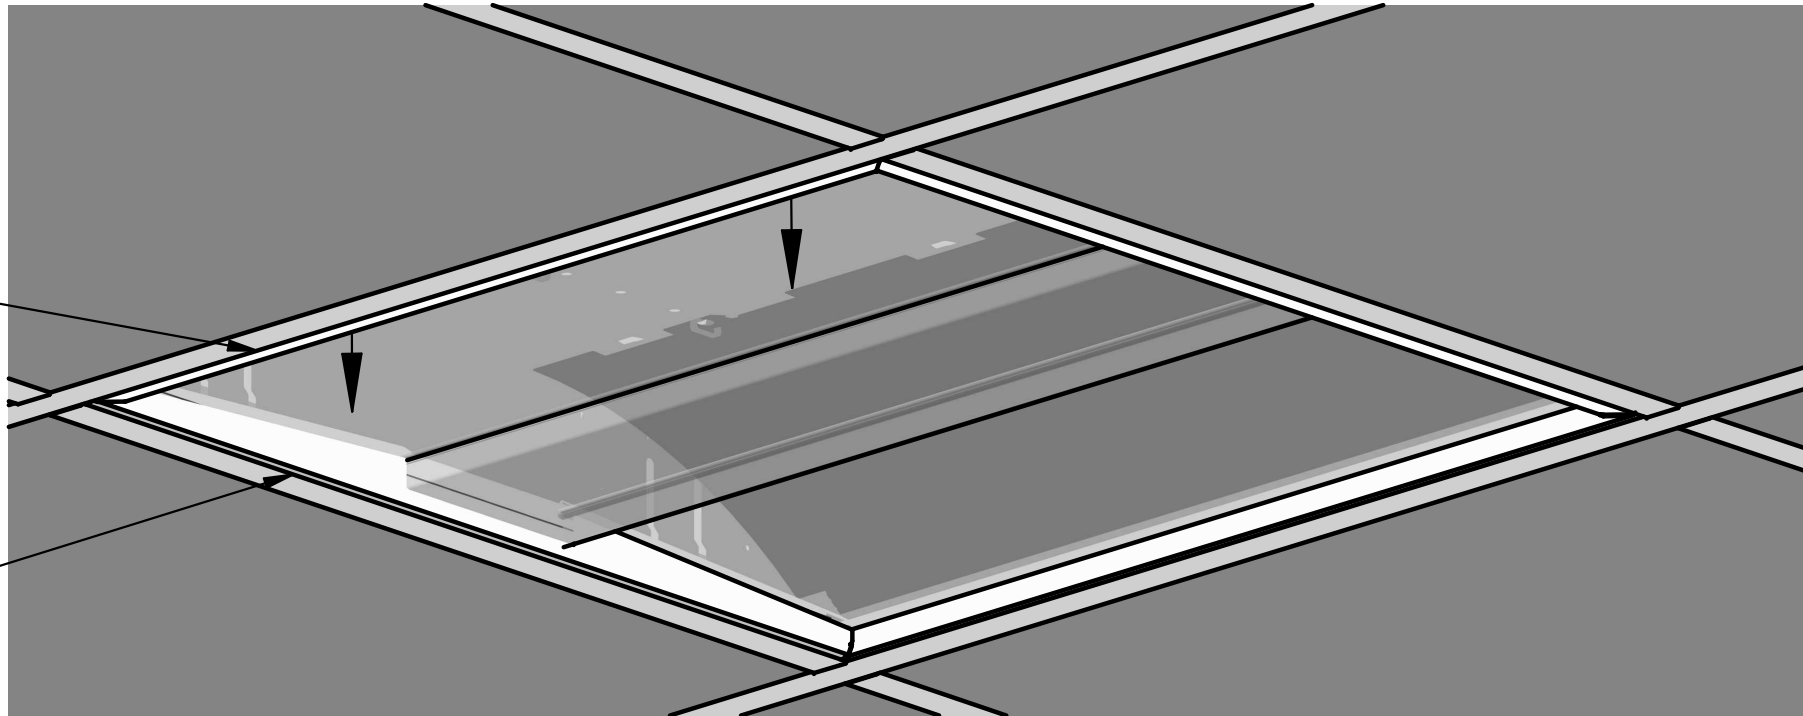

GENTLY BUT FIRMLY PULL DOWN ON ONE OF THE SIDES PARALLEL TO THE CENTER CHANNEL UNTIL THE DOOR STARTS TO SEPERATE FROM THE HOUSING. IF THE DOOR ISNT OPENING, THE HINGE SIDE IS BEING PULLED ON, SWITCH TO THE OTHER SIDE OF THE DOOR. ALLOW DOOR TO OPEN UNTIL STOPPED BY THE END OF THE TORSION SPRINGS. SQUEEZE IN ON BOTH SIDES OF THE TORSION SPRINGS TO RELEASE DOOR FROM HOUSING.

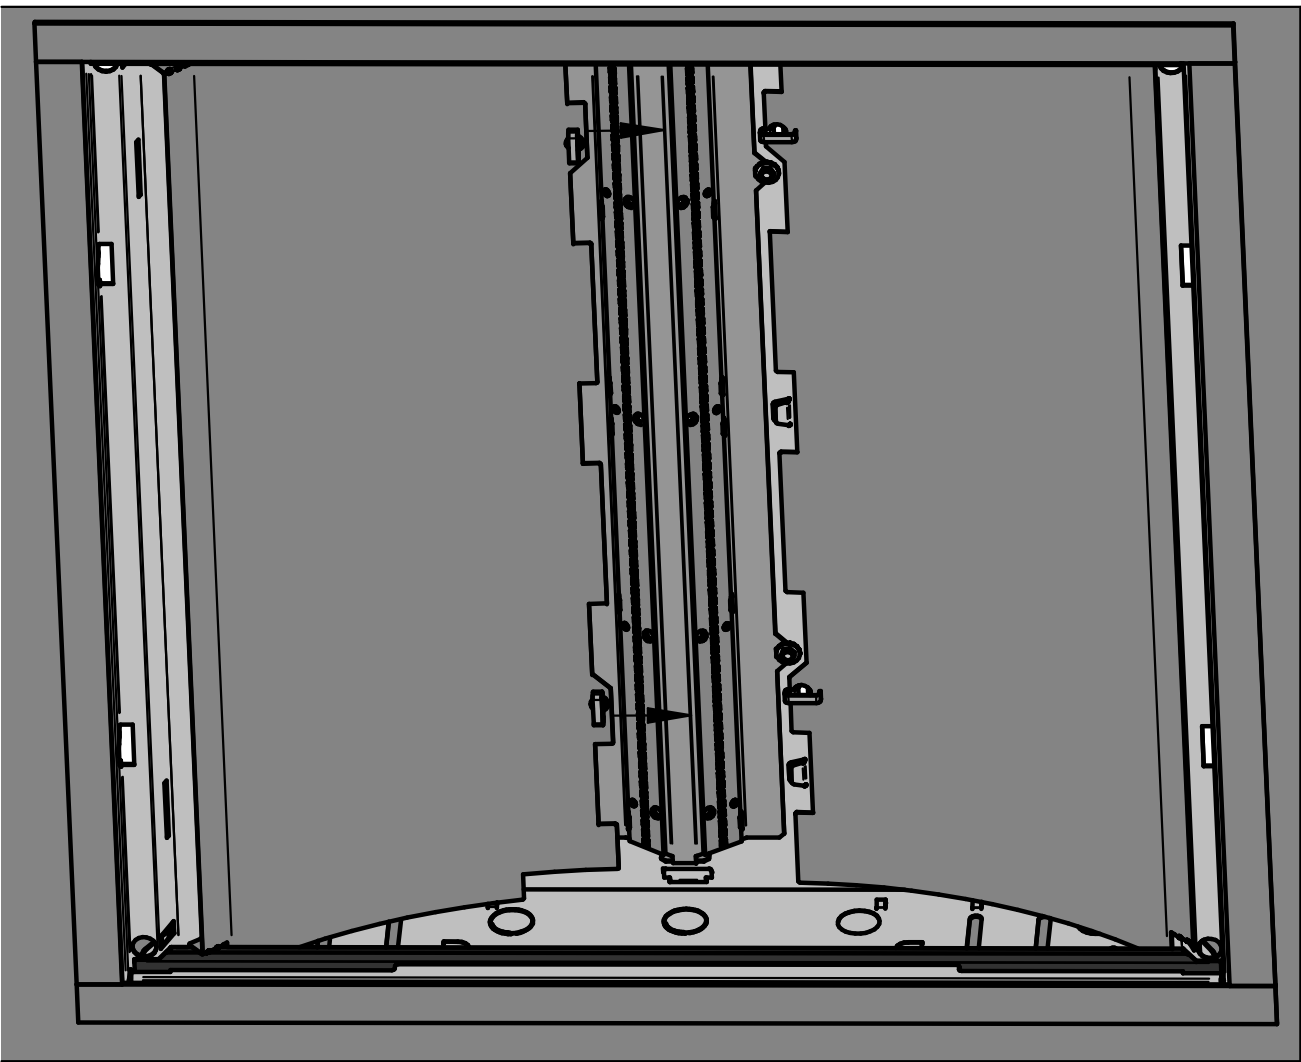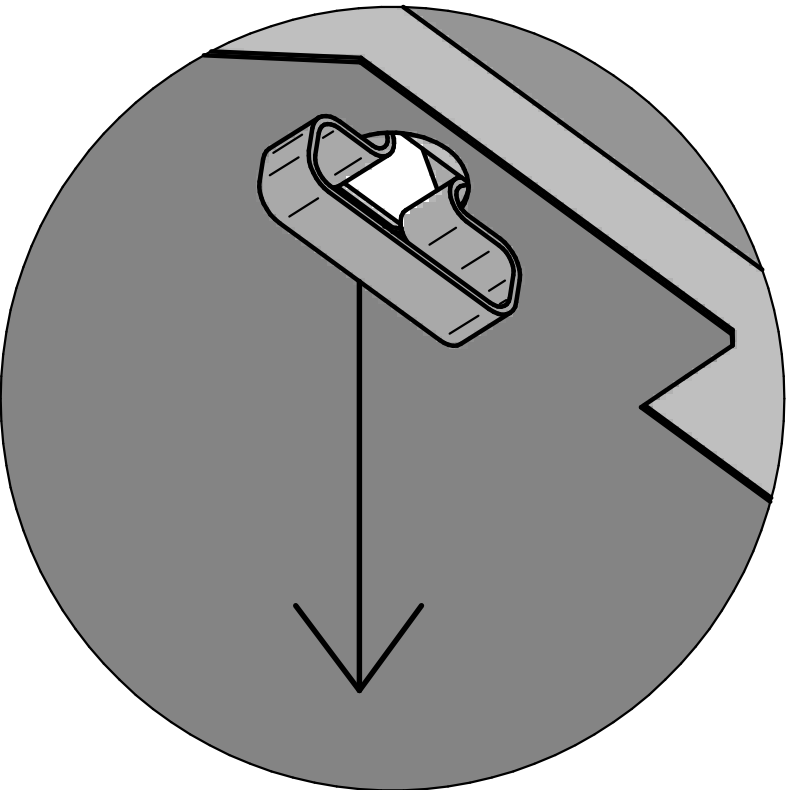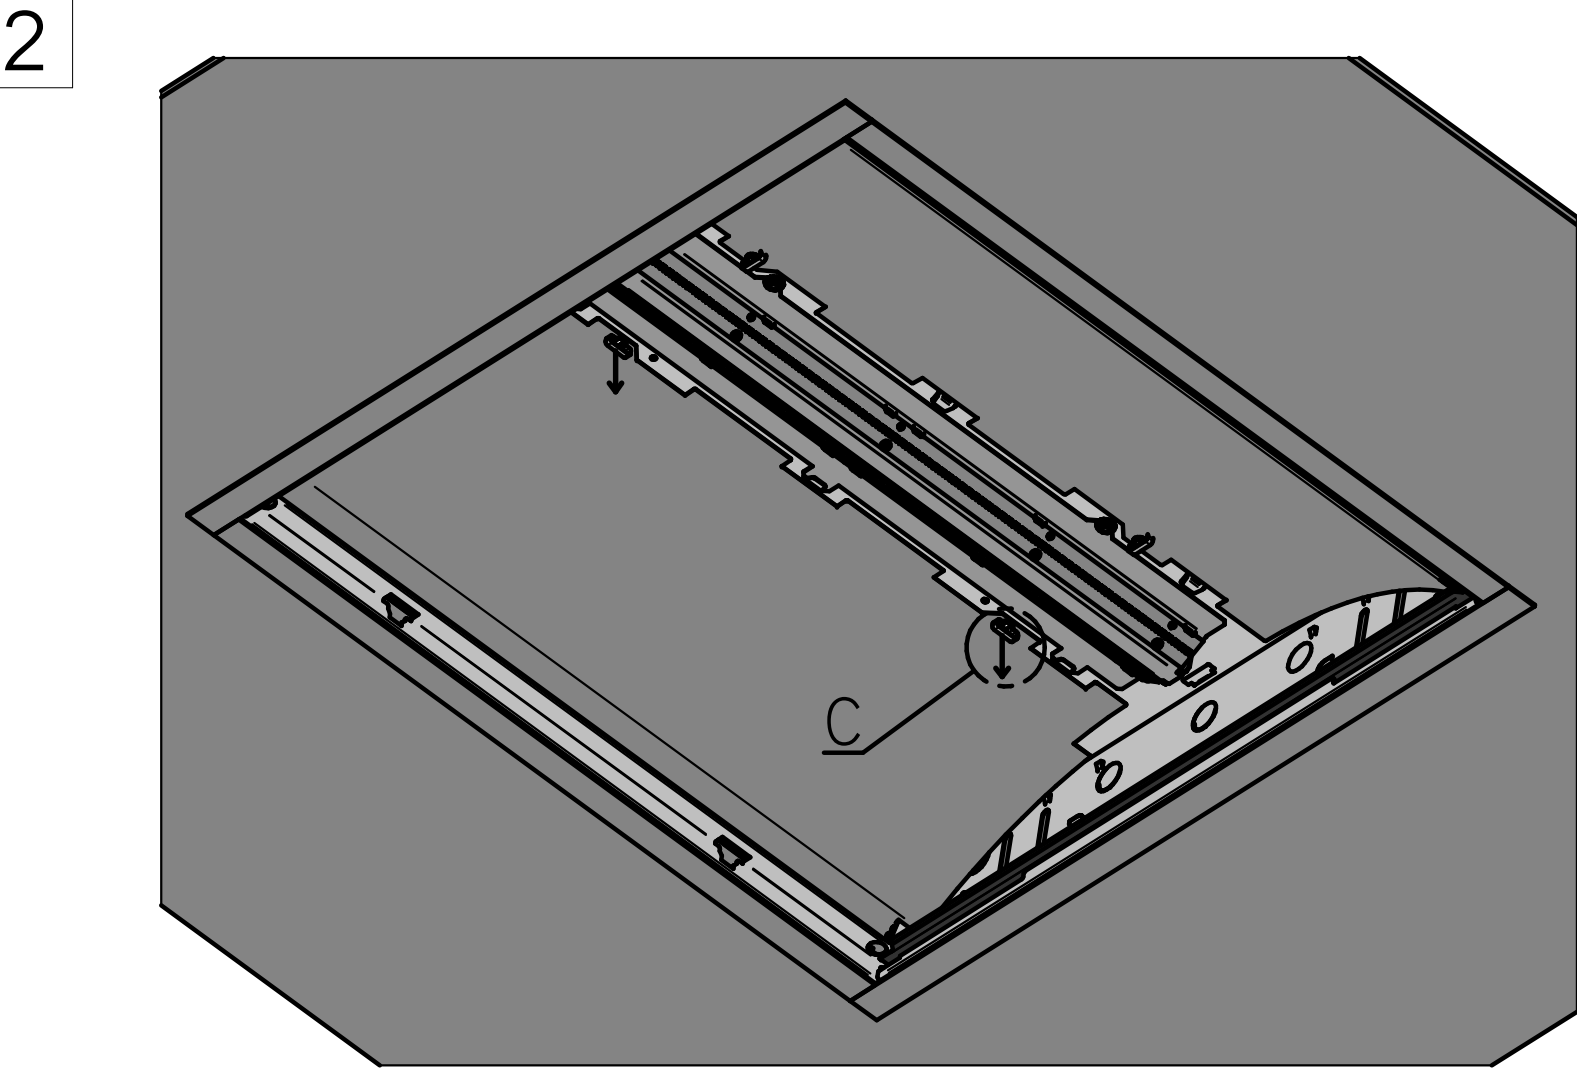



TO REMOVE THE REFLECTORS, ROTATE THE SPRING CLIPS 90 DEGREES LEFT OR RIGHT. GENTLY PULL DOWNWARDS ON THE SPRING CLIPS. WHEN CLIPS CLEAR THEIR MOUNTING SLOT, PULL REFLECTOR TOWARDS THE CENTER OF THE FIXTURE AS SHOWN TO REMOVE. REPEAT ON SECOND REFLECTOR AS NEEDED.

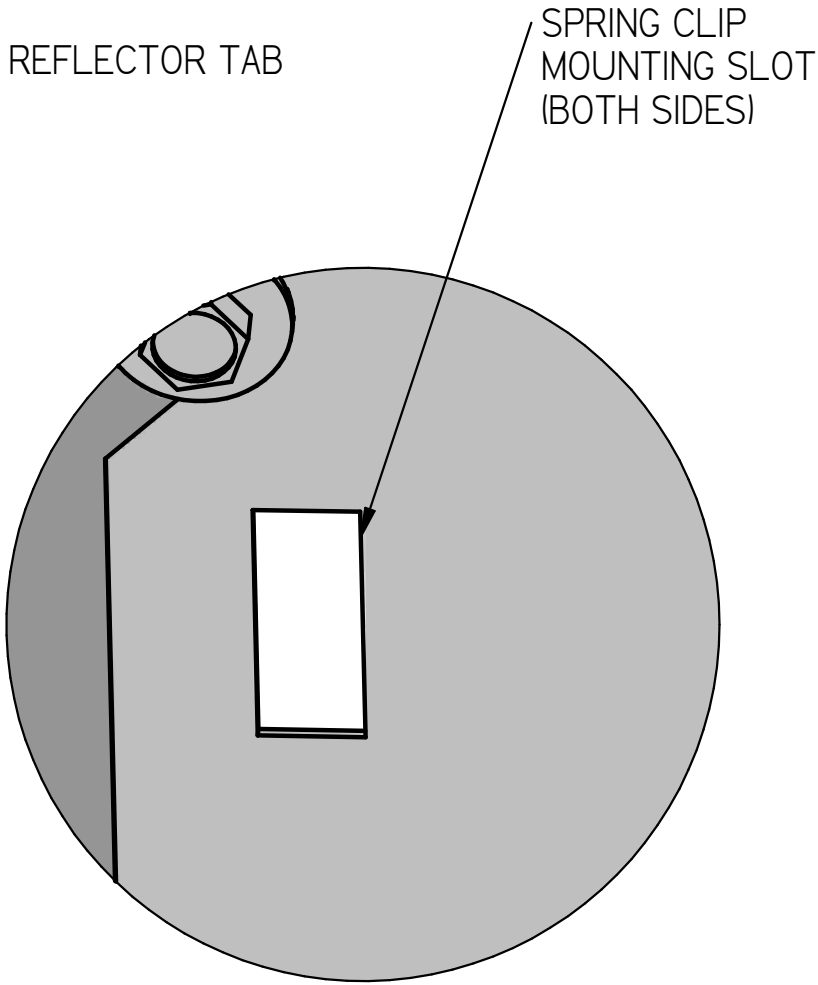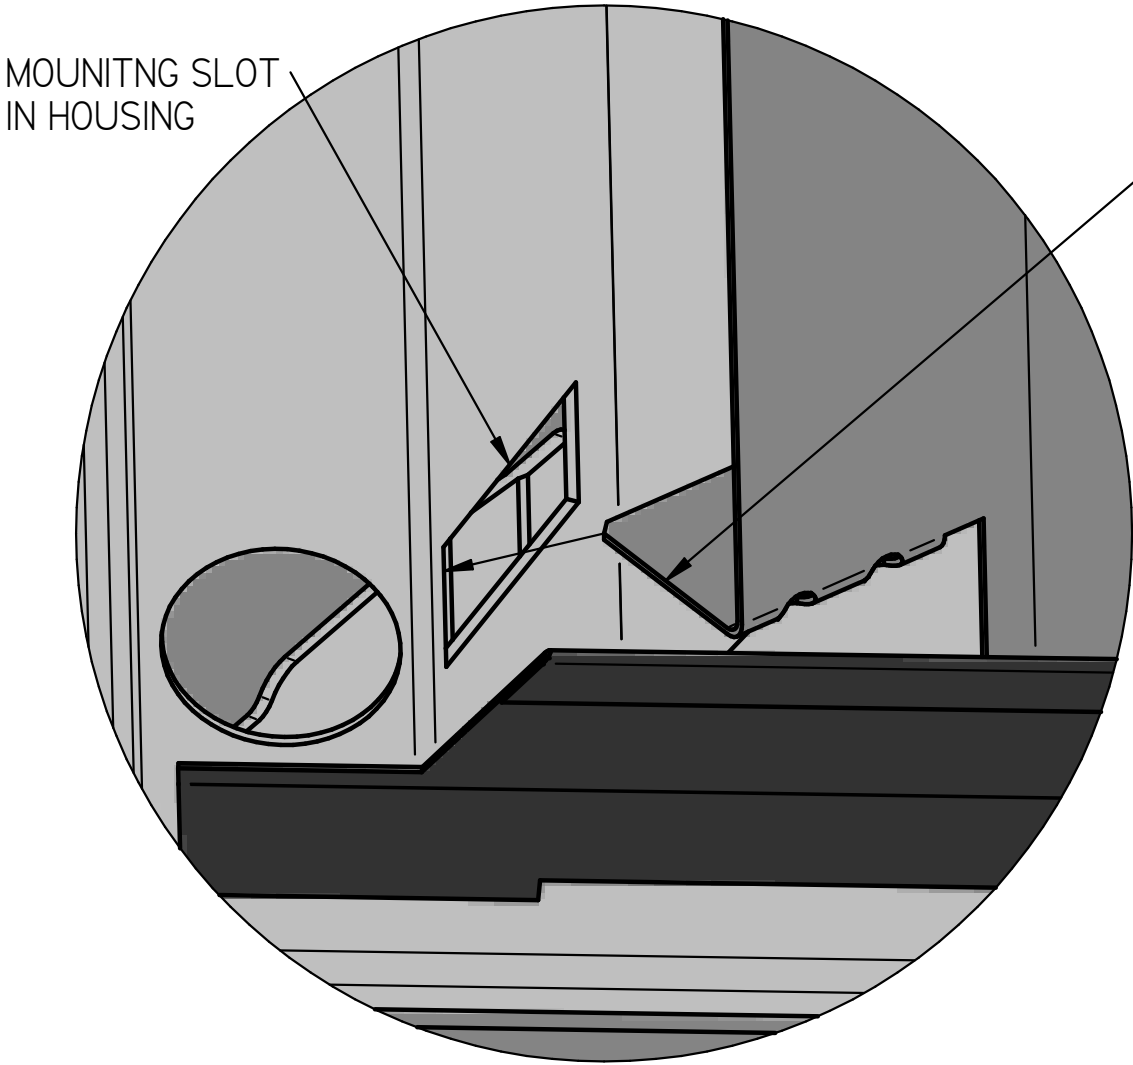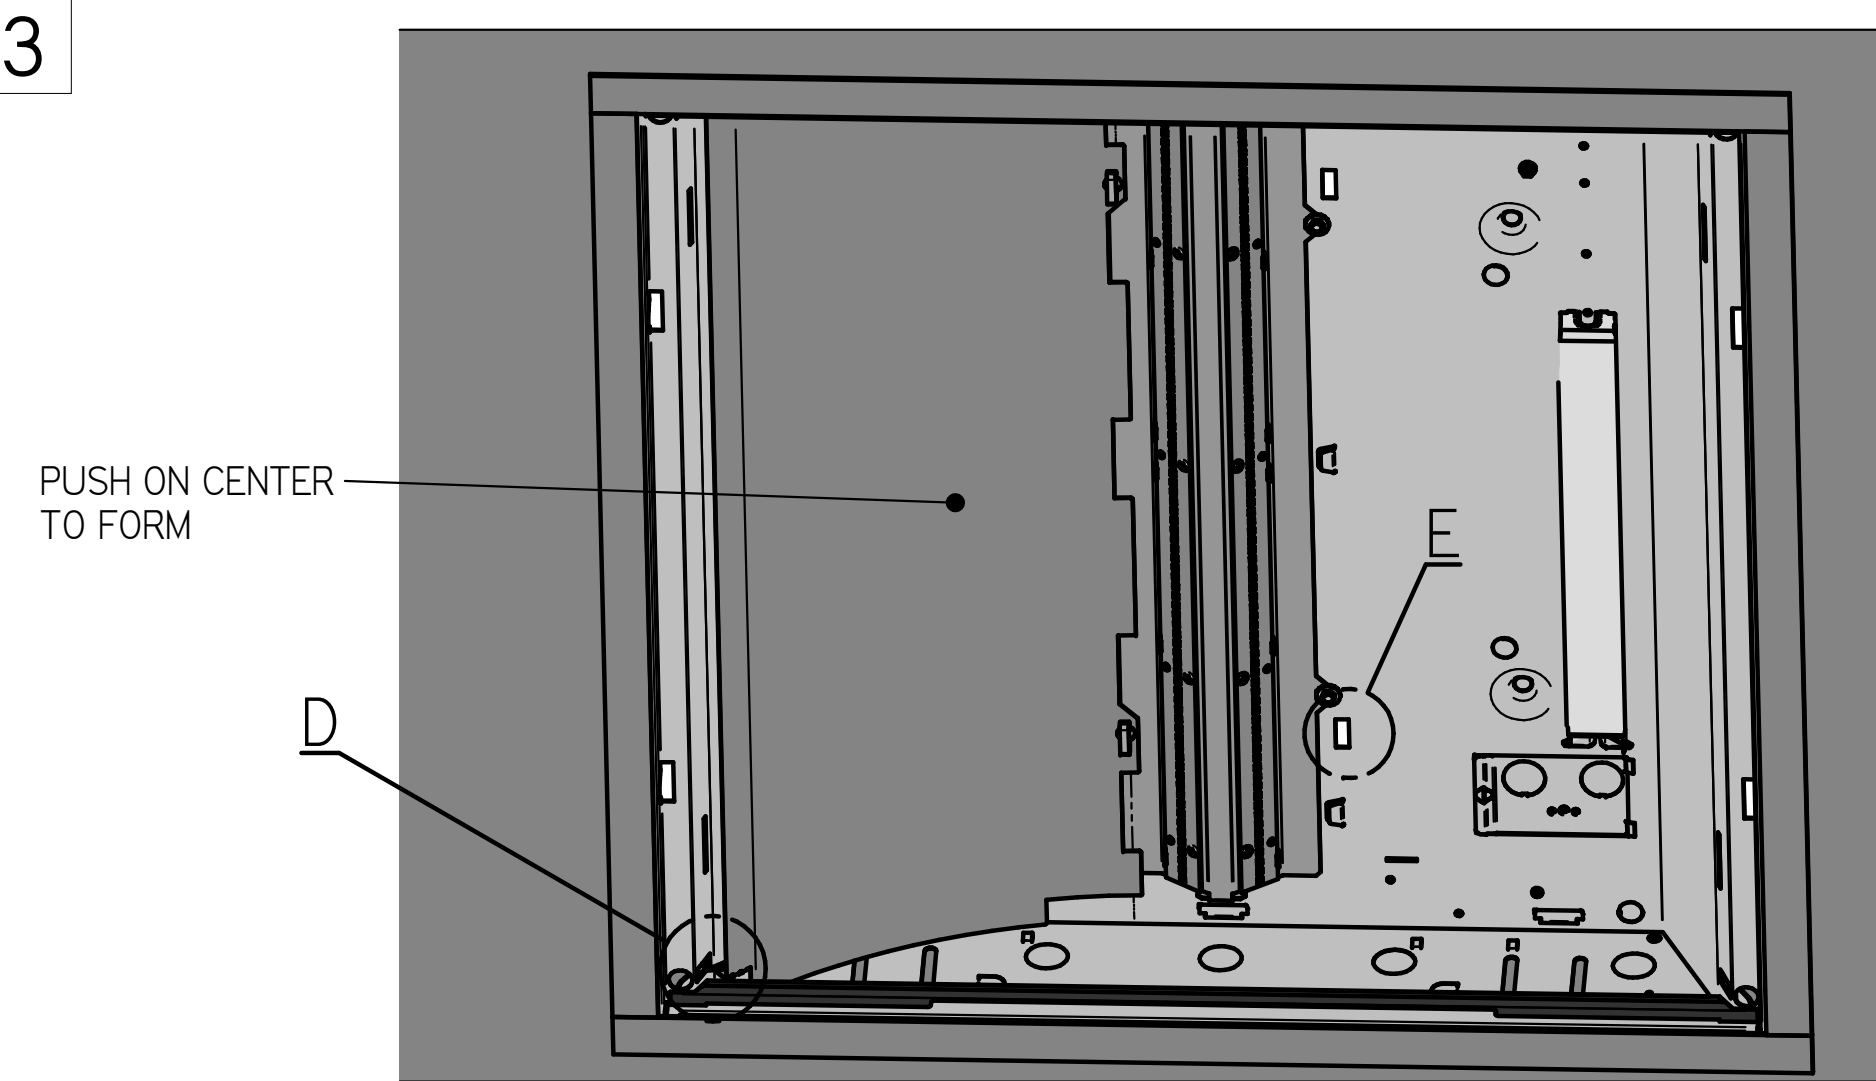

DETAIL D

DETAIL E


TO REINSTALL, INSERT FLAT REFLECTOR BACK INTO FIXTURE AND INSERT BOTH TABS ON EACH END INTO THE MOUNTING SLOTS IN THE HOUSING. WHILE HOLDING THE REFLECTOR IN PLACE, AND WITH THE SPRING CLIPS PARALLEL TO THE LED BOARDS, GENTLY APPLY PRESURE ON THE CENTER OF THE REFLECTOR UNTIL THE CLIPS SIT IN THERE RESPECTED SLOTS. ONCE EACH CLIP IS IN PLACE ROTATE 90 DEGREES IN EITHER DIRECTION TO SECURE THE REFLECTOR. REPLACE DOOR.

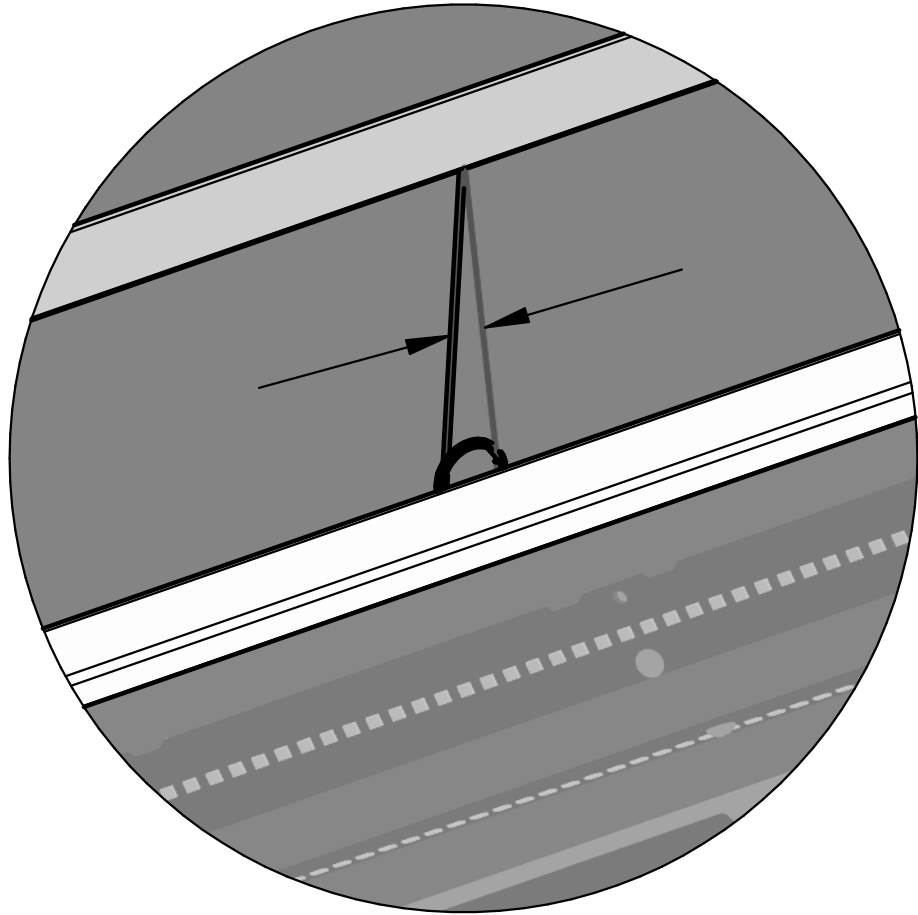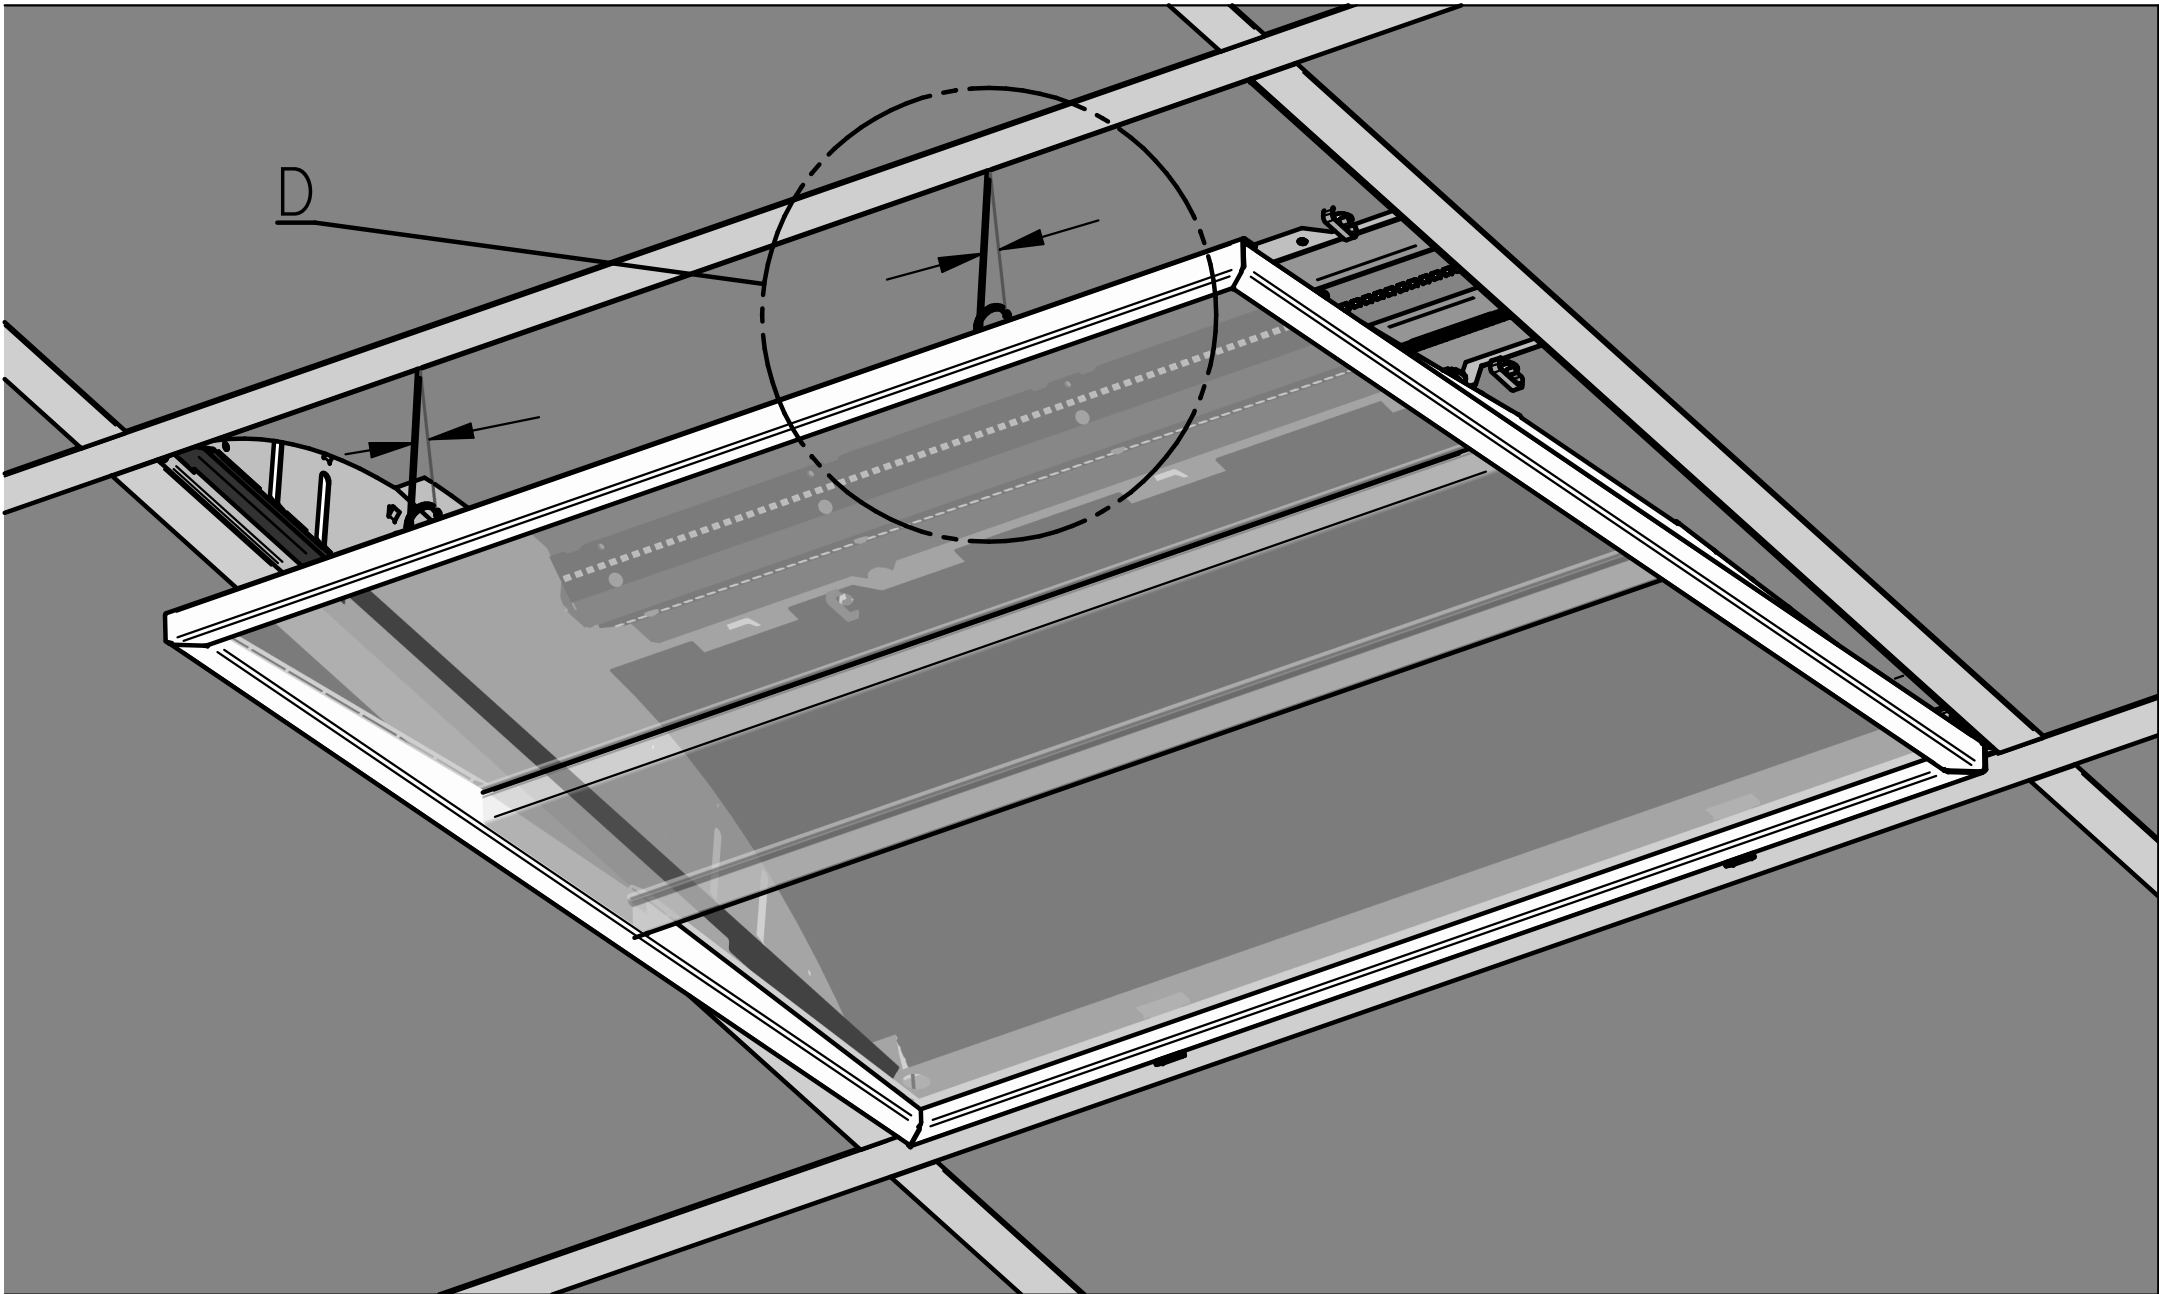

DETAIL D

TORSION SPRING
SLOT

DOOR

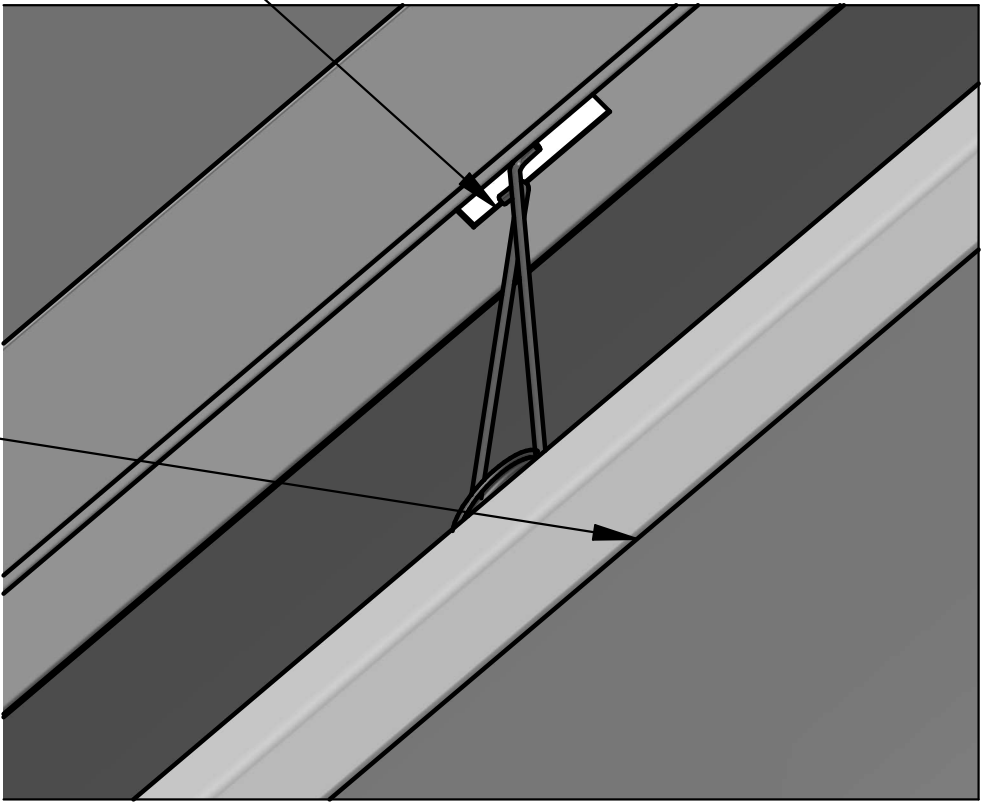

TO CLOSE, COMPRESS THE SPRINGS UNTIL THEY CLEAR TORSION SPRING SLOTS IN THE HOUSING
ALLOW SPRINGS TO DECOMPRESS IN THE SLOTS. GENTLY PUSH THE DOOR TO THE CLOSED POSITION,
THE SPRINGS WILL BEGIN TO ENGAGE AND SNAP DOOR SHUT. ONCE FIXTURE IS FULLY INSTALLED, REMOVE STRAPPING FROM
DOOR BY CUTTING ON SIDE AND PULLING THE BUCKLED END OUT OF THE FIXTURE.