




**WARNING:** Make certain all electrical supply is OFF before starting fixture installation.

**MAINTENANCE:** A regularly scheduled maintenance program must be established to insure paint coating is intact, corrosion has not occurred and all screws are tight.

**NOTE:** If optional Lexan Shield or Color Filter Assembly are ordered, they **must** be installed under the Barn Door assembly.

**KEEP THIS SHEET FOR FUTURE REFERENCE.**

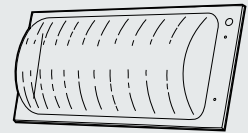

**Tools Required:**

3/32" Allen Wrench

1/8" Allen Wrench


The Barn Door Assembly mounts directly to the Architectural Floodlight (AFL10) lens frame.




1. Remove set screws on lens frame, (4) places.



2. Install Barn Door Assembly with (4) 10-32 x 1/2" Button Head screws.

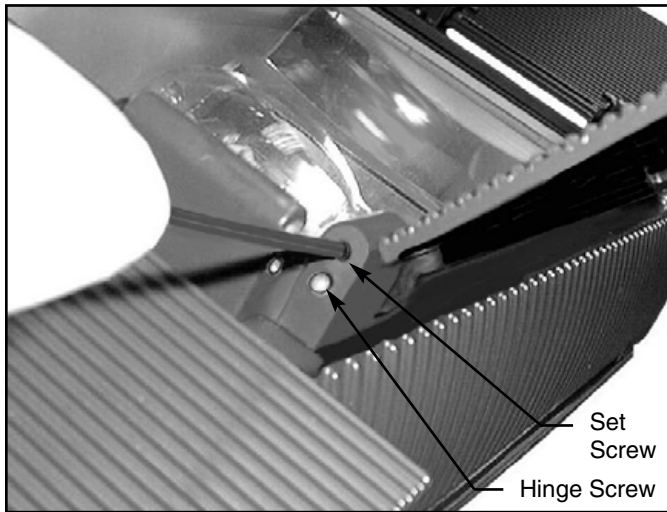

3. Adjust flaps to desired angle and tighten set screws, 8 places. **NOTE:** If desired, any unused door may be completely removed by loosening hinge screws.

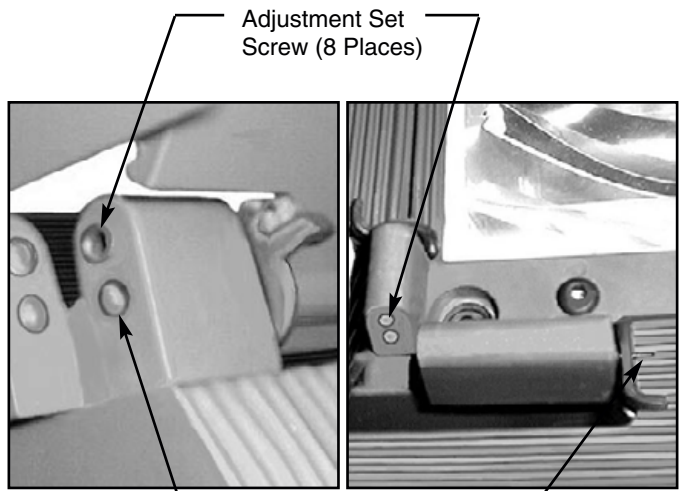

For warranty see: [currentlighting.com/kimlighting](http://currentlighting.com/kimlighting)