


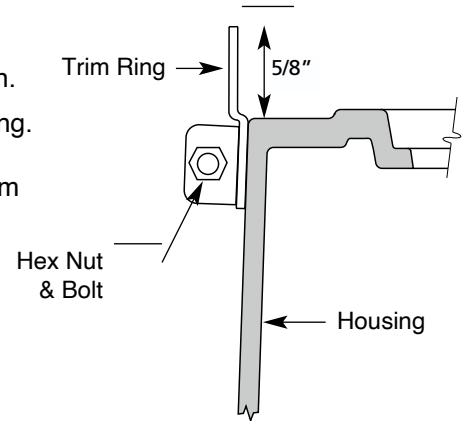
WARNING: Fixtures must be grounded in accordance with local codes or the National Electrical Code. Failure to do so may result in serious personal injury. KEEP THIS SHEET FOR FUTURE REFERENCE.

Tools Required: 5/8" Wrench Ruler

Installation Instructions:

 Make certain the electrical supply is **OFF** before starting fixture installation.

1. Locate trim ring over top of housing with a 5/8" clearance above the housing. Top of trim ring should be 5/8" above housing.
2. Tighten nut and bolt securely. Place a piece of tape across opening on trim ring to keep concrete from spilling on housing.




How may we serve you better? Please let us know. Visit our website at: currentlighting.com/kimlighting Your concerns are important to us.




WARNING: Fixtures must be grounded in accordance with local codes or the National Electrical Code. Failure to do so may result in serious personal injury. KEEP THIS SHEET FOR FUTURE REFERENCE.

Tools Required: 5/8" Wrench Ruler

Installation Instructions:

 Make certain the electrical supply is **OFF** before starting fixture installation.

1. Locate trim ring over top of housing with a 5/8" clearance above the housing. Top of trim ring should be 5/8" above housing.
2. Tighten nut and bolt securely. Place a piece of tape across opening on trim ring to keep concrete from spilling on housing.

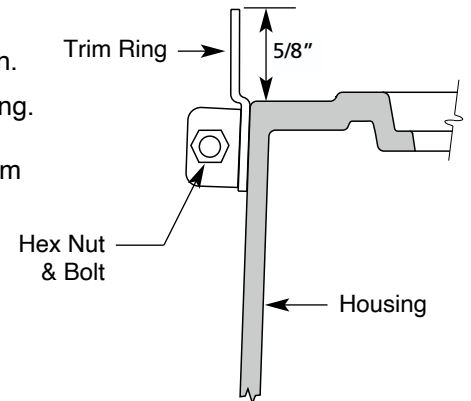

How may we serve you better? Please let us know. Visit our website at: currentlighting.com/kimlighting Your concerns are important to us.

For warranty see currentlighting.com/