


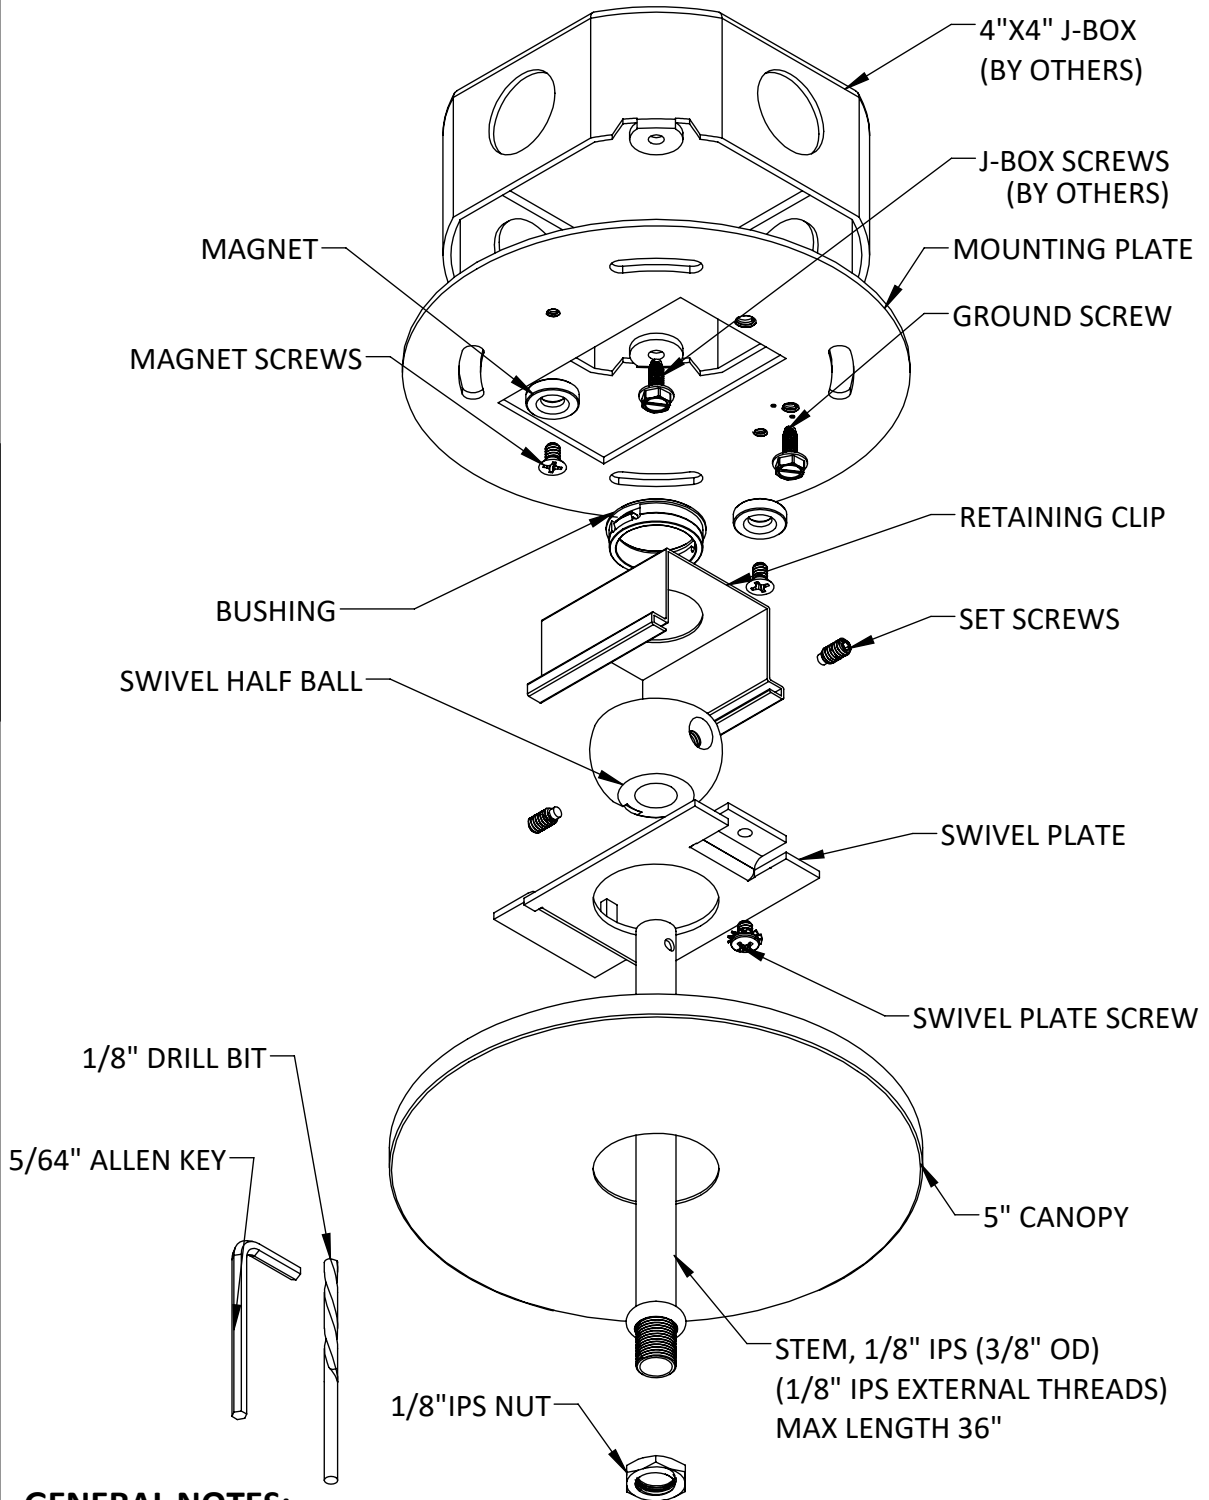


GENERAL NOTES:

READ SHEETS COMPLETELY BEFORE STARTING.

1. REFER TO FIXTURE INSTRUCTIONS FOR STEM LOCATIONS & PRODUCT SPECIFIC MOUNTING INSTRUCTIONS.
2. FIXTURES IN ROWS MUST BE SUPPORTED BY A MINIMUM OF ONE STEM AT THE JUNCTION OF EVERY TWO FIXTURES PLUS ONE AT EACH END OF ROW.
3. STEM ANGLE MUST NOT EXCEED 41° AFTER INSTALL. SEE STEP "J-BOX PREP" ON PAGE 2 TO ENSURE FIXTURE SWIVELS IN INTENDED DIRECTION.
4. THESE FIXTURE SUPPORTS ARE TO BE USED ONLY IN CONJUNCTION WITH CURRENT LIGHTING PRODUCTS FOR WHICH THEY WERE FURNISHED. DO NOT USE THEM FOR SUPPORT OF OTHER ITEMS OR IN ANY FASHION CONTRARY TO THIS INSTRUCTION SHEET.
5. THE NATIONAL ELECTRIC CODE REQUIRES ANY FIXTURE WEIGHING MORE THAN 50LBS TO BE INDEPENDENTLY SUPPORTED BY AN OUTLET BOX.


1 STEM PREP

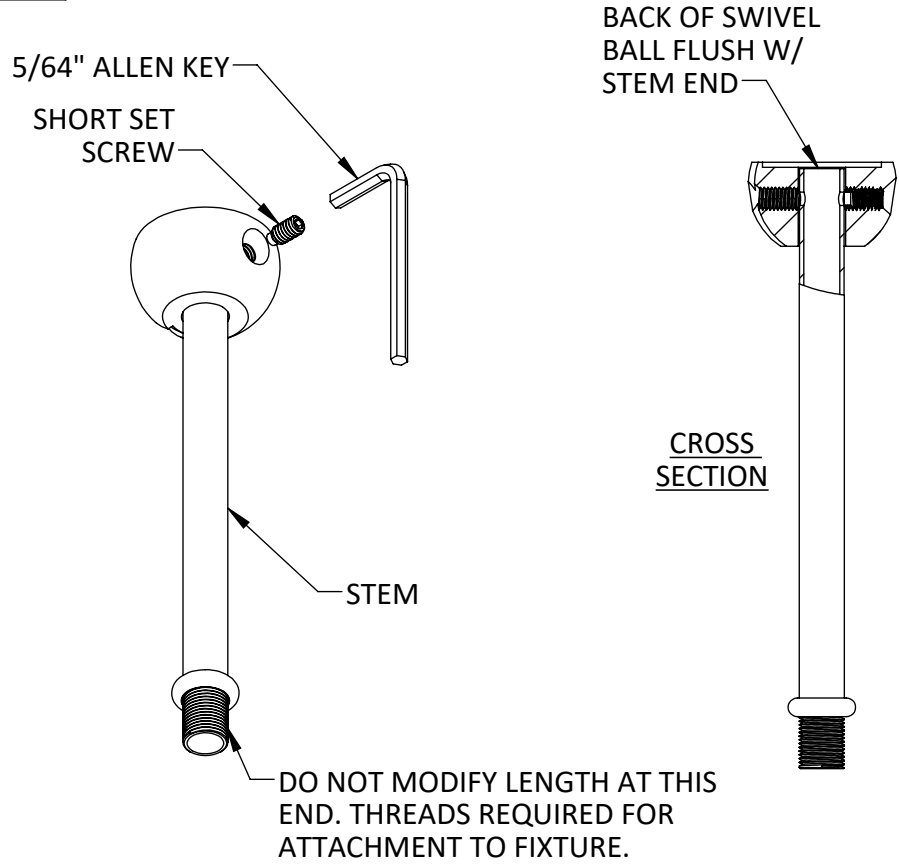

1. CUT STEM TO DESIRED LENTH, IF REQUIRED, & DEBURR INSIDE EDGE.
2. INSERT STEM INTO SWIVEL WITH EDGE OF CUT SIDE (IF APPLICABEL) OF STEM EVEN WITH BACK OF SWIVEL BALL.
3. SECURE SET SCREW TO STEM THROUGH SWIVEL BALL USING 5/64" ALLEN KEY.

NOTE: STEMS CANNOT BE COUPLED TOGETHER. ADJUSTMENTS TO STEM LENGTH MUST BE IMPLEMENTED TO END OF STEM INSTALLED TO SWIVEL BALL. THREADS ARE REQUIRED AT OPPOSITE END FOR ATTACHMENT TO FIXTURE.

2 DRILLING STEM

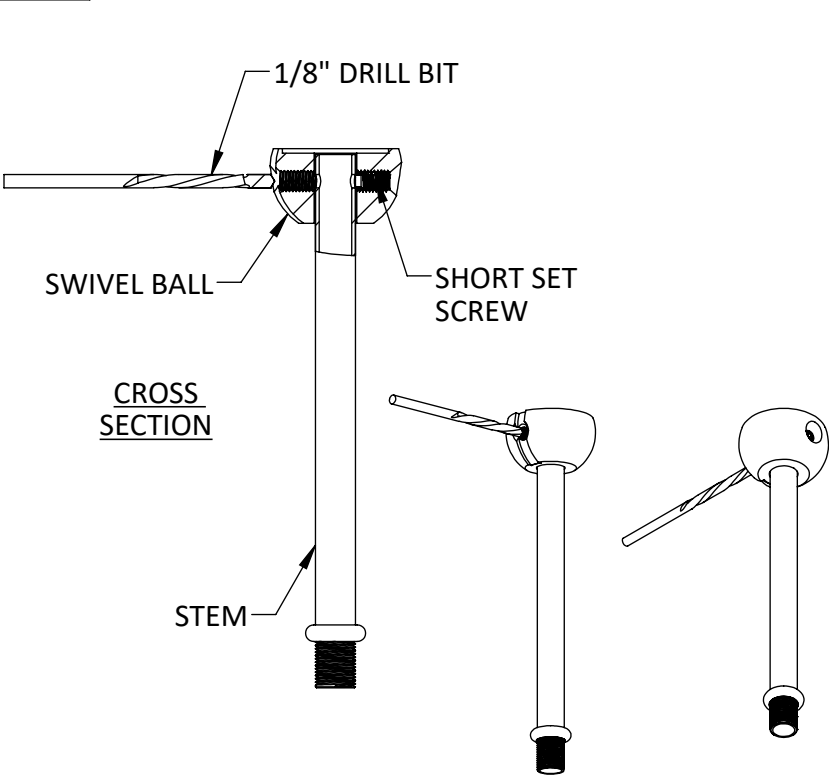

1. DRILL 1/8" HOLE IN STEM THROUGH OTHER HOLE IN SWIVEL BALL.
2. LOOSEN SET SCREW IN SWIVEL BALL & ROTATE 180° TO SECURE SET SCREW INTO DRILLED HOLE IN STEM. PIN ON INSIDE OF STEM VISIBLE WHEN SET CORRECTLY.
3. DRILL SECOND HOLE IN STEM THROUGH OTHER HOLE IN SWIVEL BALL.
4. REMOVE SET SCREW & DEBURR ANY SHARP EDGES ON INSIDE DIAMETER OF STEM FROM DRILLING HOLES.


TOOLS REQUIRED

- PHILLIPS HEAD SCREWDRIVER
- DRILL
- WIRE STRIPPERS

SUPPLIED BY INSTALLER




- 4" x 4" J-BOX
- J-BOX SCREWS, QTY 2

3 STEM SUBASSEMBLY

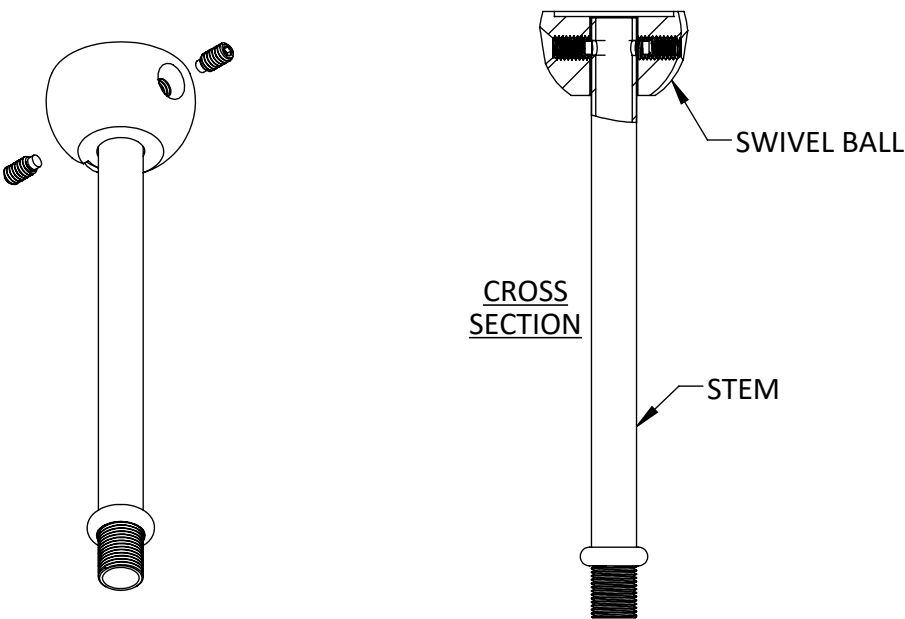


1. INSTALL SET SCREW INTO EACH TAPPED HOLE IN SWIVEL BALL THROUGH EACH DRILLED HOLE IN STEM. PIN ON INSIDE OF STEM VISIBLE WHEN SET CORRECTLY.

4 SWIVEL ASSEMBLY

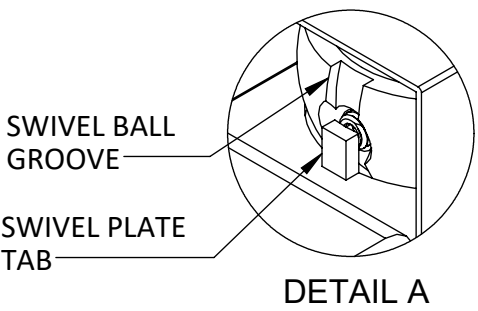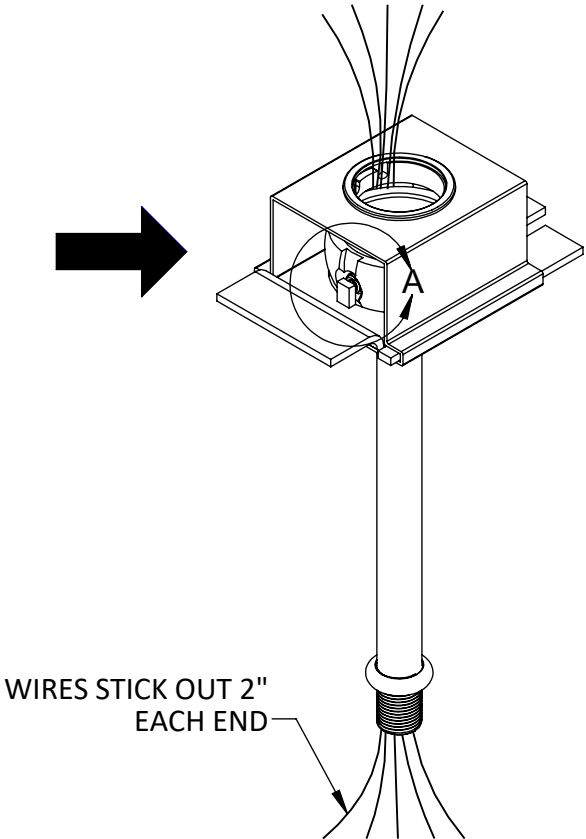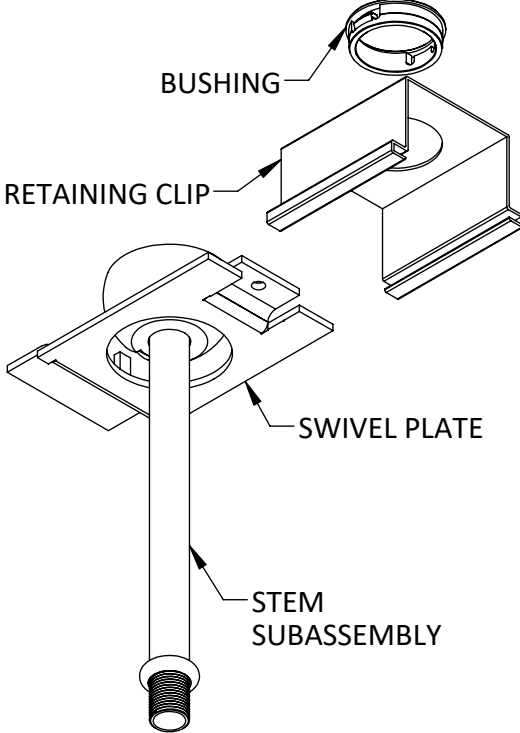


1. SLIDE STEM SUBASSEMBLY THROUGH OPENING IN SWIVEL PLATE, ENSURING TO ALIGN GROOVE IN SWIVEL BALL WITH SWIVEL PLATE TAB.
2. SNAP BUSHING INTO RETAINING CLIP THEN SLIDE RETAINING CLIP ONTO SWIVEL PLATE.
3. ROUTE WIRES UP THROUGH STEM. LEAVE 2" STICKING OUT EACH END.

5 J-BOX PREP

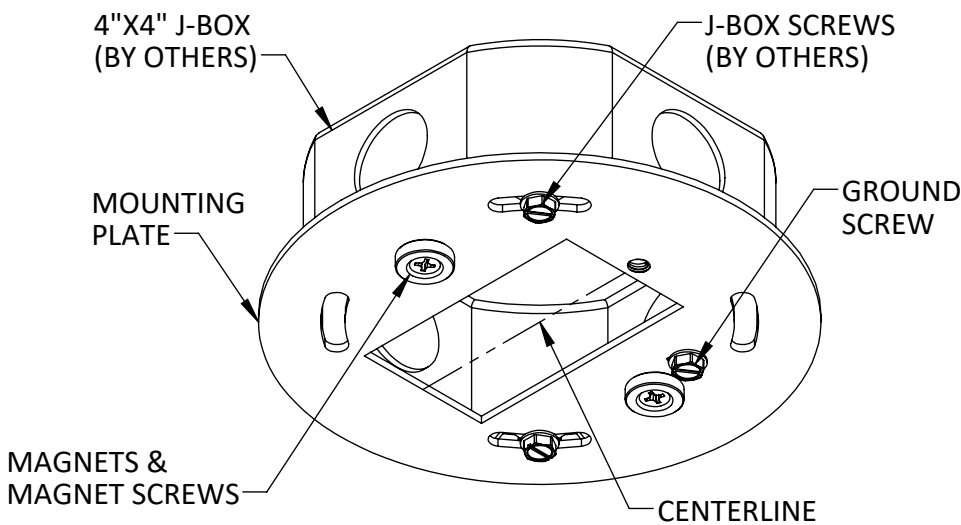


1. ORIENT J-BOX (BY OTHERS) AS REQUIRED BEFORE INSTALLING. **FIXTURE WILL SWIVEL PARALLEL TO CENTERLINE.**
2. SECURE MAGNETS TO MOUNTING PLATE USING MAGNET SCREWS.
3. ATTACH GROUND WIRE TO MOUNTING PLATE WITH GROUND SCREW.
4. FASTEN MOUNTING PLATE TO J-BOX; HARDWARE BY OTHERS.

6 J-BOX WIRING

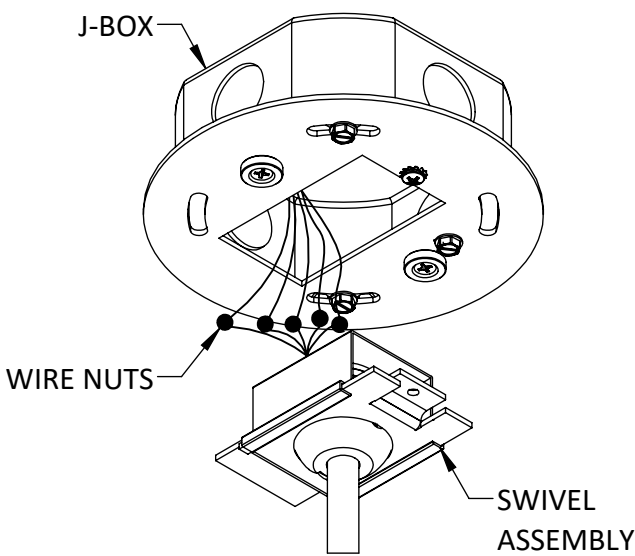


1. BRING SWIVEL ASSEMBLY UP TO J-BOX TO MAKE WIRE CONNECTIONS USING WIRE NUTS & THEN TUCK INTO J-BOX.

7 HANGING SWIVEL ASSEMBLY

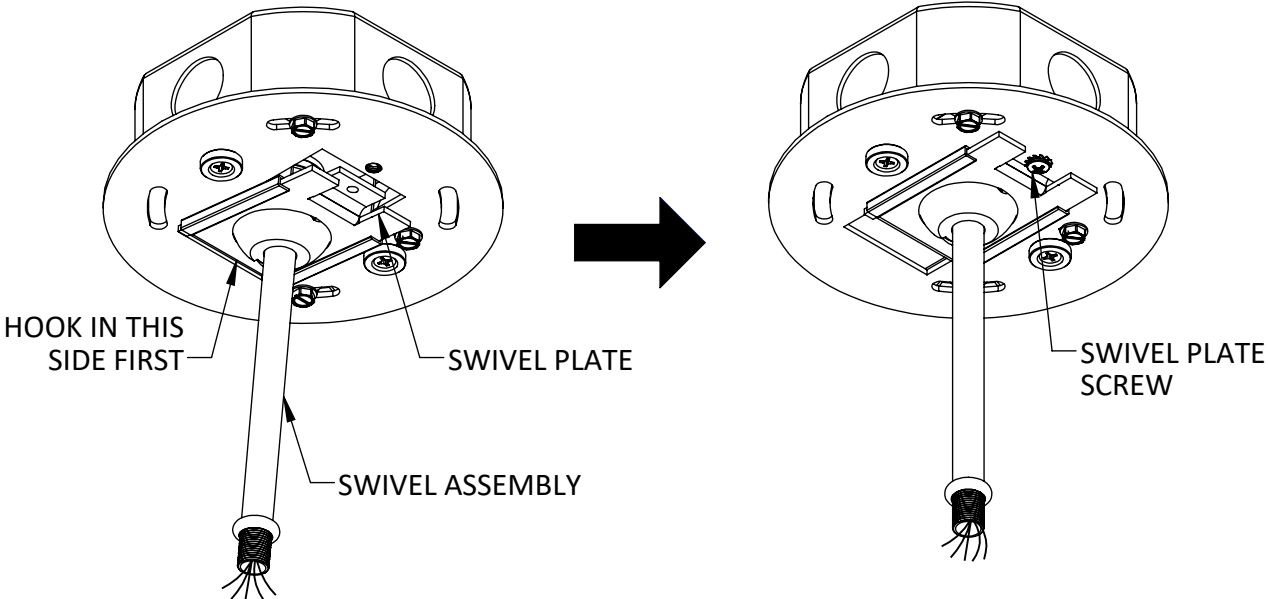


1. SLIDE FLAT END OF SWIVEL PLATE INTO MOUNTING PLATE AT AN ANGLE THEN ROTATE STRAIGHT & SLIDE OVER UNTIL SWIVEL PLATE IS FULLY ENGAGED.
2. ENSURE NO WIRES ARE PINCHED OR DAMAGED & SECURE THE ASSEMBLY USING SWIVEL PLATE SCREW.

8 CANOPY

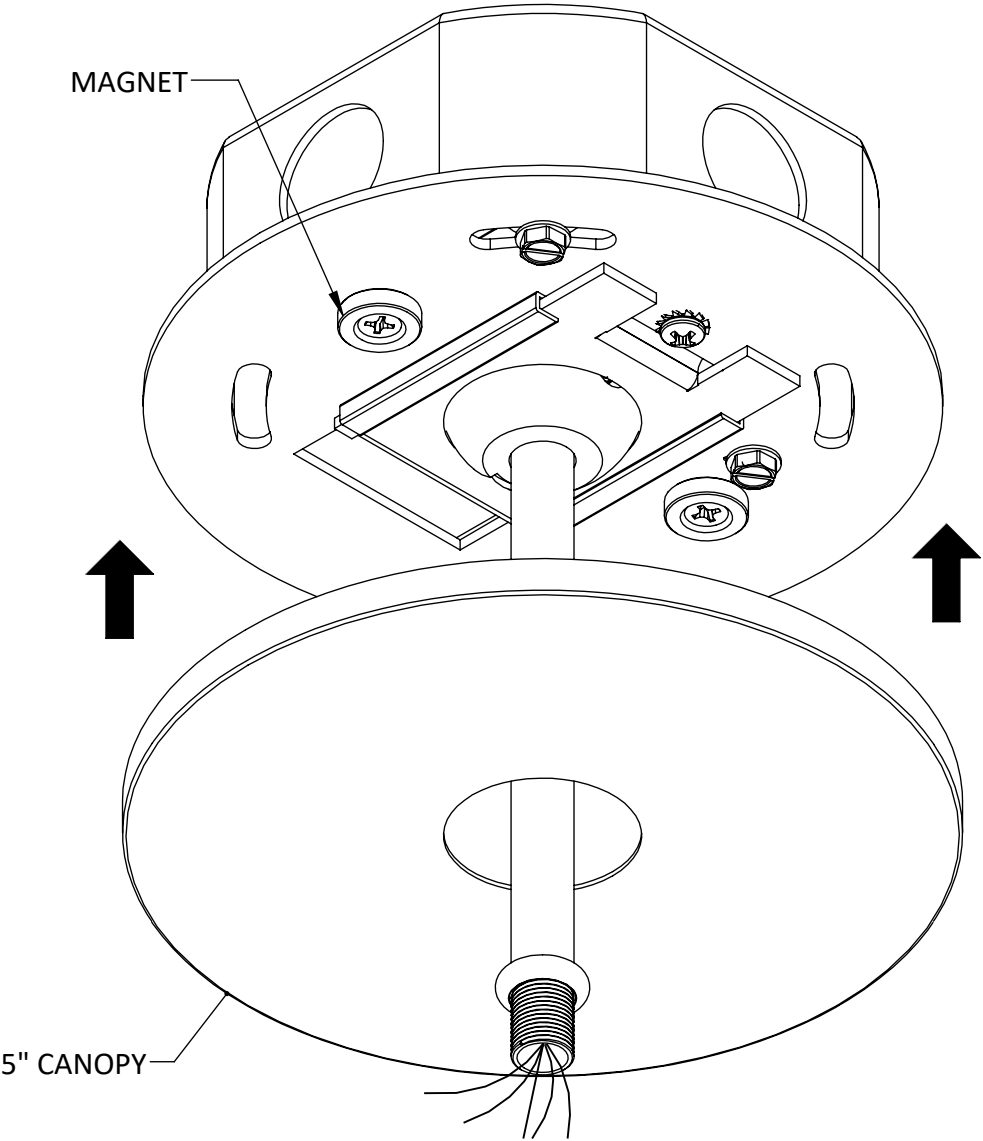


- 1. SLIDE 5" CANOPY OVER STEM & BRING UP UNTIL IT ENGAGES WITH MAGNETS.
- 2. SEE PRODUCT SPECIFIC INSTRUCTIONS FOR CONNECTION TO FIXTURE.


FIXTURE LAYOUT
REFERENCE ONLY

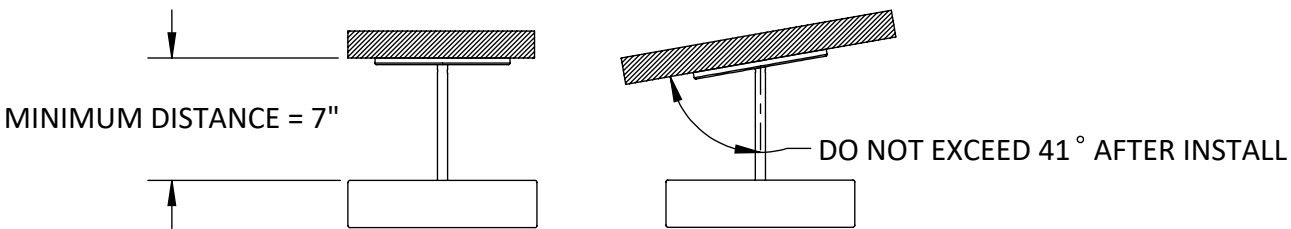

END VIEW

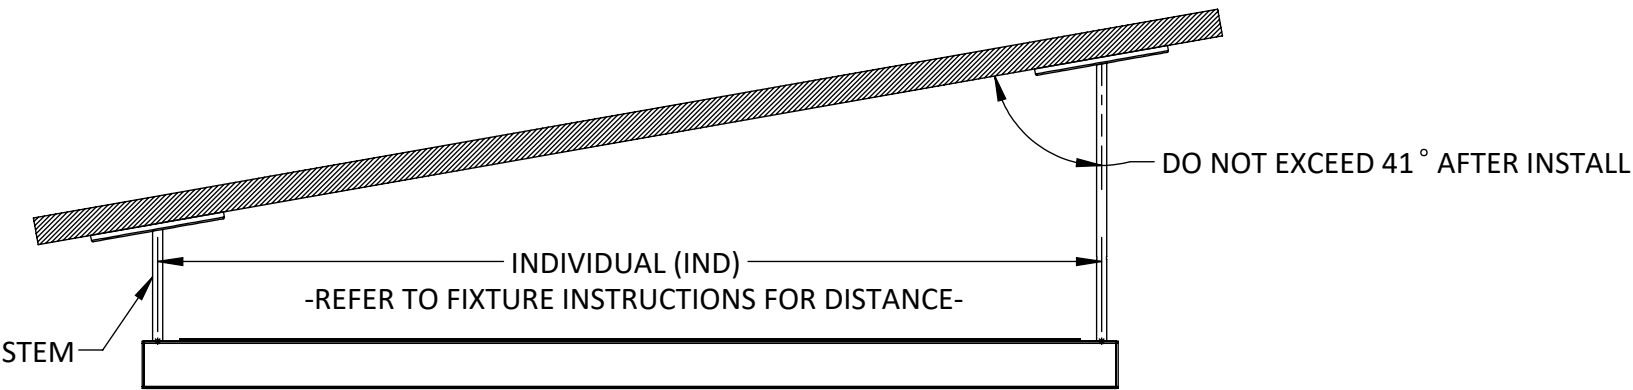

SIDE VIEW
INDIVIDUALLY MOUNTED FIXTURE

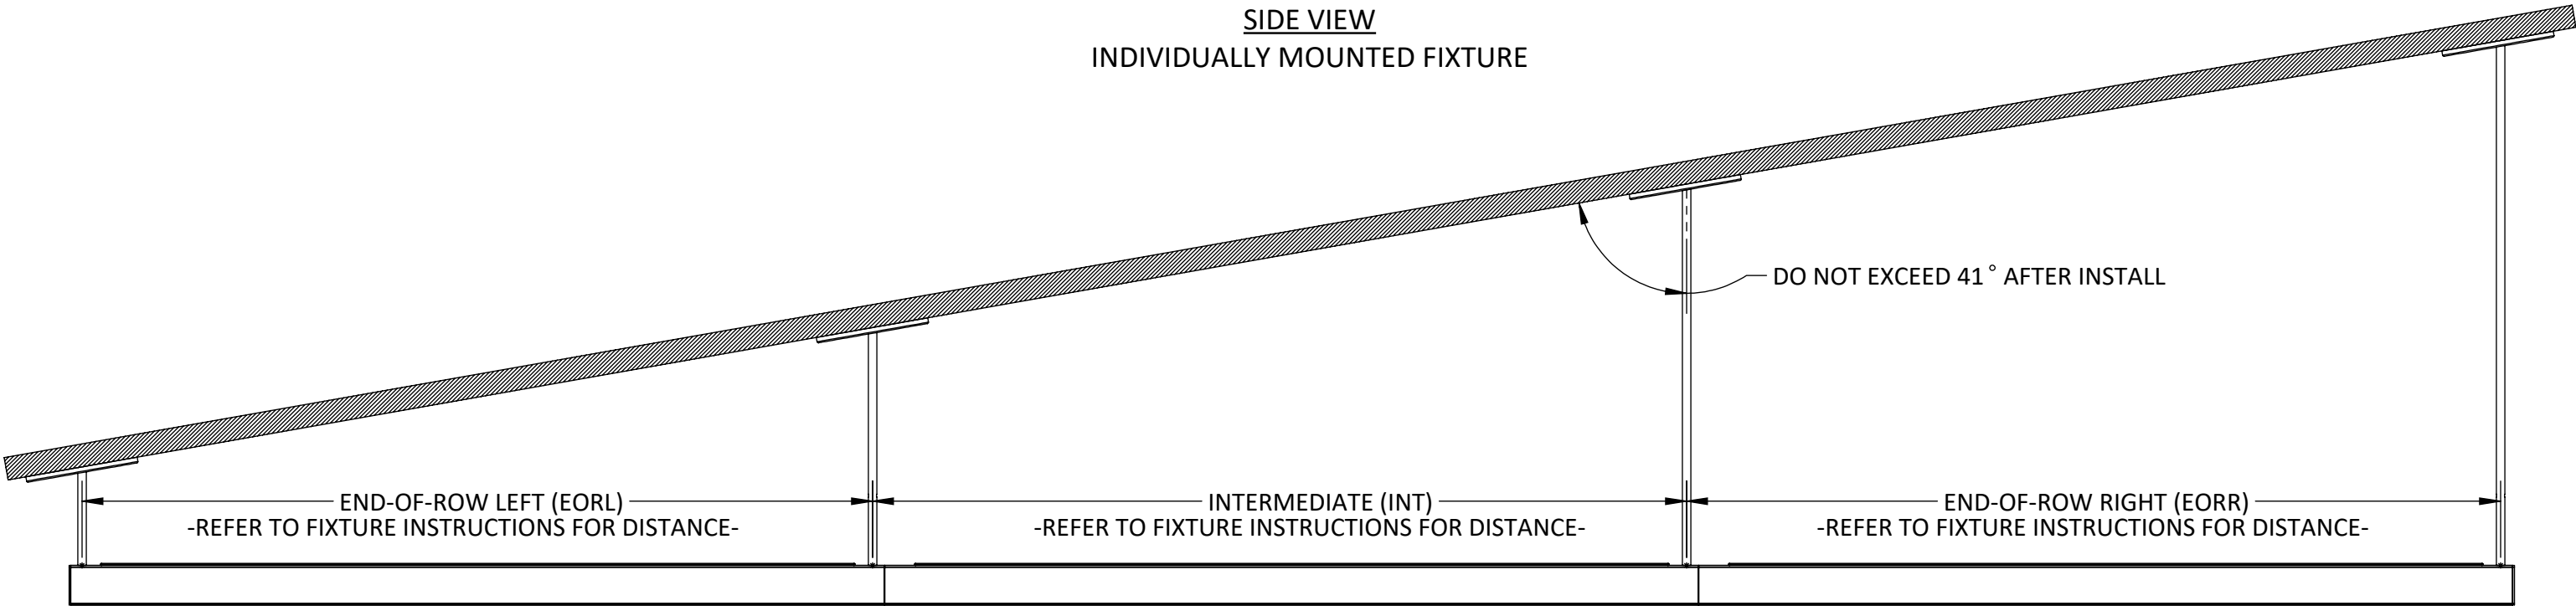

SIDE VIEW
ROW MOUNTED FIXTURES