



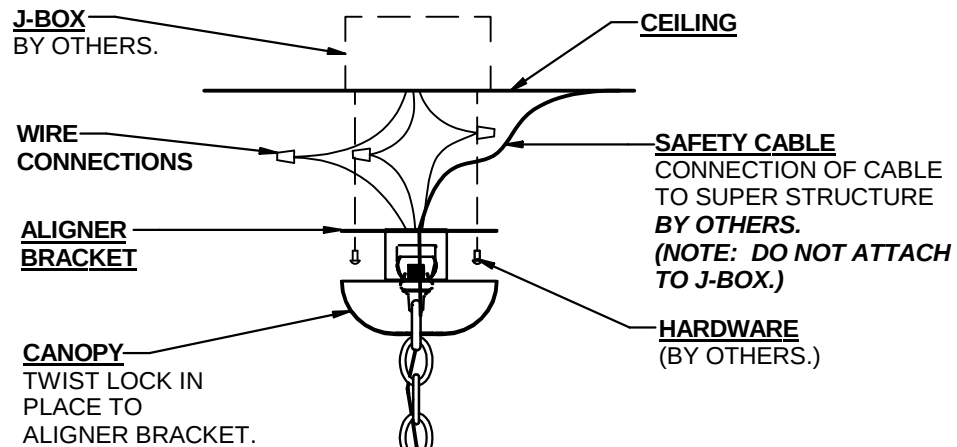

INSTALLATION INSTRUCTIONS:

1. TURN OFF POWER.
2. TWIST OFF CANOPY FROM ALIGNER BRACKET AND ALLOW TO SLIDE DOWN CHAIN ASSEMBLY.
3. MAKE WIRE CONNECTIONS TO POWER SOURCE: BLACK TO LOAD, WHITE TO NEUTRAL AND GREEN TO GROUND.
4. SECURE ALIGNER BRACKET TO J-BOX. **(MEANS OF MOUNTING BY OTHERS.)**
5. SECURE SAFETY CABLE TO SUPER STRUCTURE. **(MEANS OF MOUNTING BY OTHERS.)**
6. ALIGN CANOPY OVER ALIGNER BRACKET AND TWIST LOCK IN PLACE.
7. RESTORE POWER.
8. INSTALLATION IS COMPLETE.

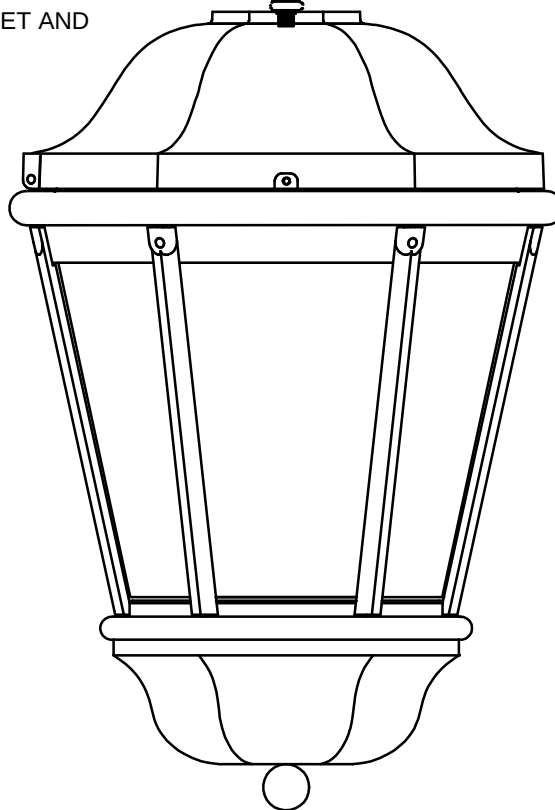

PART NO.

93039809