


INSTALLATION INSTRUCTIONS, FOR TRAVERSE WALL MOUNTED LED LUMINAIRE

CAUTION HIGH VOLTAGE
LIGHT FIXTURES AND WIRING SHOULD BE
INSTALLED BY A LICENSED ELECTRICIAN.

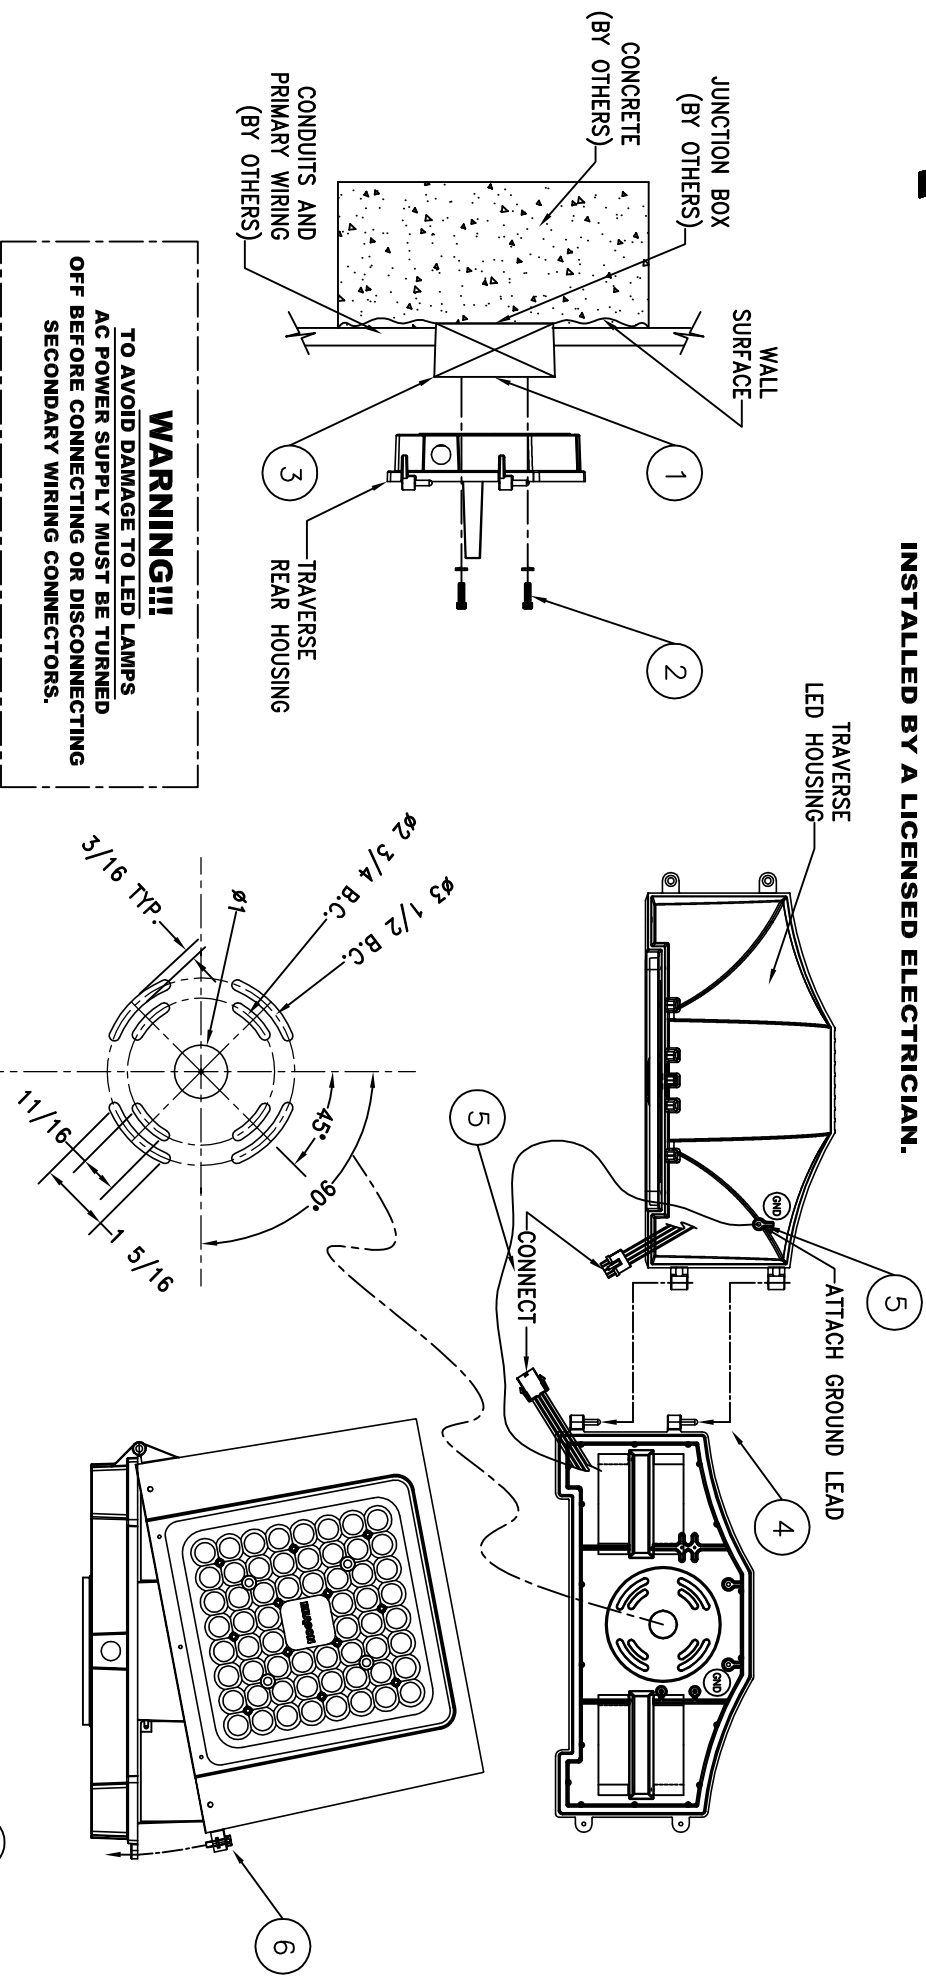

INSTRUCTIONS:

ENSURE THAT POWER SUPPLY IS TURNED OFF
1. CONNECT THE POWER LEADS SUPPLIED ON TRAVERSE TO THE POWER LEADS IN THE JUNCTION
BOX.

2. ATTACH THE REAR HOUSING TO THE JUNCTION BOX USING SCREWS. ASSURE HOUSING IS LEVEL
FOR AESTHETICS.

3. SEALANT MUST BE APPLIED (BY OTHERS) BETWEEN REAR HOUSING AND MOUNTING SURFACE
TO INSURE A DRY JUNCTION BOX.

4. SLIDE THE LED TRAVERSE HOUSING ONTO THE PINS OF THE REAR HOUSING.

5. CONNECT LED HARNESS CONNECTOR AND GROUND LEAD TO THE LED HOUSING.

6. CLOSE HOUSING USING THE (2) THUMB SCREWS PROVIDED.

7. TURN THE POWER ON AND TEST.

DWG. No. INST. INSTRUCTIONS/II-TRAVERSE-05

DRAWN BY: SM

DATE: 11/19/14

APPROVED BY: SM