

LZPT SM

LED ZERO PLENUM® TROFFER

SURFACE MOUNT KIT INSTALLATION INSTRUCTIONS




STEP 1

Attach 1 end-cap from surface mount kit to surface mount housing.

STEP 2

Attach surface mount housing to ceiling using appropriate fasteners. Make sure feed cutout in housing is aligned with j-box in ceiling.

Note: LZPT Surface Mount is not suitable for continuous row mounting.

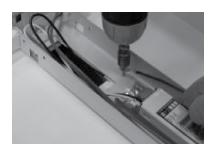

STEP 3

Remove access plate from luminaire and expand luminaire housing.

STEP 4


Remove luminaire shielding - lens and driver cover.

STFP 5

Slide luminaire into surface mount housing. Make sure access hole in luminaire aligns with feed cutout and j-box.

STEP 6

Drive included Tek-Screw with ground wire into driver channel adjacent to wire entry.



STEP 7

Attach second end-cap to surface mount housing.

STEP 8

Connect luminaire ground and feed power per NEC and any state or local code.

STEP 9

Replace driver cover and shielding.