


INSTALLATION INSTRUCTIONS



CATALOG NUMBER

WBFM3/WBFM4

SOLO ARM POST TOP FLUSH MOUNT

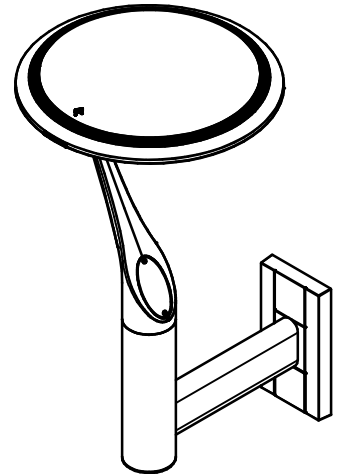

UR20-WBFM3/WBFM4

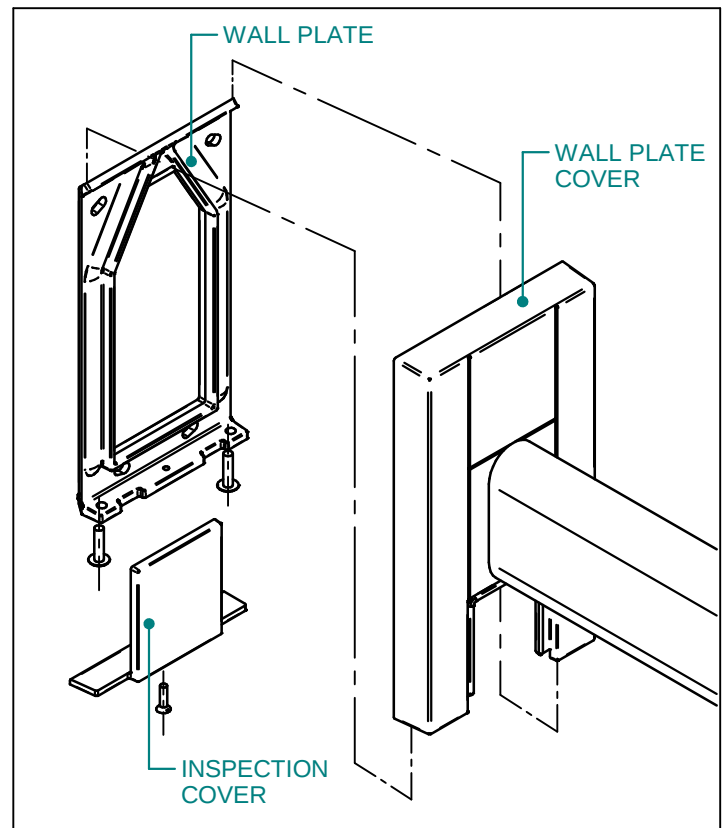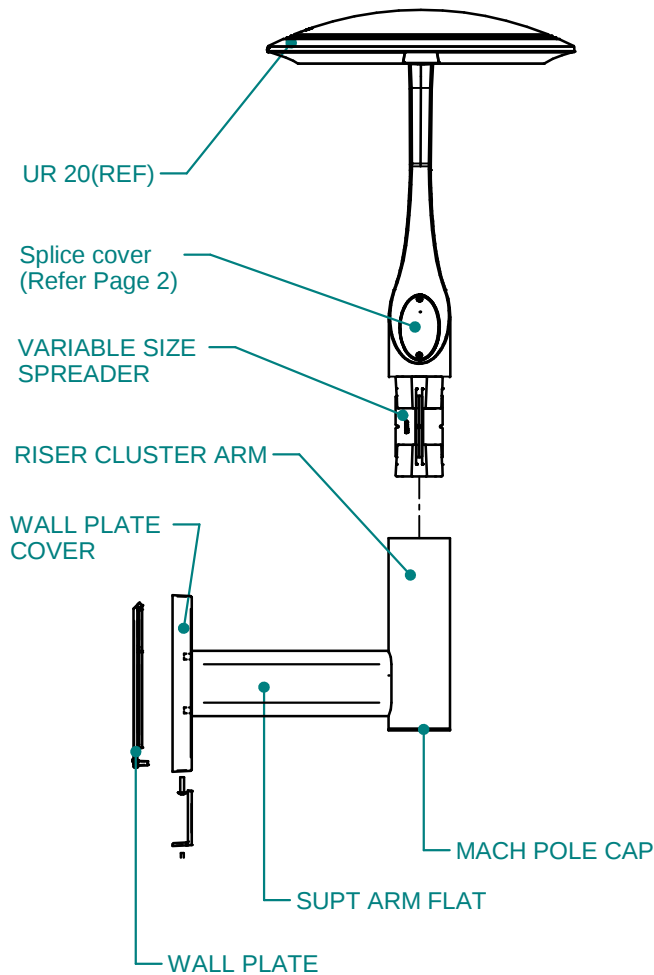

WBFM3/WBFM4

- 1) Apply a continuous bead of silicone sealant in the wall plate groove to create a proper seal between the wall plate and the wall.
- 2) Mount the wall plate securely over the junction box on the wall (provided by others).
- 3) Insert the riser cluster arm assembly into the top of the wall plate and secure it with the two bottom screws.
- 4) Expand the spreader to firmly secure the fixture to the riser.
- 5) Install the wall plate cover and fasten it with screws.
- 6) Install the splice access cover and secure it with the screw.
- 7) Installation is complete.

INSTALLATION INSTRUCTIONS

CATALOG NUMBER

WBFM3/WBFM4



Solo Arm

1. Remove phillips screws and splice cover.



Post Top/Solo Arm

2. Feed incoming wires up through expansion device and into splice compartment..



Post Top/Solo Arm

3. Guide expansion device into pole top taking care not to pinch wires. Make sure fixture base is flush with the pole top.



Solo Arm


4. Use 9/16 socket with extension, expand the spreader to secure the fixture to the pole, torque to 20 lbs.





Solo Arm

5. Connect incoming wires to fixturewires i.e. black-to-voltage, white-to-neutral, and green-to-ground. Tuck wires inside splice compartment and replace splice cover.

POST TOP FLUSH MOUNT

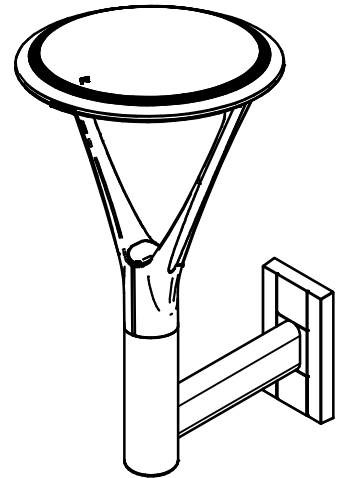

UR20-WBFM3/WBFM4

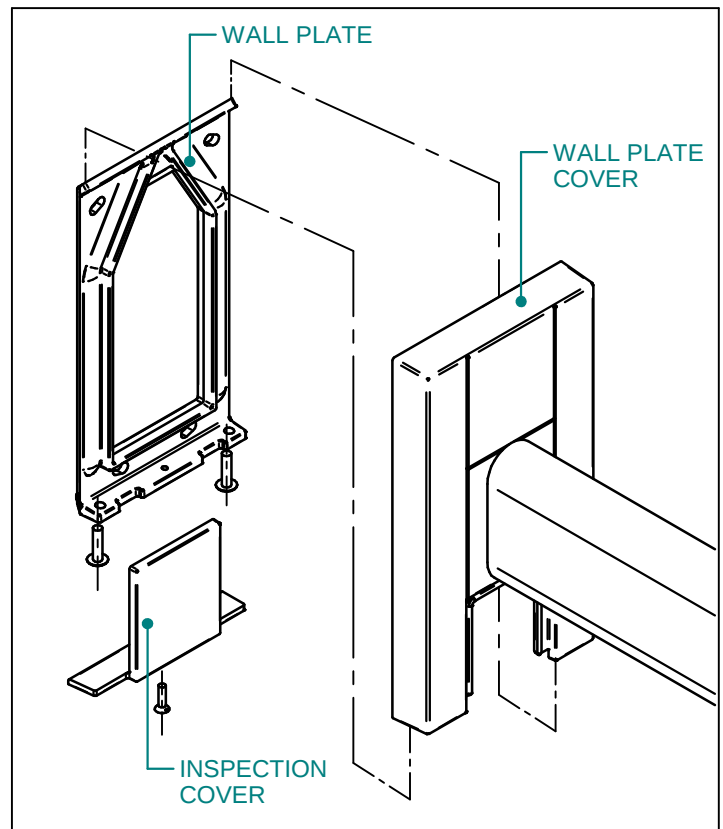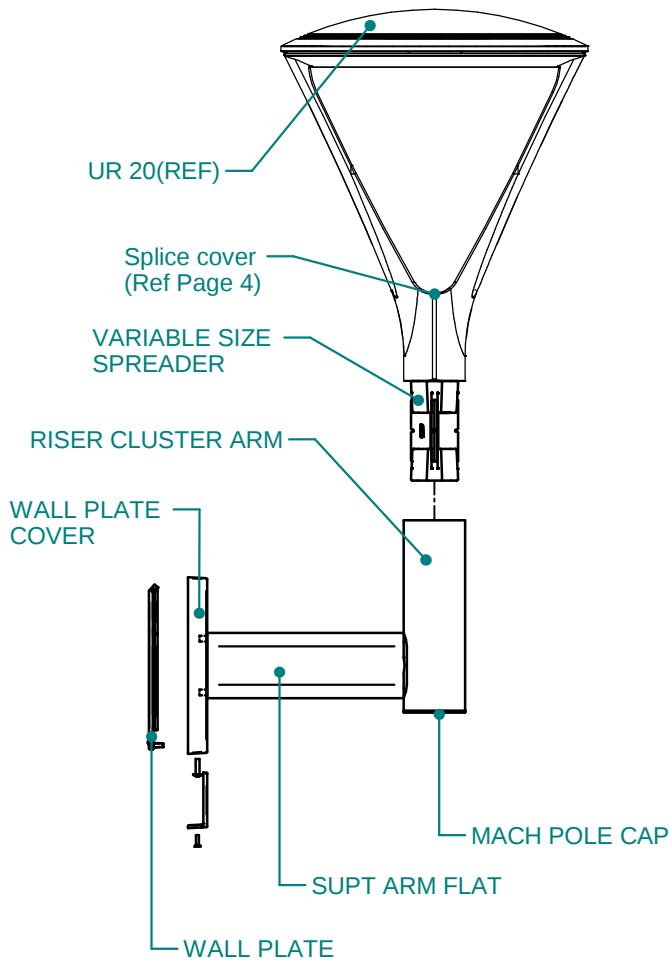

WBFM3/WBFM4

- 1) Apply a continuous bead of silicone sealant in the wall plate groove to create a proper seal between the wall plate and the wall.
- 2) Mount the wall plate securely over the junction box on the wall (provided by others).
- 3) Insert the riser cluster arm assembly into the top of the wall plate and secure it with the two bottom screws.
- 4) Expand the spreader to firmly secure the fixture to the riser.
- 5) Install the wall plate cover and fasten it with screws.
- 6) Install the splice access cover and secure it with the screw.
- 7) Installation is complete.

INSTALLATION INSTRUCTIONS

CATALOG NUMBER
WBFM3/WBFM4



1. Remove phillips screws and splice cover.



2. Feed incoming wires up through expansion device and into splice compartment..



3. Guide expansion device into pole top taking care not to pinch wires. Make sure fixture base is flush with the pole top.



4. Use 9/16 socket with extension, expand the spreader to secure the fixture to the pole, torque to 20 lbs.



5. Connect incoming wires to fixturewires i.e. black-to-voltage, white-to-neutral, and green-to-ground. Tuck wires inside splice compartment and replace splice cover.