


INSTALLATION INSTRUCTIONS

INSTALLATION INSTRUCTIONS

- 1) TURN OFF POWER.
- 2) MAKE WIRE CONNECTION FROM INCOMING SUPPLY TO ARM AS SHOWN. (NOTE-ASSEMBLY MUST BE GROUNDED TO INCOMING EQUIPMENT GROUND SUPPLY.)
- 3) SECURE ARM ASS'Y TO POLE WITH (2) 3/8-16 1/12 S/S FLAT HEAD BOLTS.
- 4) TO INSTALL LAMP, LOOSEN THE THREE CAPTIVE SCREWS FROM LENS FRAME, OPEN LENS ASSEMBLY AND INSTALL REQUIRED LAMP. CLOSE LENS ASSEMBLY AND SECURE.

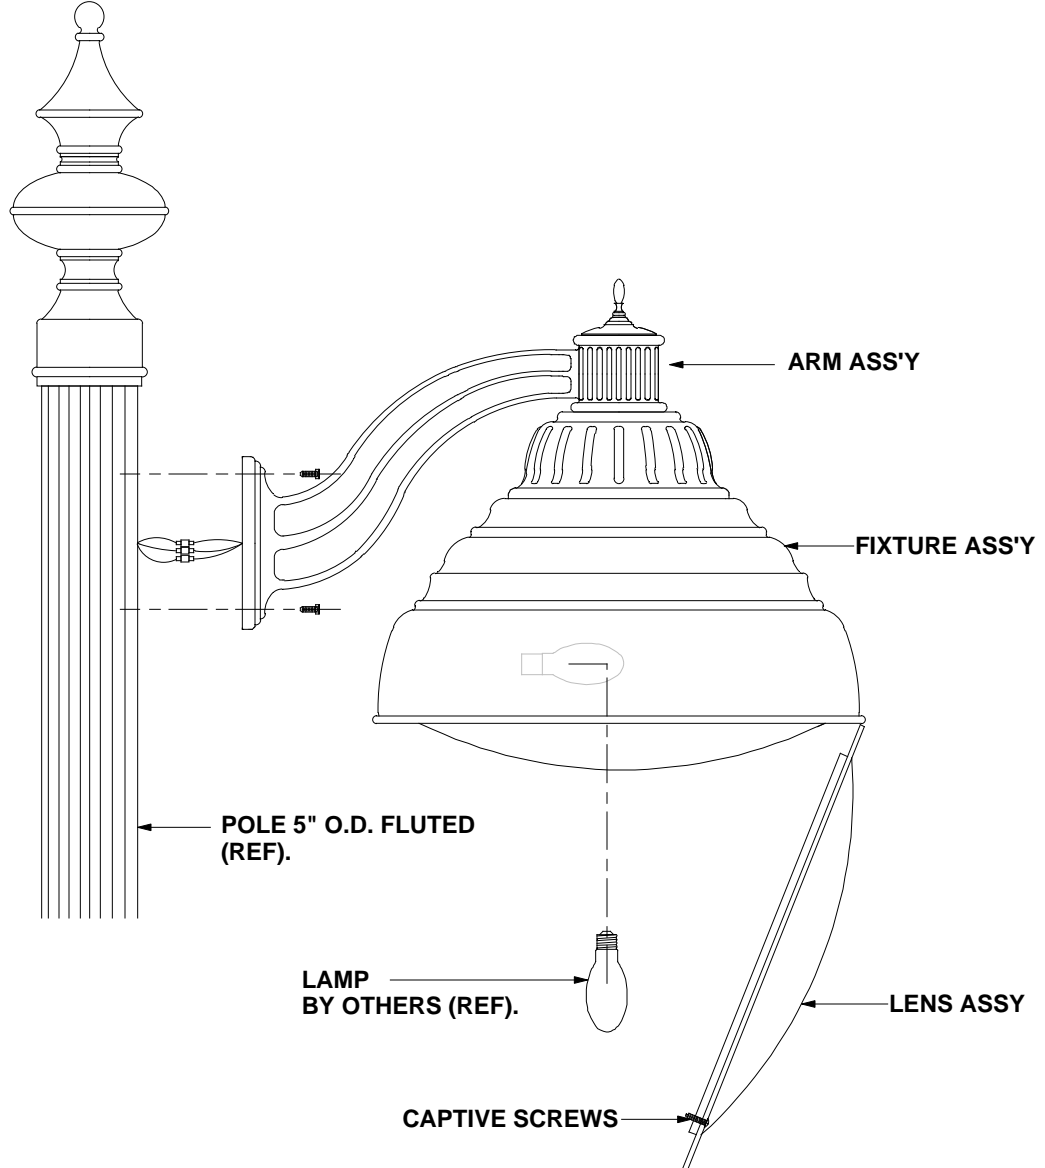

A RCHITECTURAL

A REA

L IGHTING

© 2022 HLI Solutions, Inc. All rights reserved. Information and specifications subject to change without notice. All values are design or typical values when measured under laboratory conditions.

CATALOG NUMBER
PRM2-H*-TRA5D-5

PART NO.
A96215

DATE APPRVD

DATE REV