




INSTALLATION INSTRUCTIONS

CATALOG NUMBER

SPB-LED

NOTES:

- 1) PLACE BASE PLATE OVER ANCHOR BOLTS, LEVEL AND TIGHTEN NUTS (**SEE BELOW**). PLACE BODY OVER BASE AND SECURE WITH (3) 1/4-20 SET SCREWS.
- 2) ADEQUATE DRAINAGE MUST BE PROVIDED IN CONCRETE FOUNDATION OR IN GROUT.
- 3) ATTACH ELECTRICAL ASSEMBLY TO BOTTOM OF FIXTURE AND SECURE WITH (3) 1/4-20 SCREWS AS SHOWN.
- 4) MAKE WIRE CONNECTIONS TO INCOMING LINE. CONNECT GREEN GROUND LEAD TO EQUIPMENT GROUND.
- 5) PLACE FIXTURE ON TOP OF BODY AND SECURE IN PLACE WITH (3) 1/4-20 SET SCREWS.
- 6) LOOSEN LID SCREW, OPEN LID AND REMOVE ALL PACKING MATERIAL. CLOSE LID AND SECURE IN PLACE.
- 7) INSTALLATION IS COMPLETE.

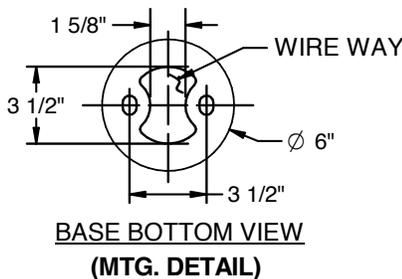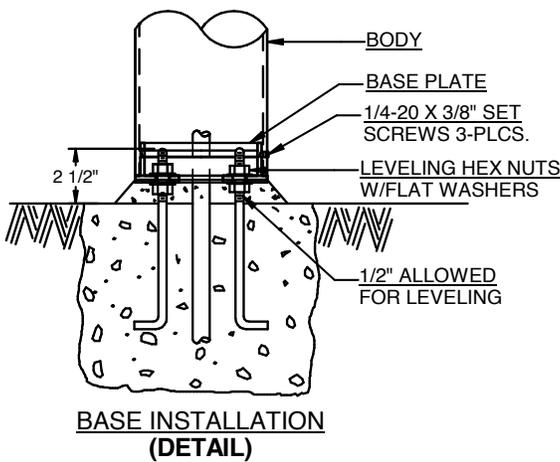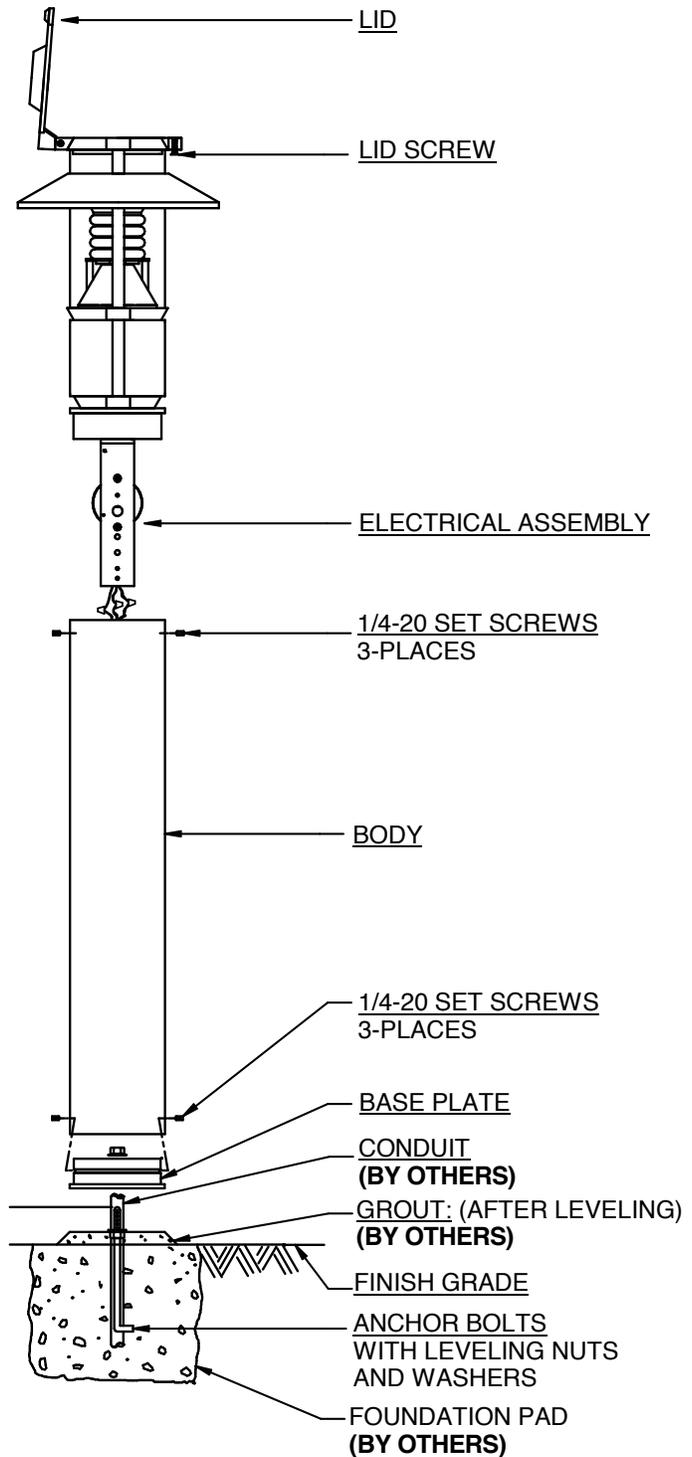

INSTALLATION INSTRUCTIONS

CATALOG NUMBER

SPB-LED

NOTES:

- 1) PLACE BASE PLATE OVER ANCHOR BOLTS, LEVEL AND TIGHTEN NUTS (**SEE BELOW**). PLACE BODY OVER BASE AND SECURE WITH (3) 1/4-20 SET SCREWS.
- 2) ADEQUATE DRAINAGE MUST BE PROVIDED IN CONCRETE FOUNDATION OR IN GROUT.
- 3) ATTACH ELECTRICAL ASSEMBLY TO BOTTOM OF FIXTURE AND SECURE WITH (3) 1/4-20 SCREWS AS SHOWN.
- 4) MAKE WIRE CONNECTIONS TO INCOMING LINE. CONNECT GREEN GROUND LEAD TO EQUIPMENT GROUND.
- 5) PLACE FIXTURE ON TOP OF BODY AND SECURE IN PLACE WITH (3) 1/4-20 SET SCREWS.
- 6) LOOSEN LID SCREW, OPEN LID AND REMOVE ALL PACKING MATERIAL. CLOSE LID AND SECURE IN PLACE.
- 7) INSTALLATION IS COMPLETE.

