


INSTALLATION INSTRUCTIONS

SP1/SP2 - AWM1/AWM2

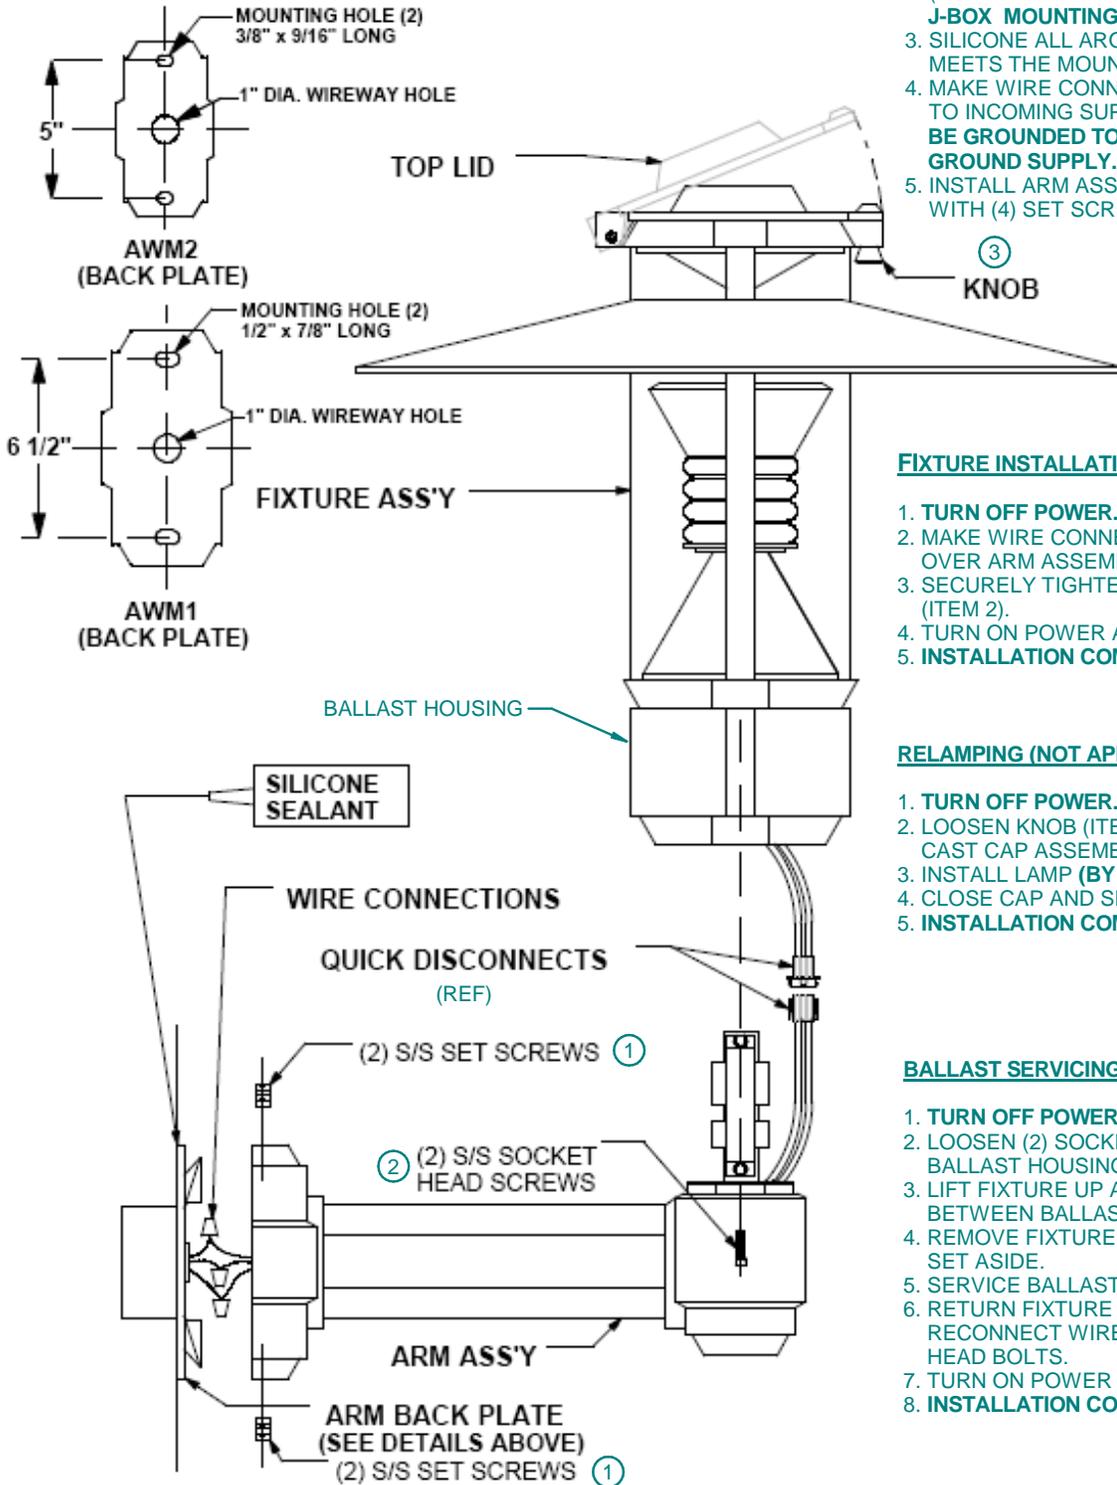

AWM ARM INSTALLATION:

1. **TURN POWER OFF.**
2. SECURE BACK PLATE TO MOUNTING SURFACE. (HARDWARE **BY OTHERS**). **NOTE: NOT FOR J-BOX MOUNTING!**
3. SILICONE ALL AROUND BACK PLATE WHERE IT MEETS THE MOUNTING SURFACE.
4. MAKE WIRE CONNECTIONS FROM ARM ASS'Y TO INCOMING SUPPLY. **NOTE: ASSEMBLY MUST BE GROUNDED TO THE INCOMING EQUIPMENT GROUND SUPPLY.**
5. INSTALL ARM ASS'Y OVER BACK PLATE AND SECURE WITH (4) SET SCREWS (ITEM 1) AS SHOWN.

STREET SIDE 

(REFERENCE) KNOB SIDE

FIXTURE INSTALLATION:

1. **TURN OFF POWER.**
2. MAKE WIRE CONNECTIONS AND SLIP FIXTURE ASS'Y OVER ARM ASSEMBLY.
3. SECURELY TIGHTEN (2) S/S SOCKET HEAD BOLTS (ITEM 2).
4. TURN ON POWER AND CHECK FOR OPERATION.
5. **INSTALLATION COMPLETE.**

RELAMPING (NOT APPLICABLE FOR LED):

1. **TURN OFF POWER.**
2. LOOSEN KNOB (ITEM 3) FROM TOP LID AND OPEN CAST CAP ASSEMBLY.
3. INSTALL LAMP (**BY OTHERS**).
4. CLOSE CAP AND SECURE WITH THE KNOB.
5. **INSTALLATION COMPLETE.**

BALLAST SERVICING:

1. **TURN OFF POWER.**
2. LOOSEN (2) SOCKET HEAD BOLTS UNDERNEATH BALLAST HOUSING (ITEM 2).
3. LIFT FIXTURE UP AND DISCONNECT WIRE LEAD BETWEEN BALLAST AND LAMP.
4. REMOVE FIXTURE ASS'Y FROM CAST FITTER AND SET ASIDE.
5. SERVICE BALLAST.
6. RETURN FIXTURE ASS'YS TO CAST FITTER, RECONNECT WIRE AND SECURE WITH SOCKET HEAD BOLTS.
7. TURN ON POWER AND CHECK FOR OPERATION.
8. **INSTALLATION COMPLETE.**