



Kim Solitaire Installation Instructions

⚠ WARNING: Fixtures must be grounded in accordance with local codes or the National Electrical Code. Failure to do so may result in serious personal injury. **See back page for additional safety warnings and cautions.**

⚠ AVERTISSEMENT: Les appareils doivent être mis à la terre conformément aux codes locaux ou au Code national de l'électricité. Ne pas le faire peut entraîner des blessures graves. **Reportez-vous à la page précédente pour obtenir des avertissements et des mises en garde supplémentaires.**

MAINTENANCE INSTRUCTIONS: **⚠** Make certain electricity is **off** before beginning maintenance procedures.

INSTRUCTIONS D'ENTRETIEN: **⚠** Assurez-vous que l'électricité est éteinte avant de commencer les procédures d'entretien.

1. For opening and closing of the fixture, refer to directions and diagrams on instructions.
2. A regularly scheduled maintenance program should be established to retain optimum light output and reduce heat retention. Dusting with a soft, clean, dry cloth is normally sufficient for the optics.

Do not use alkaline or acid cleaners on reflector surfaces.

NOTE: All wiring must be done by a qualified electrician.

KEEP THIS SHEET FOR FUTURE REFERENCE.

Tools Required: Flat Head Screw Driver 3/16" Allen Wrench 7/16" Open End Wrench
 9/16" 6 or 12 Point Socket Wrench


SOLITAIRE POST TOP MOUNTING INSTRUCTIONS



1. Lay pole on padded support to protect finish. Remove wiring access cover from fixture hub.



2. Disconnect wiring connectors in top of hub.

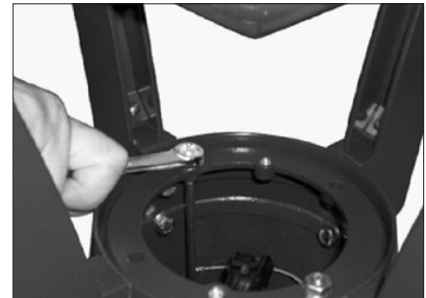


3. Remove (2) nuts securing retaining ring, then remove retaining ring.

Kim Intent Installation Instructions


SOLITAIRE POST TOP MOUNTING INSTRUCTIONS (Continued)



4. Install fixture onto base, orient fixture relative to mount in order to provide desired lighting distribution.

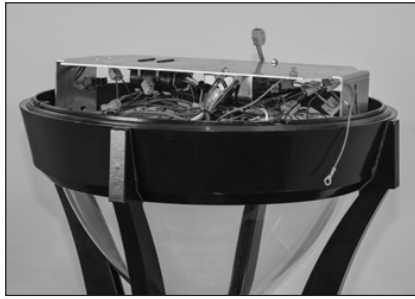


5. Remove tope of the fixture.

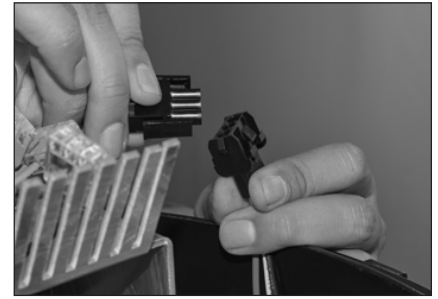

6. Make electrical connections (green to ground, white to common, black to voltage).


SOLITAIRE ARM MOUNTING INSTRUCTIONS

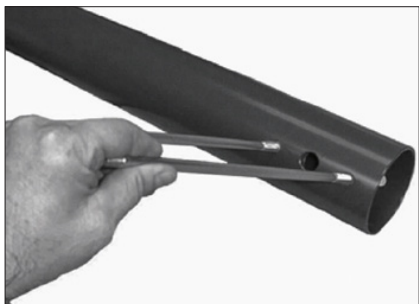

1. Place backing plate inside pole and thread long threaded end of studs into the backing plate.



2. Disconnect wiring connectors in top of hub.

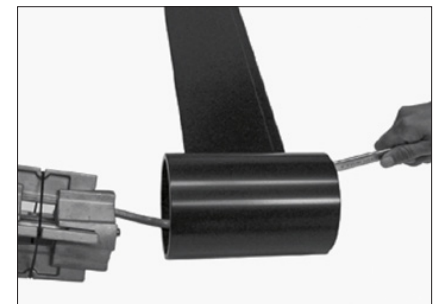


3. Remove (2) nuts securing retaining ring, then remove retaining ring.



4. Place backing plate inside pole and thread long threaded end of studs into the backing plate.



5. Disconnect wiring connectors in top of hub.

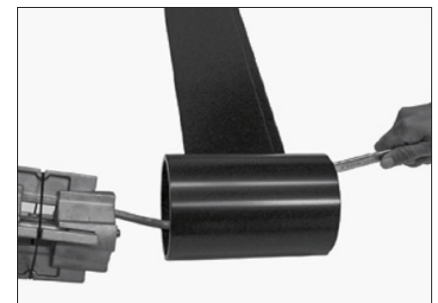

6. Remove (2) nuts securing retaining ring, then remove retaining ring.