


SHIELDING INSTALLATION INSTRUCTIONS

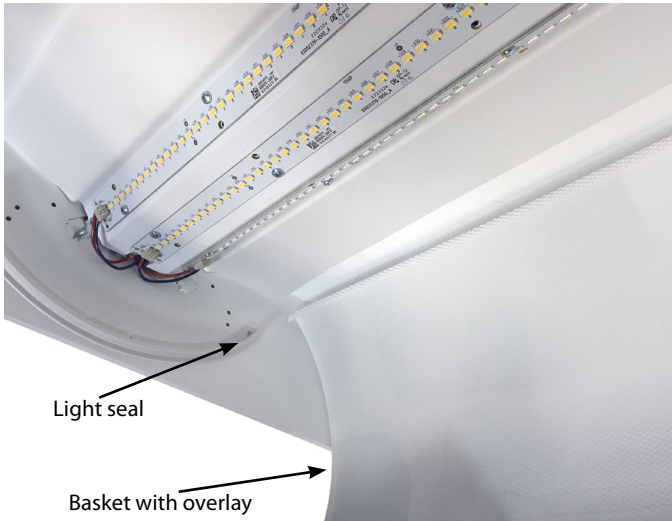

STEP 1

To install, place one side of the basket edge over the existing light seal located on the housing; repeat the same process for the opposite side. **(Do not remove overlay material located inside perforated basket)**

STEP 2

Once basket is installed tuck overlay back inside the perforated basket on both sides for uniform illumination.



If overlay can be seen protruding from basket it is installed incorrectly.

Image represents correct installation of overlay material.

