



## HA11 - Swept Cast Arm Wall Mount Installation Instructions



**WARNING:** Fixtures must be grounded in accordance with local codes or the National Electrical Code. Failure to do so may result in serious personal injury.

**MAINTENANCE:** A regularly scheduled maintenance program must be established to insure paint coating is intact, corrosion or structural damage has not occurred, and all mounting arms, rods, nuts and bolts are tight. Failure to do so could lead to serious personal injury.


**CAUTION:** Structural integrity of mounting plate attachment to wall is by others.

**NOTE:** All electrical work must be done by a qualified electrician. **KEEP THIS SHEET FOR FUTURE REFERENCE.**


- Tools Required:**
- 1/4" Hex Wrench
  - 1/8" Hex Wrench
  - 4" 3/8" Drive Extension
  - Rope Caulk
  - RA17, AE17, BE17, LE19**     9/16" 6- or 12- Point Deep (2" min.) Socket
  - RA25, AE21, BE21, LE26**     3/4" 6- or 12- Point Deep (2" min.) Socket



Make certain electrical supply is **OFF** before starting installation.

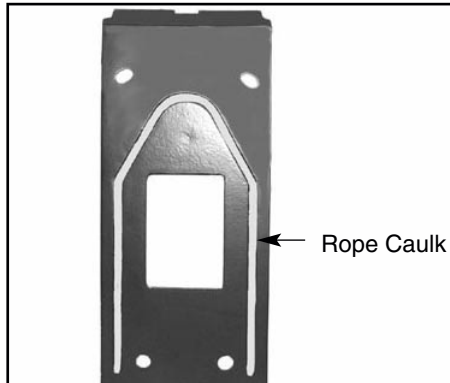


Rope Caulk

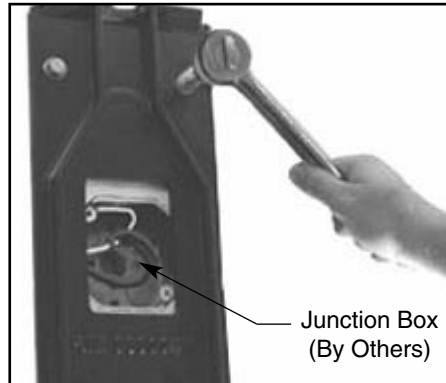


Junction Box  
(By Others)




1. Remove wiring inspection cover from wall mount cover and wall mount cover plate. Adhere rope caulk in a continuous strip into the wall plate groove. Allow mastic to extend well above the wall plate surface to ensure a proper seal.
2. Securely mount wall plate over junction box on wall. **CAUTION: Structural integrity of mounting plate attachment to wall is by others.**
3. Install fixture head onto swept cast arm. **IMPORTANT! Keep wires tight when attaching fixture to swept cast arm to avoid pinching wires.** Connect fixture wires to supply wires observing polarity, i.e.; green-to-ground, white-to-common, and black-to-voltage. (See fixture installation instructions.)

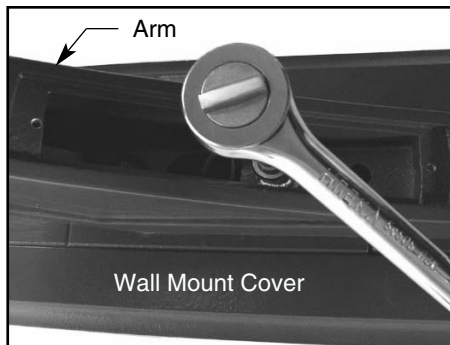

Wall Mount Cover

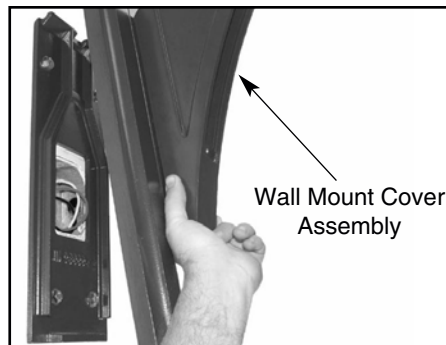

Wall Mount Cover  
Assembly

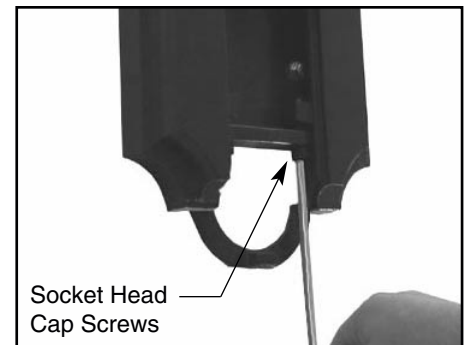


Socket Head  
Cap Screws

4. Attach swept cast arm to wall mount cover.
5. Attach wall mount cover plate with arm and fixture head attached, to wall plate with two (2) 5/16-18 x 1 1/4" socket head cap screws.

# HA11 - Swept Cast Arm Wall Mount Installation Instructions



6. Install hand hole cover using two 10-32 x 1/2" flat head stainless steel socket screw.

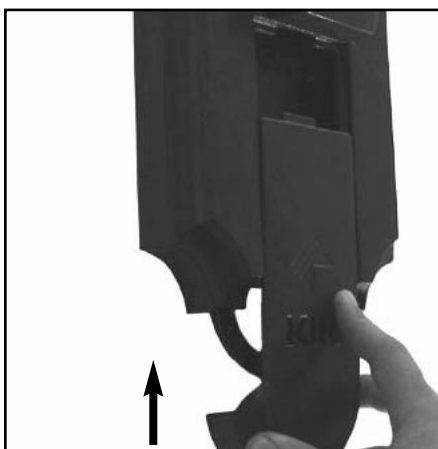

7. Attach splice cover using the 10-32 flat head socket stainless steel screw.



## KIM LIGHTING LIMITED WARRANTY

When installed in accordance with Kim Installation Instructions and accepted trade practices, the following shall apply:

### General Product Limited Warranty Coverage

All material and component parts used in the manufacture of Kim Products, are warranted to be free from defects of material and/or workmanship for a period of 1 year from date of sale, with the following exceptions:

### Auxiliary Equipment

All auxiliary equipment (such as lamp, ballasts, and transformers) provided by and/or included in Kim Products shall carry the component manufacturer's warranty.

### Copper and Bronze Landscape Components

Copper and Bronze Landscape fixture components shall be warranted against defects of material and/or workmanship, and failure due to corrosion, for a period of 25 years from date of sale.

### Composite In-Grade Components

Composite In-Grade fixture components installed below grade, shall be warranted against defects of material and/or workmanship, and failure due to corrosion, for a period of 7 years from date of sale.

### Aluminum Landscape Components

Aluminum Landscape fixture components not in direct contact with soil, shall be warranted against defects of material and/or workmanship for a period of 3 years from date of sale. Aluminum fixture components in direct contact with soil shall be warranted from defects of material and failure from corrosion for a period of 1 year from date of sale.

### Limit of Liability and General Conditions

Only products which are installed, used and maintained in accordance with applicable Kim instructions, specifications and accepted trade practices, are covered by the Kim Warranty. During the warranty period, with proof of purchase, Kim will repair or replace with the same or similar product, at Kim's option, without charge. Labor costs are the owner's responsibility and are excluded from this warranty. This warranty is void if the product is modified, tampered with, misapplied, poorly installed, improperly maintained, or subjected to abnormal conditions.

Repair or replacement as provided under this warranty is the exclusive remedy of the purchaser. This warranty is in lieu of all other warranties, expressed or implied, including any implied warranty of fitness for a particular application. Kim Lighting shall not be liable to the purchaser for indirect or consequential damages.



How may we serve you better?  
Please let us know. Visit our website at:  
[www.kimlighting.com](http://www.kimlighting.com)  
Your concerns are important to us.