



LED Luminaires (LPL Gen B Series)



BEFORE YOU BEGIN

Read these instructions completely and carefully.



WARNING/AVERTISSEMENT

RISK OF ELECTRIC SHOCK

- Turn power off before inspection, installation or removal.
- Properly ground electrical enclosure.

RISK OF FIRE

- Follow all NEC and local codes.
- Use only UL approved wire for input/output connections.
Minimum size 18 AWG (0.75mm²).

RISQUES DE DÉCHARGES ÉLECTRIQUES

- Coupez l'alimentation avant d'inspecter, installer ou déplacer le luminaire.
- Assurez-vous de correctement mettre à la terre le boîtier d'alimentation électrique.

RISQUES D'INCENDIE

- Respectez tous les codes NEC et codes locaux.
- N'utilisez que des fils approuvés par UL pour les entrées/sorties de connexion. Taille minimum 18 AWG (0.75mm²).

Save These Instructions

Use only in the manner intended by the manufacturer. If you have any questions, contact the manufacturer.

Prepare Electrical Wiring



Electrical Requirements

- The LED luminaire must be connected to the mains supply according to its ratings on the product label.
- Class 1 wiring should be in accordance with NEC.



Grounding Instructions

- The grounding and bonding of the overall system shall be done in accordance with National Electric Code (NEC) Article 600 and local codes.


Tools and Components Required

- Screwdriver
- UL approved conduit fittings
- UL approved twist-on wire connectors


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. CAN ICES-005 (A) / NMB-005 (A)

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Luminaire Installation

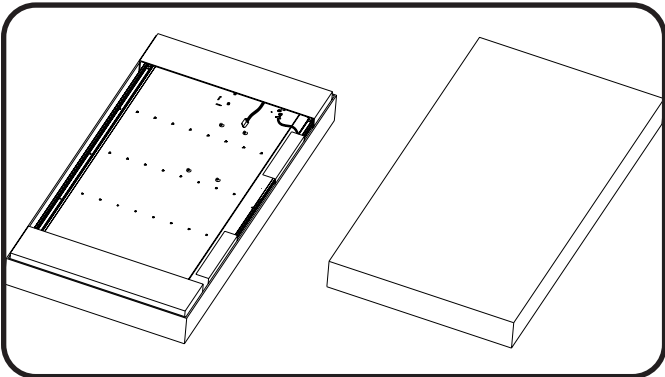


① Carefully unpack unit from its packaging. Properly inspect for defects before installing. Wear work gloves to prevent dirt and oil from being transferred to the luminaire.

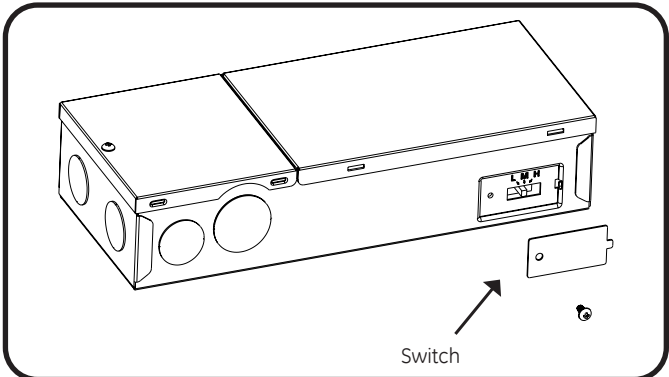


② Remove the fi xture and driver box from the package. If a lumen level other than M (medium) is desired, remove switch cover and set to the desired lumen level and re-attach cover.



	L	M	H
2BY2:	2450lm	3750lm	4500lm
2BY4:	3500lm	4550lm	5250lm

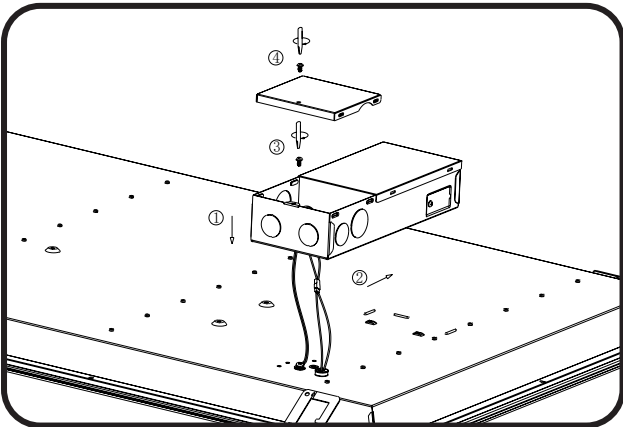


③ Loosen the screws on the driver box cover and open the electrical cavity. The red and blue wires with a connector from the light engine should be fed through the square hole on the bottom of the driver box into the cavity. The green-yellow ground wires should also be fed into the same hole. Insert the driver box tabs into the embosses on the light engine housing. Before securing the box with the captive screw to the light engine housing, make sure no wires are pinched by the driver box. Connect the quick connector with the red and blue wires from the driver to the light engine.

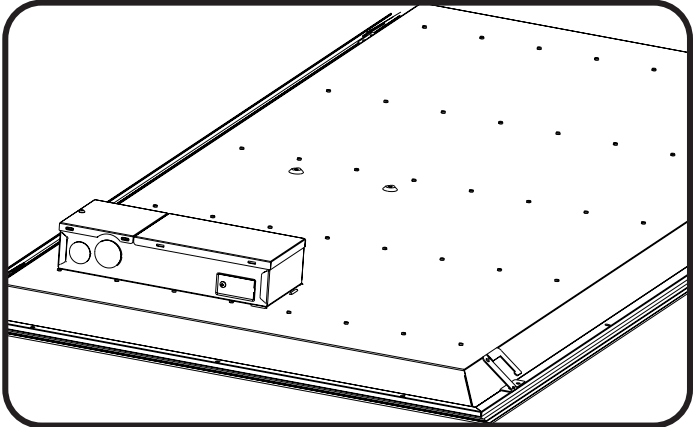

Luminaire Installation

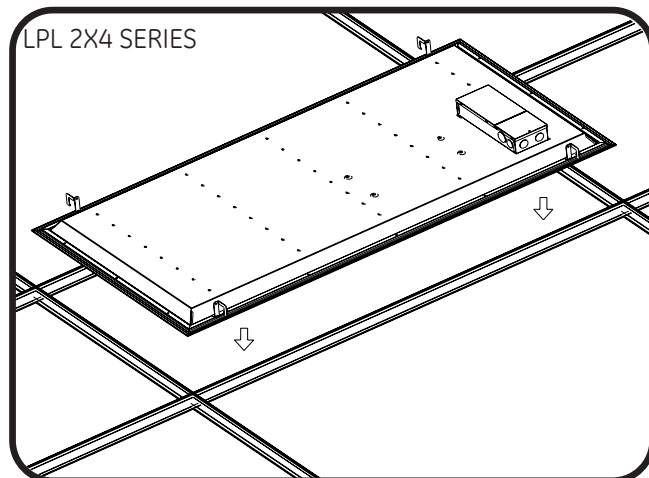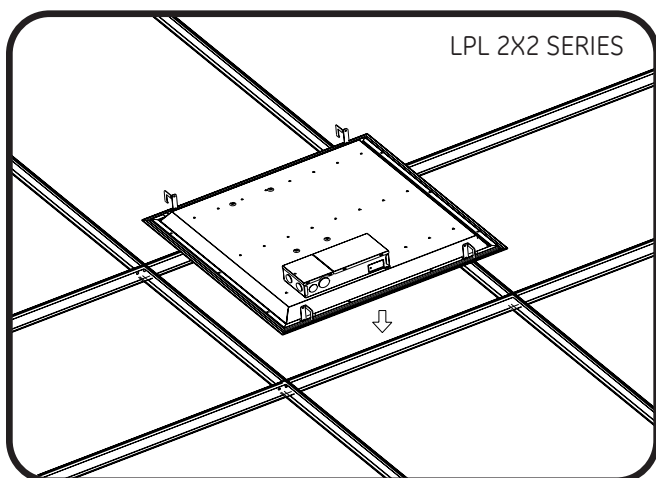


- ④ Insert the luminaire into the T-grid ceiling. Unit should not move freely within the ceiling grid.

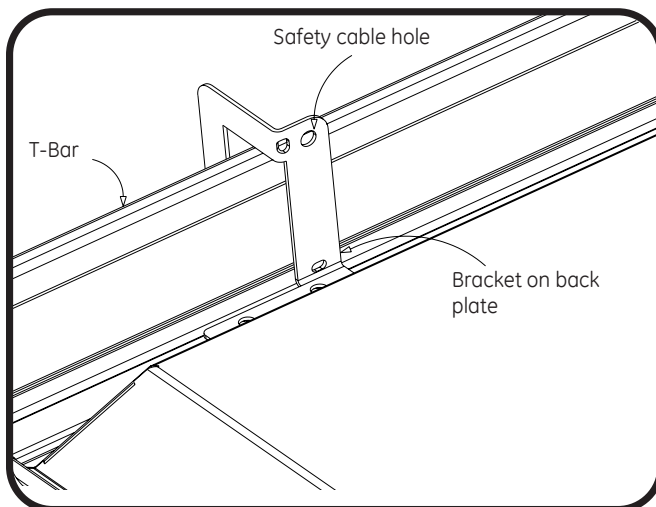


- ⑤ Bend the brackets on the back plate to make sure they hook to T-Bar. Secure safety cable to connection hole as needed to meet local seismic requirements. Safety cable and method of attachment to the building are provided by contractor according to local building codes.

Electrical Connections

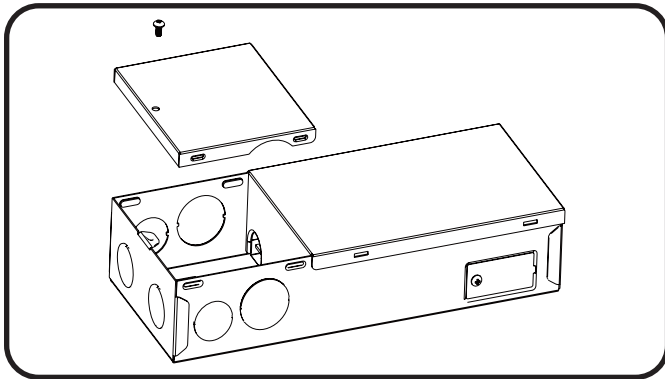


- ① Carefully remove knockout for AC line input wires. Install listed electrical fittings in the knockout holes for wire protection.

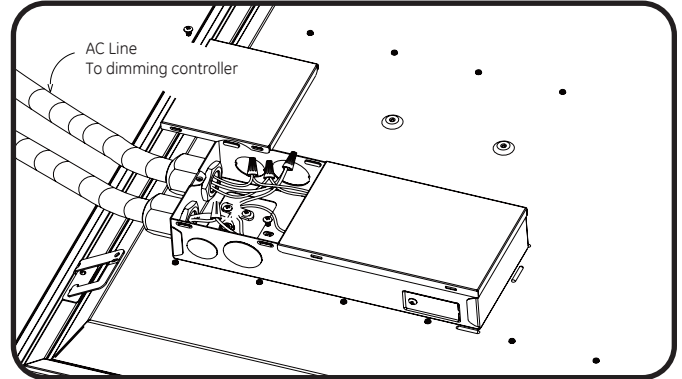


- ② Connect the AC line to the black (line) and white (neutral) input wires of the LED driver. Connect the ground wire to the green-yellow ground wire of the LED driver.

When connecting the dimming control wires, they must run through a separate knockout hole. Wiring requires an appropriate wire restraint.

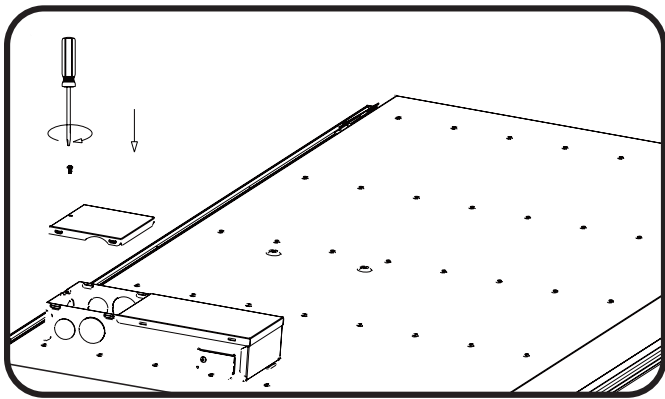

- ③ Secure the enclosure cover with the captive screw that is attached to the cover after wiring is complete.

Optional Installation: 0-10V Volt Dimming

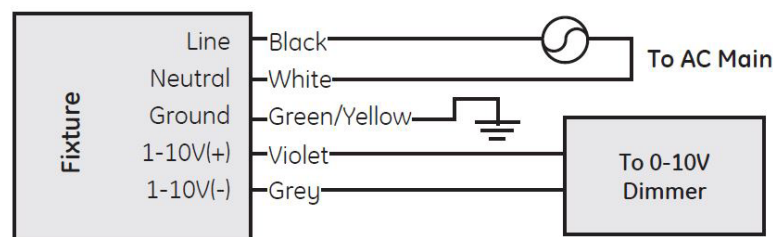

- ④ Option for Step 2: Follow diagram for 0-10V. Run wires from controller through a different knockout than the AC input wire. At output side of fixture, make appropriate connections using twist-on wire connectors. To combine with LFAMBA0VQFAEL, LCAMBA0NRFAL, LCAMBA0TSFAEL, LCAMBA0TQFAEL, LFAMBADVQFA, LCAMBA0NRFAB2, LCAMBA0TSFAB2, LCAMBA0TQFAB2, LCAMBA0NRFAB, LCAMBA0TSFA, LCAMBA0SQFA or LCAMBA0TQFA, please follow the install instructions provided with those products.

NOTE: Please cover dimming leads with wire nuts if you will not connect with dimming leads.