



BEFORE YOU BEGIN

Read these instructions completely and carefully.

WARNING/AVERTISSEMENT

RISK OF ELECTRIC SHOCK

- Turn power off before inspection, installation or removal.
- Properly ground electrical enclosure.

RISK OF ELECTRIC SHOCK

- Follow all NEC and local codes.
- Use only UL approved wire for input/output connections. Minimum size 18 AWG (0.75mm²).

RISQUES DE DÉCHARGES ÉLECTRIQUES

- Coupez l'alimentation avant d'inspecter, installer ou déplacer le luminaire.
- Assurez-vous de correctement mettre à la terre le boîtier d'alimentation électrique.

RISQUES D' INCENDIE

- Respectez tous les codes NEC et codes locaux.
- N'utilisez que des fils approuvés par UL pour les entrées/sorties de connexion. Taille minimum 18 AWG (0.75mm²).

Save These Instructions

These instructions do not purport to cover all details or variations in components nor to provide for every possible contingency to be met in connection with installation, operation or maintenance. Should further information be desired or should particular problem arise which are not covered sufficiently for the purchaser's purpose, the matter should be referred to Litecontrol.

Current does not claim liability for any installation not performed according to this guide or not by a qualified electrician.

Prepare Electrical Wiring



Electrical Requirements

The LED luminaire must be connected to the mains supply according to its ratings on the product label.




Grounding Instructions

The grounding and bonding of the overall system shall be done in accordance to local electric code of the country where the luminaire is installed.


For Your Safety

- Installation to be performed by factory trained or qualified personnel. Ensure this manual is provided to the installers and users.
- Use this product only in the manner intended by the manufacturer. If there are any questions or concerns, contact the manufacturer.


Included Parts & Hardware

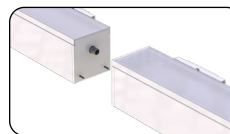


Housing(s)

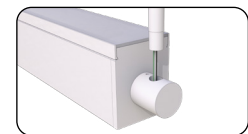

Stem -
Pendant

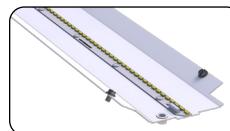

Geartray(s)

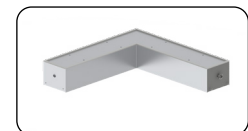

Corners (Optional)



Lens - Wall, Pendant,
Ceiling





Lens -
Recessed


Installation

COMPONENTS FOR WALL AND EDGE MOUNTING


The FLOW series wall mounting system consists of two main components: the wall-side assembly (A) and the fixture-side assembly (B). Both items come shipped with and attached to the fixture to help ensure proper counts and clarification during assembly.

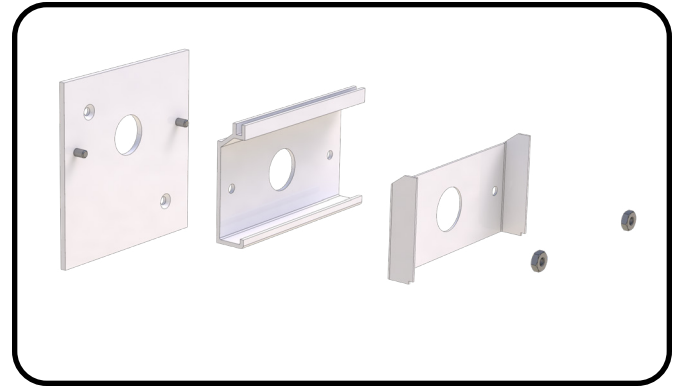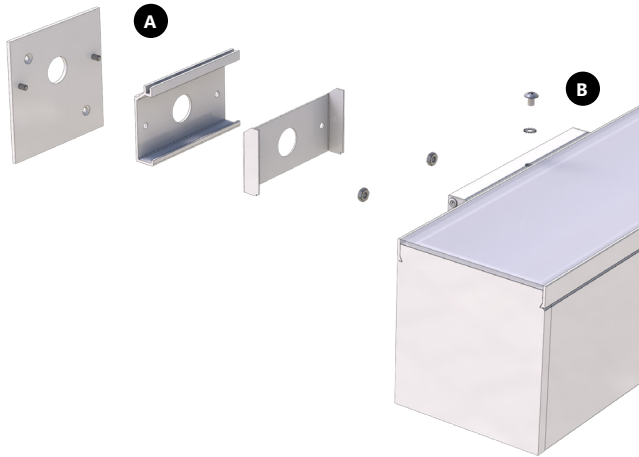

2 The wall mounting system can be used with a standard double-gang j-box as well as a horizontal single-gang box for a more concealed look. Mount the proper cover plate for your specific installation to the wall. All mounting locations must be to building structure.

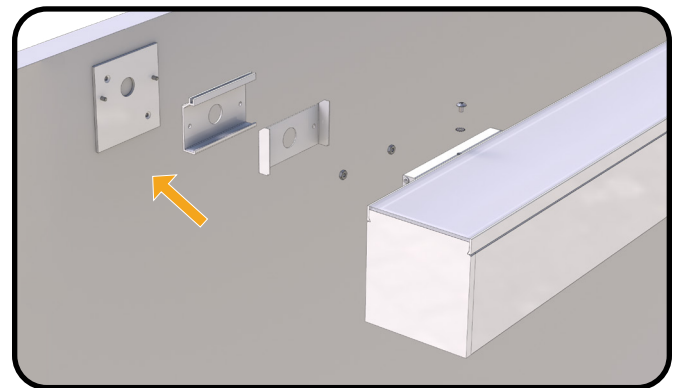

3 Reattach the wall-side bracket to the plate with the provided hardware.

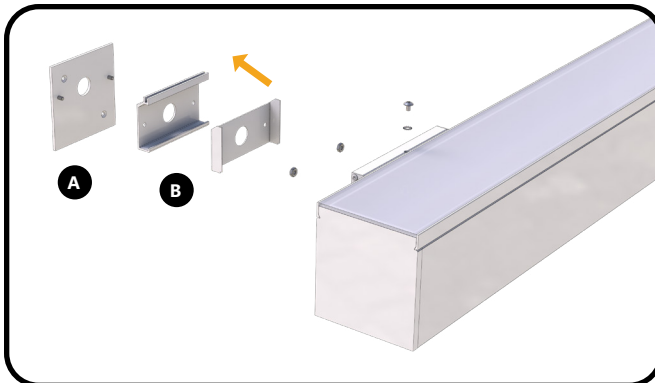


1 In preparation of installation, remove the wall-side assembly from the package and separate the bracket (B) from the mounting plate (A).




4 With wall-side brackets installed, pull the power feed wiring through the middle opening of the first fixture.

Installation

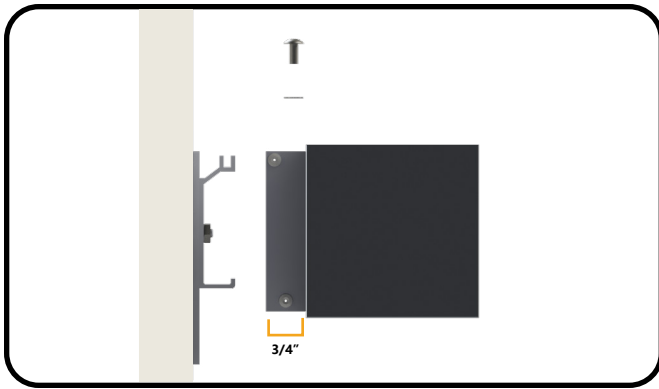

5 The fixture-side bracket engages with a hook-and-pivoting motion. With the fixture raised and in the (A) position, feed the wiring into the fixture housing and lower/rotate the mating pieces into position (B).

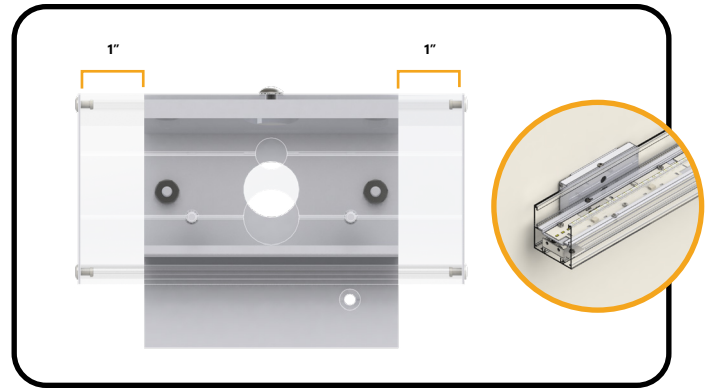





6 The extended length of the fixture-side bracket allows for as much as 1" of alignment left or right. Once the fixture is in the desired position, lock it in to place with the provided hardware on the top of the mounting bracket.

For continuous run/pattern installations: after first fixture has been installed, repeat steps 1, 2, 3, and 5 for each subsequent fixture.

Proceed with **Housing & Run Assembly Installation** and **Wiring Instructions** at the end of this document. Finally, complete the installation by reinstalling the geartray and lenses.

WALL-MOUNT

EDGE-MOUNT

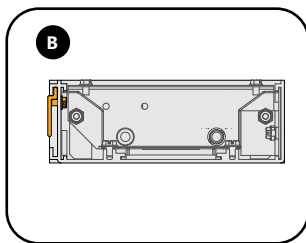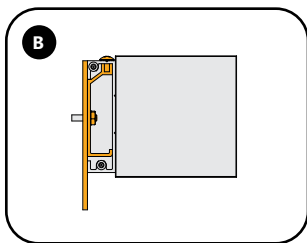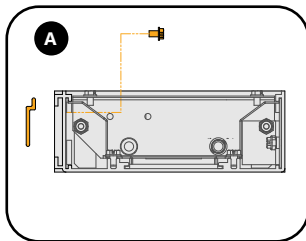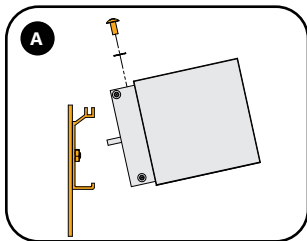


Installation


COMPONENTS FOR RIGID PENDANT MOUNTING

The FLOW series pendant mounting system consists of two main components: the power feed assembly (A) and the non-power feed assembly (B).


In preparation of installation, ensure that crossbars and canopy covers are all accounted for. The pendant mounting system is to be used with a standard j-box. Be sure to follow all governing code related to structural integrity and use of materials.

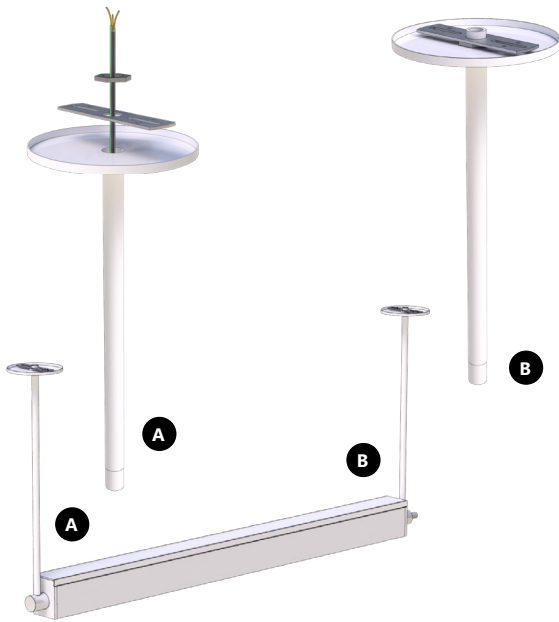


2 Thread the non-power feed side through the 5' canopy and nut to cross bar.

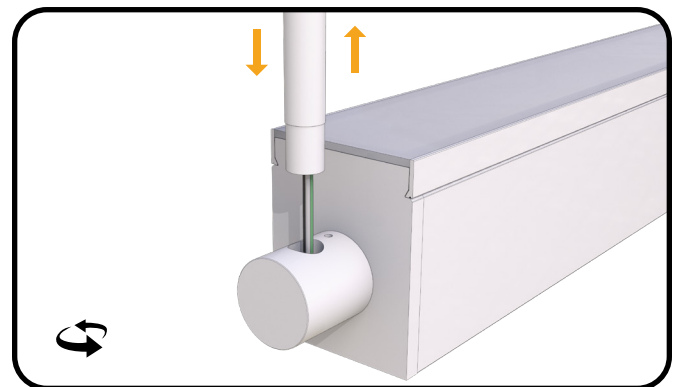

3 Screw stem into the fixture side mounting component.

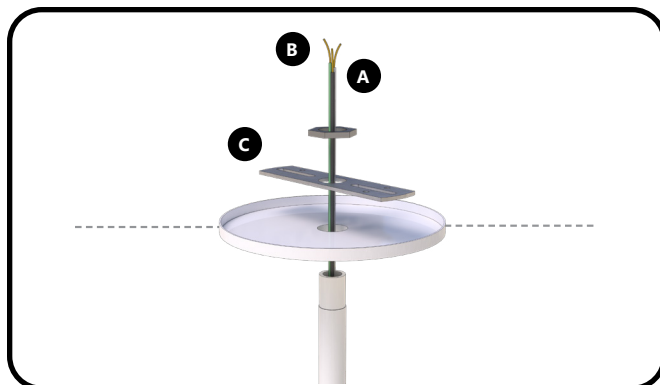

1 Turn off the power to the fixture's circuit. With the first power-fed fixture supported in the air, raise the pendant assemblies to their respective mounts, and connect the power wires (A) to the ceiling's power feed (B). Install the junction box cross bar (C) in the power feed side. The pendant assembly nuts through the cross bar. Follow governing electrical code for making your connections in the junction box. Number of conductors in the cable will vary with fixture specification.

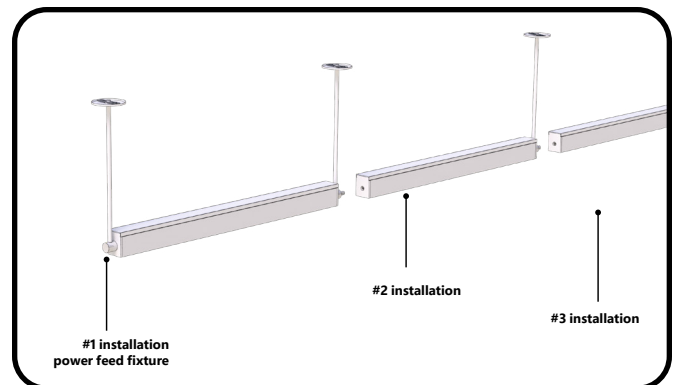



4 For continuous run/pattern installations: after first power-fed fixture has been installed, repeat step 2 for each subsequent fixture and corner. Proceed with **Housing & Run Assembly Installation and Wiring Instructions**. Finally, complete the installation by reinstalling the reflectors and lenses.

Installation


COMPONENTS FOR CEILING MOUNTING

The FLOW series ceiling mounting system consists of three main components: the housing (A), the geartray (B), and the lens (C). These items come shipped with and attached to the fixture to help ensure proper counts and clarification during assembly.


In preparation for installation, remove geartray (B) and lens (C) from housing (A) and set aside in a safe area.

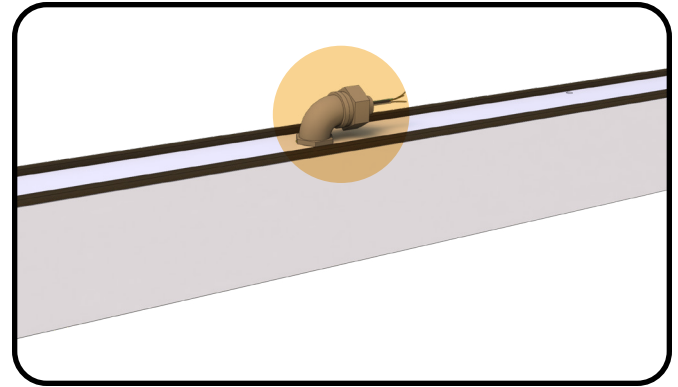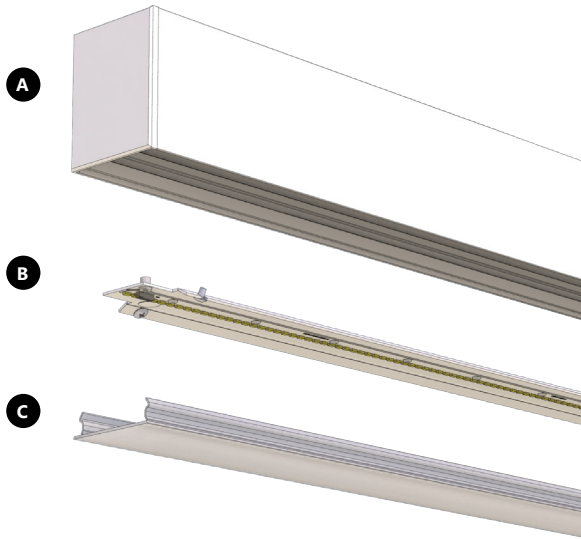


2 1/2" water tight conduit fitting provided for ceiling wiring to be fed into fixture. Liquid tight conduit by others.

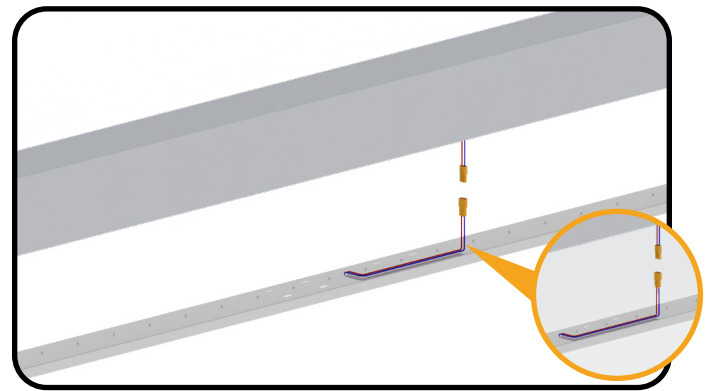

3 Connect geartray to driver inside fixture housing via provided electrical disconnect and re-insert geartray back into housing.

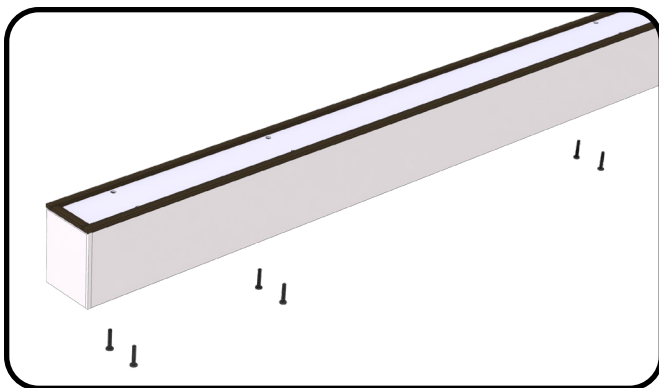

1 Turn off the power to the fixture's circuit. Align fixture housing flush to ceiling and secure through factory-drilled holes using screws (not provided) appropriate for ceiling type.

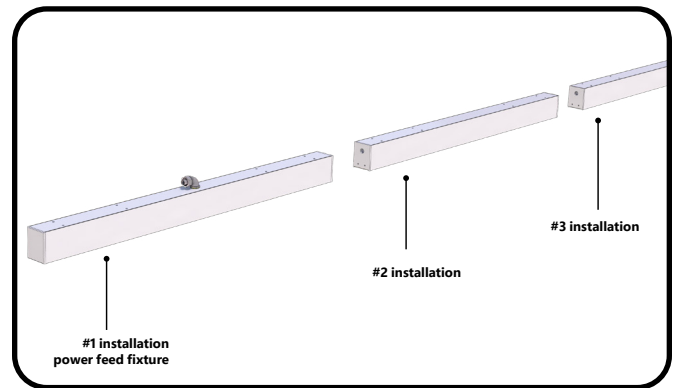



4 For continuous run/pattern installations: after first power-fed fixture has been installed, repeat step 2 for each subsequent fixture and corner. Proceed with **Housing & Run Assembly Installation** and **Wiring Instructions**. Finally, complete the installation by reinstalling the reflectors and lenses.

Installation


COMPONENTS FOR RECESSED MOUNTING

The FLOW series recessed mounting system consists of four main components: the yoke (A), the housing (B), the geartray (C), and the lens (D). These items come shipped with and attached to the fixture to help ensure proper counts and clarification during assembly.


In preparation for installation, remove the yoke (A), geartray (C), and lens (D) from housing (B) and set aside in a safe area.

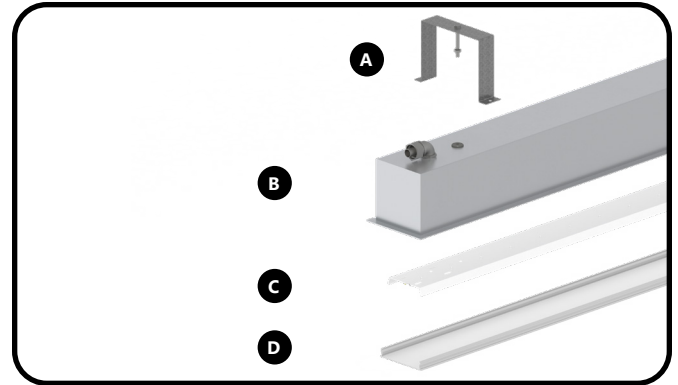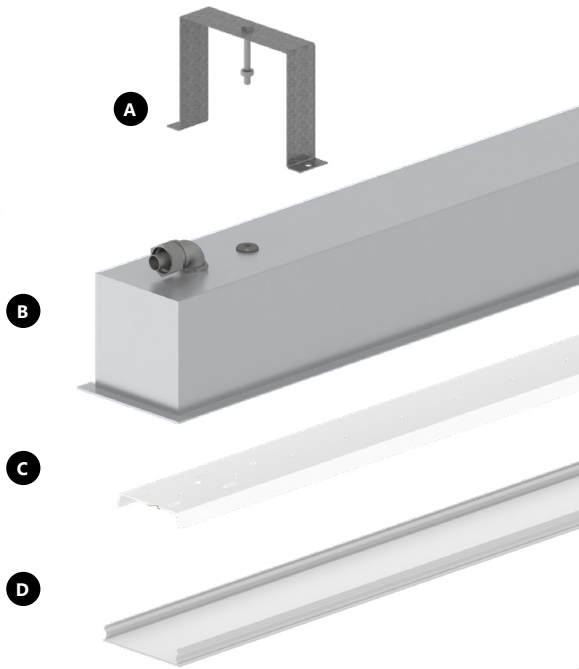

1 In preparation for installation, remove the yoke (A), geartray (C), and lens (D) from housing (B) and set aside in a safe area.

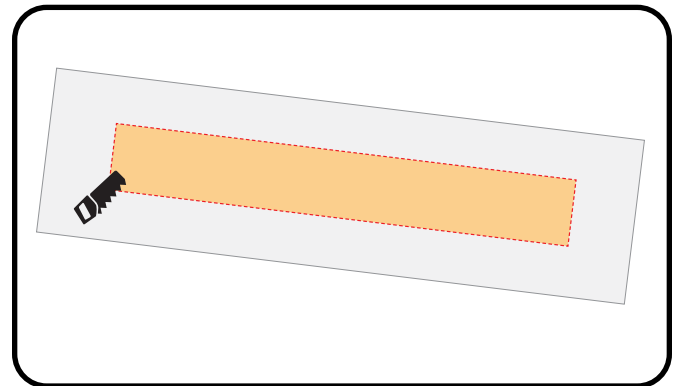

2 Be sure that the power to the fixture's circuit is turned off. Prior to cutting into drywall, locate all power conduits and cables. Make an opening in the drywall following the dimensions in chart below.

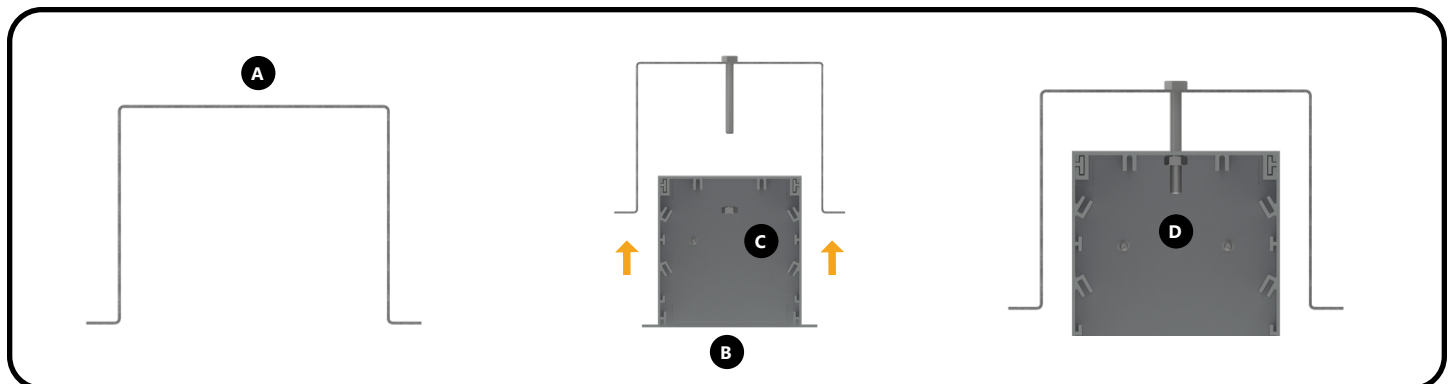


3 i. Secure yoke (A) to blocking using one screw (by others) on each side where marked.


ii. Raise fixture housing (B) through cutout in drywall. Insert threaded fastener (C) into hole in housing.

iii. Tighten bolt (D) to raise fixture until flange is tight to ceiling. Do not overtightened as to distort housing.

Installation

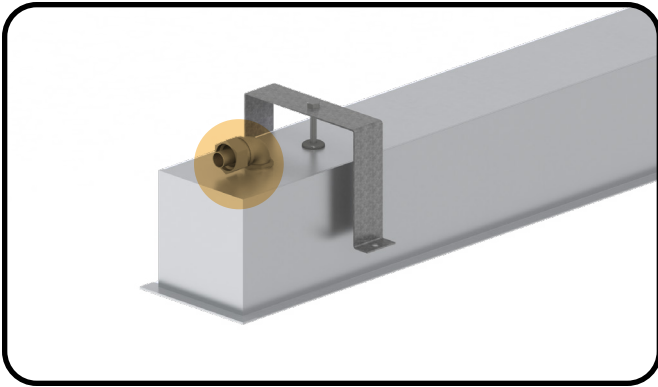

4 Connect wiring through 1/2" liquid tight fitting. Liquid tight conduit by others.

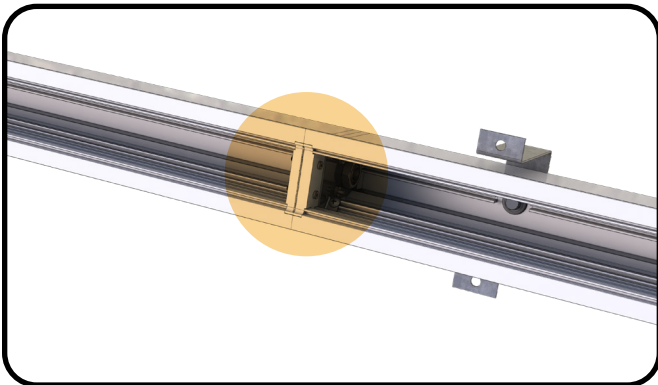

5 **For continuous run/pattern installations:** after first fixture has been installed, repeat steps 1 and 3 on this page for each subsequent fixture. Proceed with **Housing & Run Assembly Installation** and **Wiring Instructions** at the end of this document. Finally, complete the installation by reinstalling the geartray and lenses.

F Profile Hole Opening Charts


NOMINAL	LENGTH
2'	24 3/4"
3'	36 3/4"
4'	48 3/4"
5'	60 3/4"
6'	72 3/4"
7'	84 3/4"
8'	96 3/4"

PROFILE	WIDTH
91L-2	2 5/8"
91L-3	3 3/16"
91L-4	4 3/4"

RUNS OVER 8'

Housing sections come in lengths up to 8'. For each nominal length housing section add 1/2". Total housing lengths and add 1/4" for cut out opening size.


Housing & Run Assembly Installation

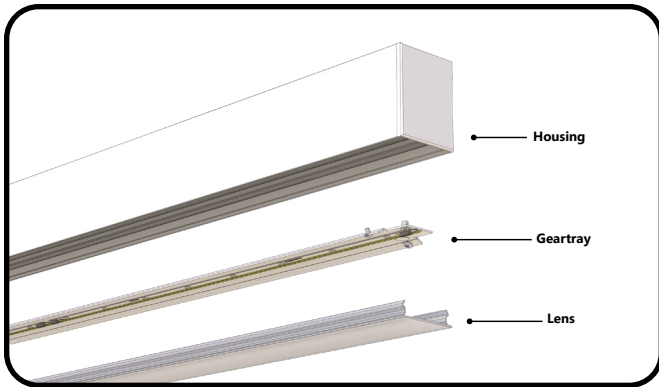


1 Remove the lens and geartray to gain access to the joining hardware at the fixture ends of each run configuration




4 Machined end caps allow lens to appear continuous across joint.

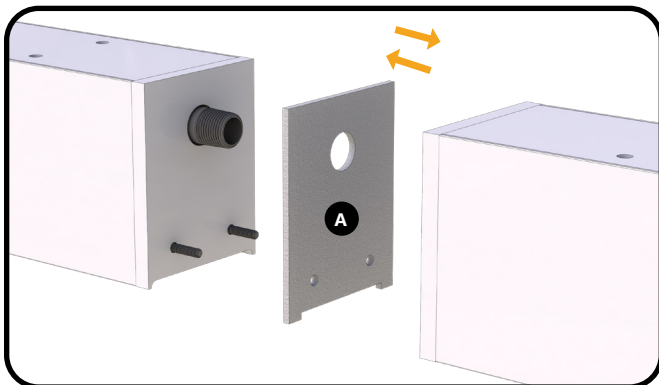

2 Join fixtures together with supplied hardware. Install supplied gasket (A) between fixtures along runs.

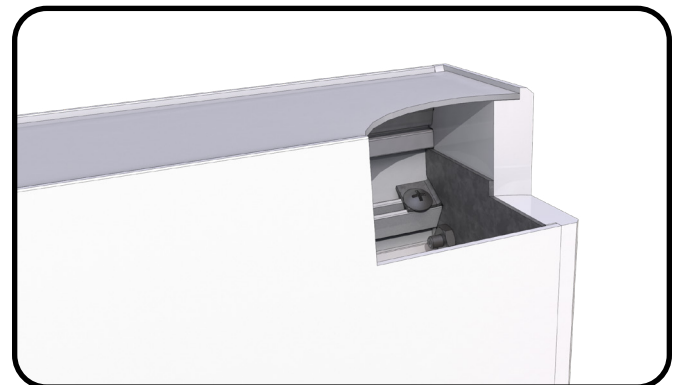


5 Machine end caps wrap lens to completely seal fixture.

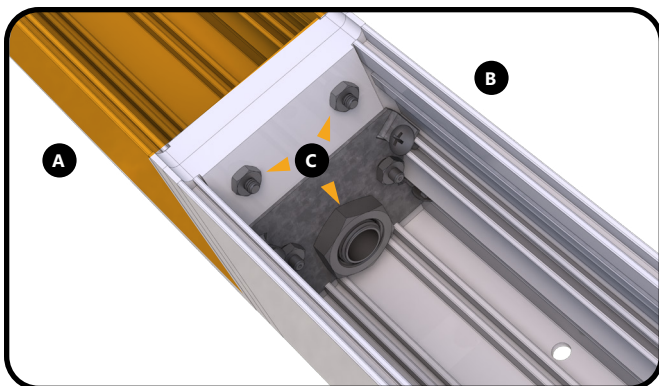


3 Attach the housings (A & B) by using the supplied hardware (C) in the header brackets to draw the pieces together tightly. Repeat steps 1-3 for continuous run/pattern installation, including corners.

Wiring & Lamping prior to wiring, fixture(s) must be mounted/hung and adjoined in the final installed position.

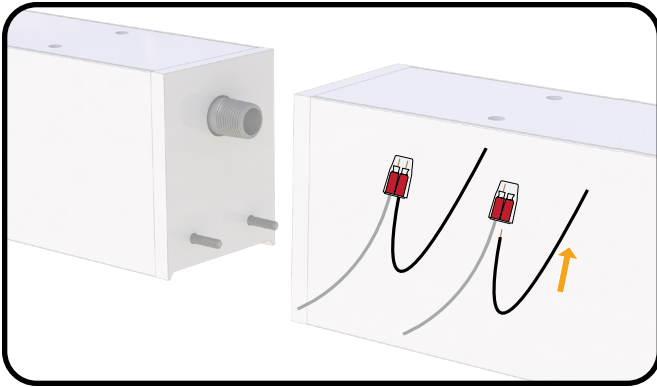

① Standard geartrays come wired with 18GA solid core wire and provided self drilling hardware.

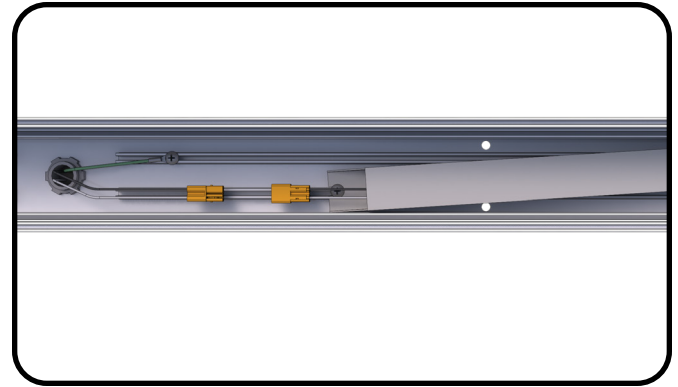

② Connect geartray to fixture housing via provided electrical junction and re-insert geartray back into housing.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. CAN ICES-005 (A) / NMB-005 (A)

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.