

⚠ WARNING: Fixtures must be grounded in accordance with local codes or the National Electrical Code. Failure to do so may result in serious personal injury.

⚠ Make certain electricity is **off** before beginning maintenance procedures

1. For opening and closing of the fixture, refer to instructions and diagrams on other side of sheet.
2. A regularly scheduled maintenance program should be established to retain optimum light output and reduce heat retention. Dusting with a soft, clean, dry cloth is normally sufficient for the optics.

Do not use alkaline or acid cleaners on reflector surfaces.


NOTE: All wiring must be done by a qualified electrician.

KEEP THIS SHEET FOR FUTURE REFERENCE.

Tools Required: ☐ Flat Blade Screwdriver ☐ Torque Wrench

For RA17 – ☐ 9/16" 6 or 12 Point Deep (2" min) Socket ☐ 12" (min) Long Socket Extension


For RA25 – ☐ 3/4" 6 or 12 Point Deep (2" min) Socket ☐ 20" (min) Long Socket Extension

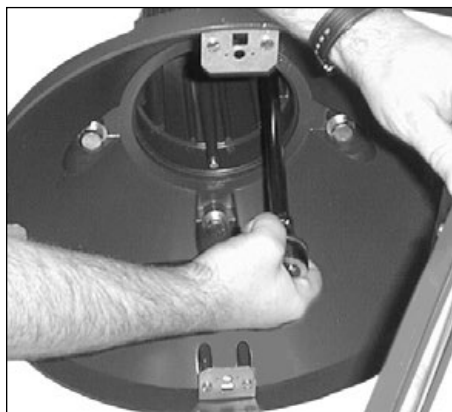


1. Install fixture to arm with lock washers & nuts Tighten to 20 ft-lbs. Make sure fixture aligns with arm with "hinge" side of fixture towards pole.




2. Connect incoming quick-disconnect to electronic driver and install driver tray through key-holes onto screws, tighten securely.

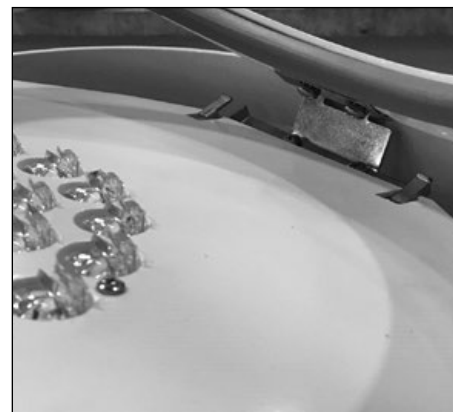

3. Hang bezel plate. Orientation determined by location of slots.

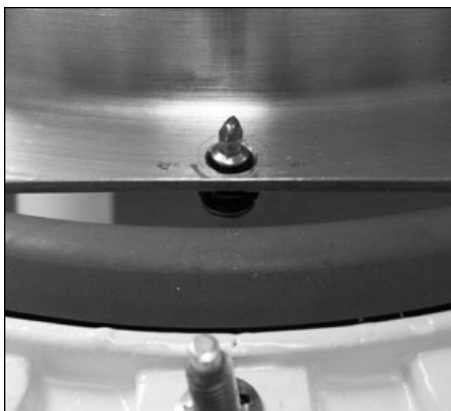

4. Orient ¼ turn faster by moving it to the position opposite the hinge.

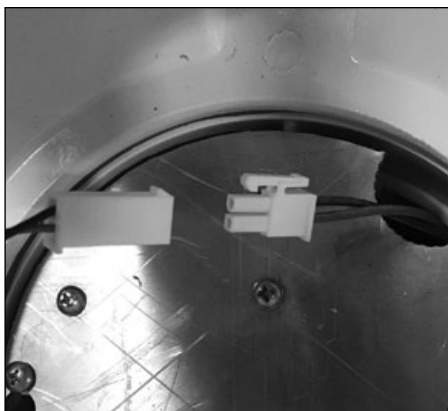


5. Connect quick-disconnect from driver assembly to bezel assembly.




6. Secure bezel assembly with ¼ turn fastener.

0-10V Dimming

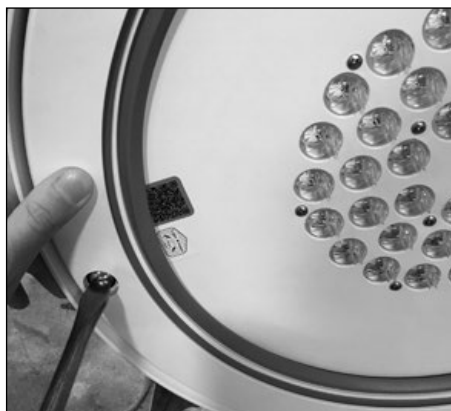

7. Push up on lens frame while tightening screw to secure lens frame.

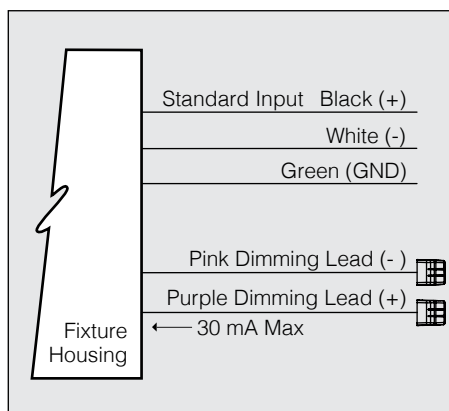

0-10V Dimming: Driver has a 0-10V dimming interface with a dimming range of 10-100%. The driver is compatible with most controls systems including NX Lighting Controls. Note: Not compatible with current sourcing dimmers. Controls compatible via purple and pink dimming leads.

For warranty see: currentlighting.com/kimlighting